




M&P® SHIELD™ 9mm & M&P® SHIELD™ .40 S&W Only

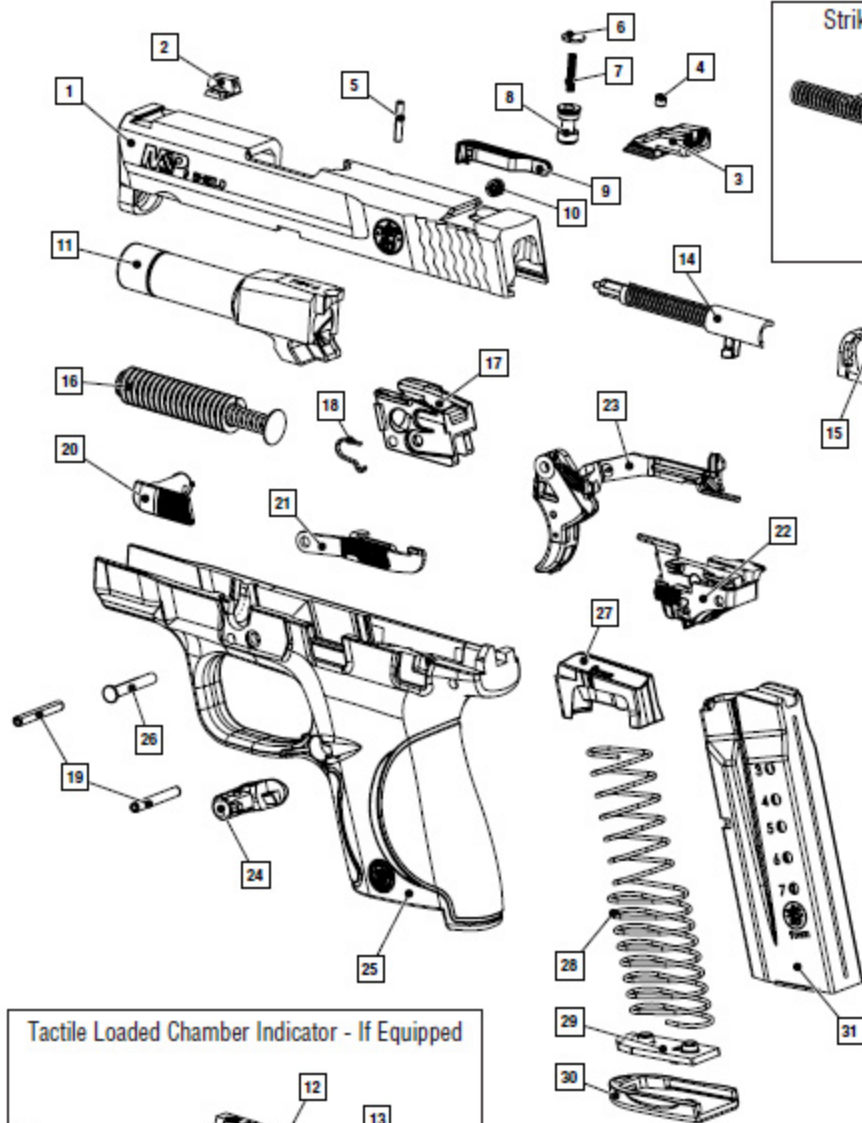

Striker Assembly - Component Parts

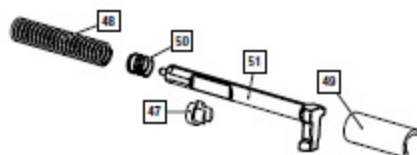

Tactile Loaded Chamber Indicator - If Equipped

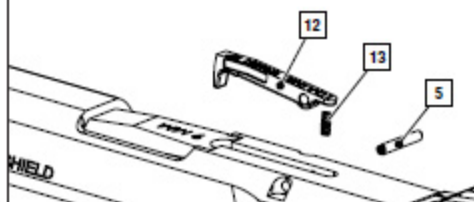

ITAR-CONTROLLED TECHNICAL DATA. EXPORT, RETRANSFER, OR RELEASE CONTRARY TO PROVISIONS OF INTERNATIONAL TRAFFIC IN ARMS REGULATIONS (22 C.F.R. PARTS 120-130) IS PROHIBITED.

M&P® Shield™ Striker (#14 Above) Component Parts List

Item #	Description	Master Part #	M&P9 Shield	M&P 40 Shield
47	Striker Spring Keeper	279760000	x	x
48	Striker Spring	395290000	x	x
49	Striker Guide	277950000	x	x
50	Striker Return Spring	274240000	x	x
51	Striker	395260000	x	x
x = same as master				