


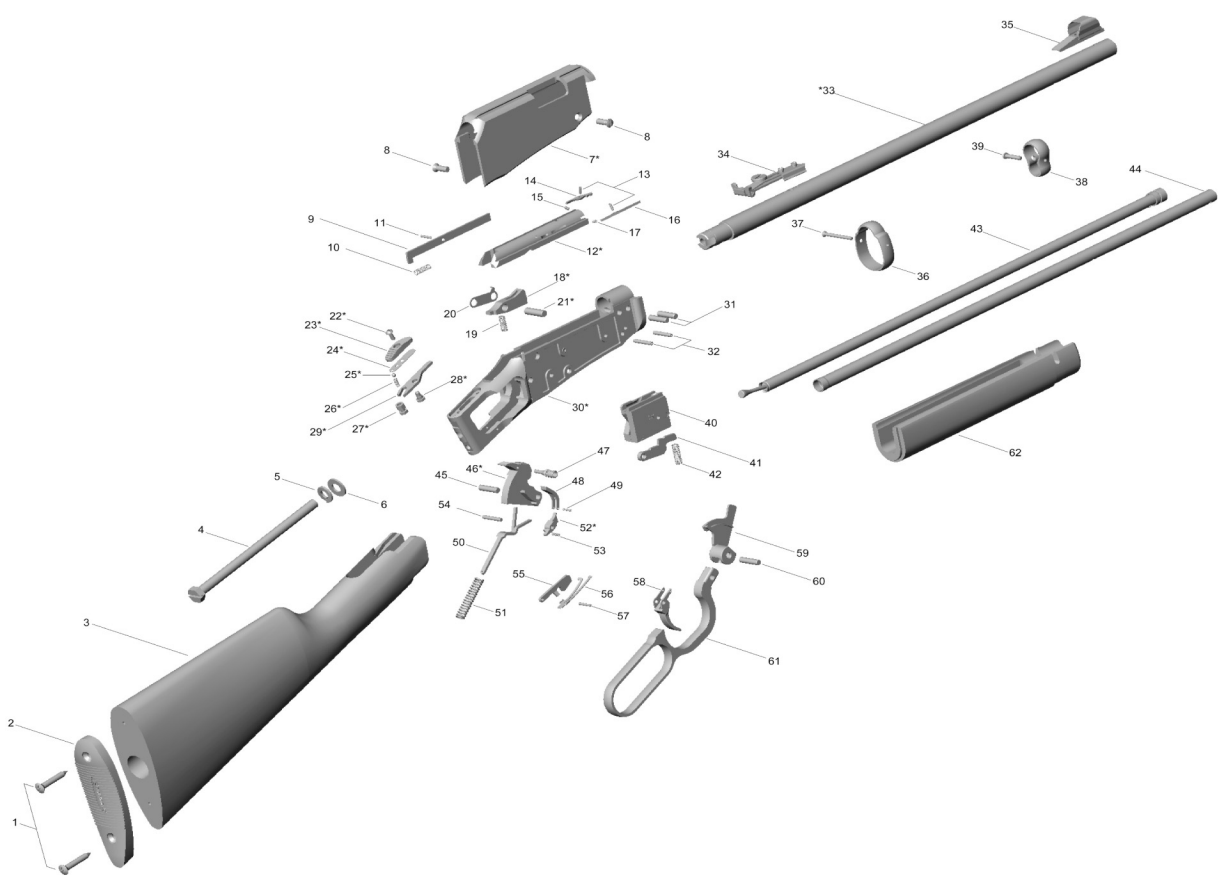

464™ RIMFIRE LEVER ACTION PARTS LIST

ITEM #	DESCRIPTION	ITEM #	DESCRIPTION	ITEM #	DESCRIPTION
1	Recoil Pad Screw (2)	28	*Safety Pivot Screw	55	Trigger Stop
2	Recoil Pad	29	*Safety Arm	56	Trigger Stop Sear Spring
3	Stock	30	*Receiver	57	Trigger Stop Pin
4	Stock Bolt	31	Barrel Retaining Pin (2)	58	Trigger
5	Stock Bolt Lockwasher	32	Magazine Tube Retaining Pin (2)	59	Finger Level Cam
6	Stock Bolt Washer	33	*Barrel	60	Finger Level Pin
7	*Receiver Cover	34	Rear Sight Assembly	61	Finger Level
8	Takedown Screw (2)	35	Front Sight Assembly	62	Forearm
9	Firing Pin	36	Rear Barrel Band		
10	Firing Pin Spring	37	Rear Band Screw		
11	Slotted Spring Pin	38	Front Barrel Band		
12	*Breech Bolt	39	Front Band Screw		
13	Extractor Pin (2)	40	Feed Throat Assembly		
14	Left Extractor	41	Carrier		
15	Left Extractor Spring	42	Carrier Spring		
16	Right Extractor	43	Inner Magazine Tube Assembly		
17	Right Extractor Spring	44	Outer Magazine Tube		
18	*Bolt Lock	45	Finger Level Pin (2)		
19	Bolt Lock Spring	46	*Hammer		
20	Bolt Lock Actuator	47	Hammer Extension		
21	*Bolt Lock Pin	48	Hammer Block		
22	*Safety Button Screw	49	Hammer Block Pin		
23	*Safety Slide	50	Hammer Spring Strut		
24	*Safety Detent Plate	51	Hammer Spring		
25	*Safety Detent Ball	52	*Sear		
26	*Safety Detent Spring	53	Trigger Return Spring		
27	*Safety Detent Actuator	54	Sear Pin		

** Items on parts list are reserved for qualified gunsmiths or the authorized Product Service Center only.*