


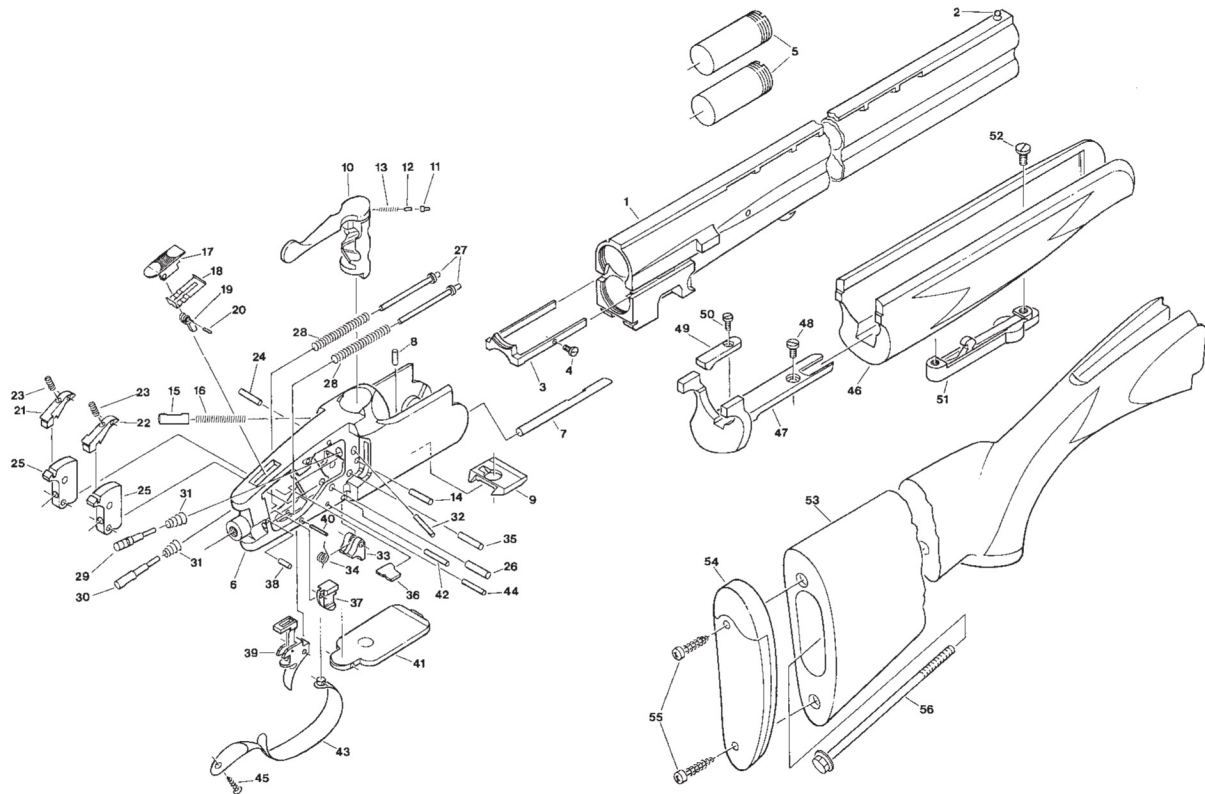

PARTS LIST

PARTS LIST			
ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	BARREL ASSEMBLY	29	FIRING PIN
2	FRONT SIGHT	30	FIRING PIN
3	EXTRACTOR	31	FIRING PIN SPRING
4	EXTRACTOR SCREW	32	PIN
5	CHOKE TUBES	33	COCKING LEVER
6	RECEIVER	34	COCKING LEVER SPRING
7	COCKING ROD	35	PIN
8	PIN	36	RETAINING PLATE
9	BLOCKER PLATE	37	FLOATING BLOCK
10	TOP LEVER	38	FLOATING BLOCK PIN
11	TOP LEVER SCREW	39	TRIGGER
12	TOP LEVER PIN	40	TRIGGER PIN
13	TOP LEVER SPRING	41	RECEIVER UNDER COVER
14	PIN	42	PIN
15	TOP LEVER TUBE	43	TRIGGER GUARD
16	TOP LEVER TUBE SPRING	44	PIN
17	SAFETY AND BARREL SELECTOR	45	TRIGGER GUARD RETAINING PIN
18	SELECTOR PLATE SPRING	46	FOREARM
19	SELECTOR SPRING	47	FOREARM PLATE
20	SELECTOR PIN	48	FOREARM SCREW
21	LEFT INNER TRIGGER	49	FOREARM BOLT
22	RIGHT INNER TRIGGER	50	FOREARM BOLT SCREW
23	HAMMER SPRING	51	LATCH FRAME
24	PIN	52	FOREARM LATCH SCREW
25	HAMMER	53	STOCK
26	PIN	54	RECOIL PAD
27	HAMMER SPRING PIN	55	RECOIL PAD SCREW
28	HAMMER SPRING	56	STOCK BOLT