

RUGER® LC9s® PISTOL

PARTS LIST

Design, prices and specifications subject to change without notice.
SPECIFY MODEL, CALIBER, AND SERIAL NO. WHEN ORDERING
 (See Exploded View on Page 37)

Key No.	Part Name
† 1	Frame Insert
2	Ejector
3	Manual Safety
* 4	Trigger Bar
5	Trigger Pivot
6	Blocker Lifter
* 7	Sear
8	Blocker Lifter Spring
9	Pivot Pin
10	Trigger
11	Inner Trigger
12	Inner Trigger Spring
13	Trigger Assembly Pin
14	Slide Stop
15	Slide Stop Spring
16	Sear Spring
17	Trigger Pin
18	Trigger Spring
19	Manual Safety Spring
20	Magazine Disconnect
21	Magazine Disconnect Spring
* 22	Grip Frame
23	Magazine Latch
24	Magazine Latch Spring
* 25	Slide
26	Rear Sight
27	Striker Blocker
28	Striker
29	Striker Sleeve
30	Striker Spring
31	Striker Keeper
32	Guide Rod Assembly
33	Striker Cover

† The Frame Insert is a serial-numbered component and is defined as a “firearm” by Federal Law and is not sold as a separate component.

* PARTS SO MARKED MUST BE FACTORY FIT

Key No.	Part Name
34	Rear Sight Screw
35	Striker Blocker Spring
36	Blocker Keeper
37	Front Sight
38	Extractor Spring
39	Extractor Plunger
40	Extractor
* 41	Barrel, 9mm
42	Takedown Pin
43	Frame Insert Pin, 2 Req'd
44	Takedown Plate
45	Magazine, Complete, 9mm
46	Magazine Floor Plate, Extended


* PARTS SO MARKED MUST BE FACTORY FIT

RUGER® EC9s® PISTOL SUPPLEMENTAL PARTS LIST & EXPLODED VIEW

Please See Pages 35 - 37 For All Other Parts Lists and
Exploded View Drawings

Key No.	Part Name
* 25	Slide (Includes fixed front & rear sights)

* PARTS SO MARKED MUST BE FACTORY FIT

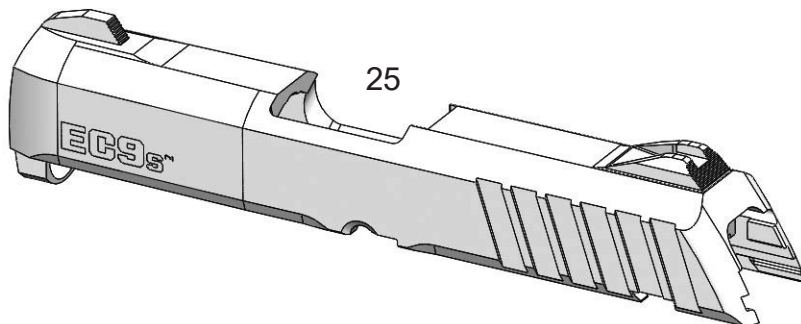

RUGER® LC9s® PISTOL EXPLODED VIEW

