

RUGER® LCP®

PARTS LIST

Design, prices and specifications subject to change without notice.

SPECIFY MODEL, CALIBER, AND SERIAL NO. WHEN ORDERING
(See Exploded View on Page 29)


Key No.	Part Name
* 1	Slide
2	Firing Pin/Extractor Retaining Pin, 2 Req'd
3	Extractor Spring
4	Extractor
5	Firing Pin Spring
6	Firing Pin
7	Guide Rod
8	Recoil Spring, Inner
9	Recoil Spring, Outer
* 10	Barrel
† 11	Frame Insert
12	Trigger
13	Trigger Pin
14	Trigger Pivot
15	Hammer Catch Spring
16	Hammer Pivot Pin
17	Trigger Bar
18	Hold Open
19	Takedown Pin Detent
20	Hold Open Detent
21	Hammer Spring Retainer Pin
22	Hammer
23	Frame
24	Hammer Spring
25	Trigger Spring
26	Hammer Catch
27	Magazine Latch Catch
28	Frame Insert Pin, 2 Req'd
29	Takedown Pin
30	Hammer Catch Pin
31	Magazine Latch Spring
32	Hammer Spring Seat Pin
33	Hammer Spring Seat
34	Magazine, Complete

* PARTS SO MARKED MUST BE FACTORY FIT.

† The Frame Insert is a serial-numbered component and is defined as a "firearm" by Federal Law and is not sold as a separate component.

RUGER® LCP®

EXPLODED VIEW

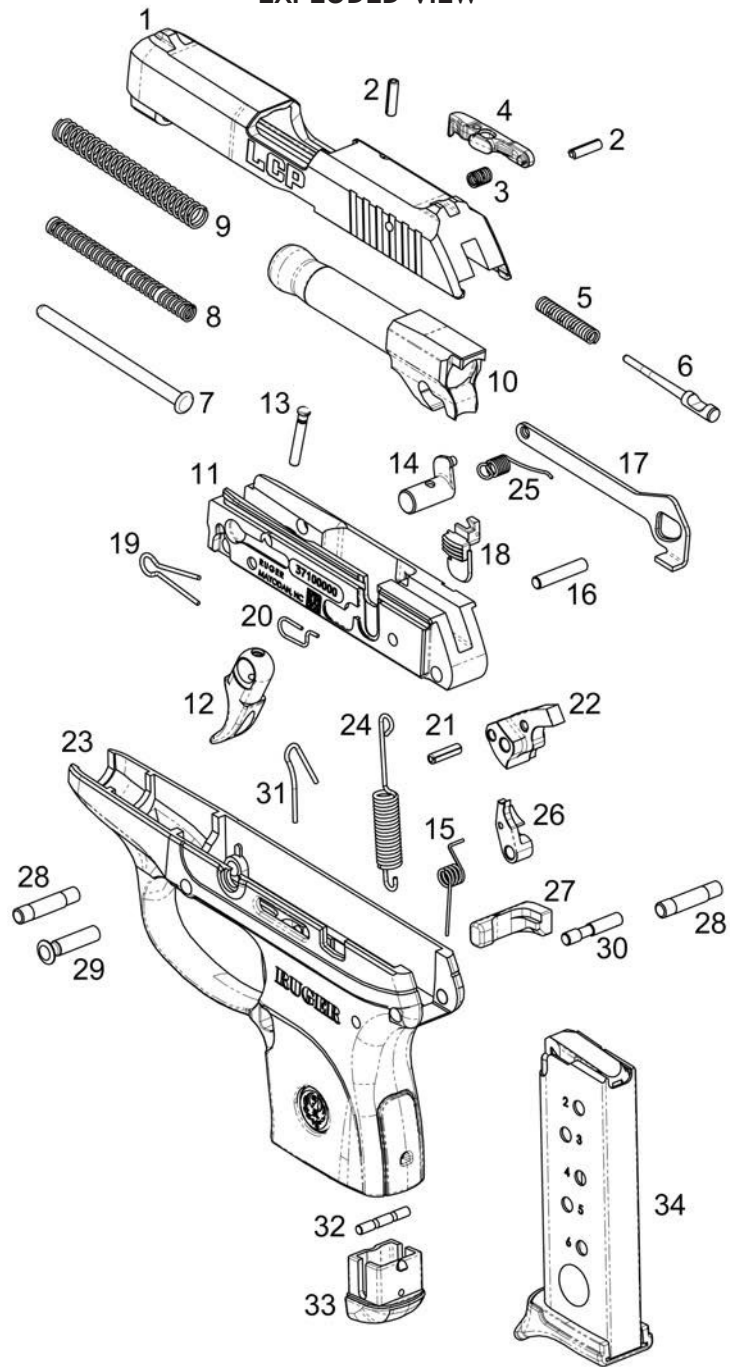

RUGER® LCP® CUSTOM SUPPLEMENTAL PARTS LIST & EXPLODED VIEW

NOTE: The front sight is permanently mounted and should not be removed by the consumer.

Please See Pages 28 & 29
For Additional Parts List and Exploded View Drawing

Key No.	Part Name
* 1	Slide
7	Guide Rod
12	Trigger
* 35	Front Sight
* 36	Front Sight Screw
37	Rear Sight
38	Rear Sight Screw

* Parts so marked must be factory installed.

