


# RASCAL

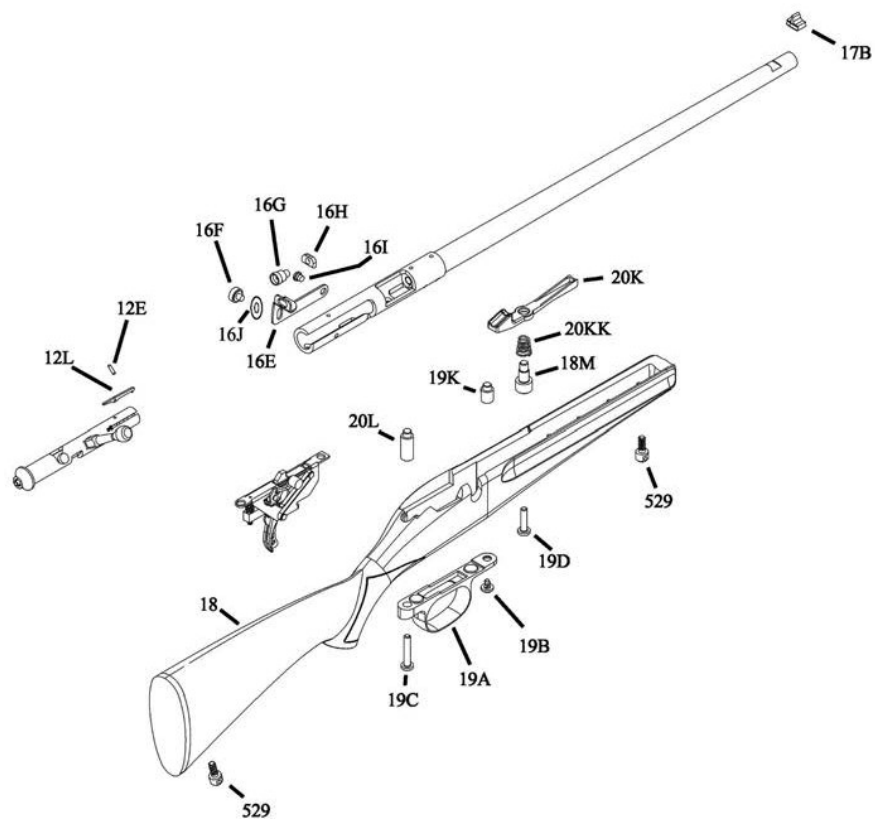

## **RASCAL**

| <b><i>ITEM #</i></b> | <b><i>DESCRIPTION</i></b> |
|----------------------|---------------------------|
|----------------------|---------------------------|

|     |                          |
|-----|--------------------------|
| 12E | Extractor pin            |
| 12L | Extractor                |
| 16E | Sight bracket            |
| 16F | Rear sight locking screw |
| 16H | Aperture nut             |
| 16G | Rear aperture            |
| 16J | Rear sight lock washer   |
| 16I | Rear sight pivot screw   |
| 17B | Front sight blade        |
| 18  | Stock assembly           |

| <b><i>ITEM #</i></b> | <b><i>DESCRIPTION</i></b> |
|----------------------|---------------------------|
|----------------------|---------------------------|

|      |                                         |
|------|-----------------------------------------|
| 18M  | Front stud                              |
| 19A  | Trigger guard                           |
| 19B  | Trigger guard screw                     |
| 19C  | Rear action screw                       |
| 19D  | Front action screw/stock assembly screw |
| 19K  | Stud, action (Rimfire)                  |
| 20K  | Loading platform/feed ramp              |
| 20KK | Feed ramp spring                        |
| 20L  | Rear action screw stud/rear stud        |
| 529  | Swivel studs                            |