



Safe ownership is your responsibility. Please thoroughly read and understand this manual before loading your firearm.

Keep firearms and ammunition away from children. Lock unloaded firearms and ammunition securely in separate locations.

This manual should always accompany your firearm and be transferred with it upon change of ownership. This is your responsibility and may protect you from future liability.

100 Springdale Road
Westfield, MA 01085

INSTRUCTION MANUAL

REVEL LEVER ACTION

WARNING! DO NOT ATTEMPT TO LOAD AND SHOOT YOUR FIREARM UNTIL YOU HAVE THOROUGHLY READ THIS INSTRUCTION MANUAL AND ARE FULLY FAMILIAR WITH ITS CONTENTS

For more information, please visit our web site at www.savagearms.com

Download a QR Code reader app for your Smartphone
then snap this to open Savage Arms' homepage



www.savagearms.com/warranty

Congratulations on the purchase of your new firearm. You are now part of the Savage Arms, Inc. family of quality firearms. With reasonable care, your firearm should deliver years of reliable service.

THIS INSTRUCTION GUIDE IS EXTREMELY IMPORTANT.

The safety warnings and instructions in this guide are very important. By understanding the dangers involved in the use of any firearm and by taking the necessary precautions, you can use your Savage firearm in a safe manner. However, failure to read, understand, and obey any of the warnings may result in serious injury or death to you or others, as well as severe damage to the firearm or other property.

SAFETY FIRST – IT’S YOUR OBLIGATION!

 WARNING

ABOVE ALL – REMEMBER THAT A FIREARM IS A MECHANICAL DEVICE WITHOUT THE ABILITY TO THINK OR ACT ON ITS OWN. IT WILL DO WHAT YOU MAKE IT DO, WHETHER YOUR ACTION IS SAFE OR UNSAFE. IT DOES NOT KNOW THE DIFFERENCE BETWEEN A WISE ACTION OR ONE WHICH WILL PUT SOMEONE’S LIFE OR PROPERTY IN DANGER. THE ONLY SURE WAY IT CAN BE SAFE IS IF YOUR ACTIONS ARE SAFE. IT ONLY TAKES ONE CARELESS MOMENT TO RESULT IN A TRAGEDY THAT YOU WILL HAVE TO LIVE WITH FOR THE REST OF YOUR LIFE.

 WARNING

DO NOT ATTEMPT TO LOAD AND SHOOT YOUR FIREARM UNTIL YOU HAVE THOROUGHLY READ THIS INSTRUCTION GUIDE AND ARE FULLY FAMILIAR WITH ITS CONTENTS.

KNOW HOW TO LOCATE AND OPERATE ANY SAFETY MECHANISMS.

THOROUGHLY CLEAN THE INSIDE OF THE BARREL AND CHAMBER PRIOR TO LOADING WITH AMMUNITION.

WHEN CARRYING A LOADED FIREARM, THE SAFETY MUST ALWAYS BE IN THE FULL SAFE POSITION.

THE ONLY TIME YOU CAN BE ABSOLUTELY CERTAIN THAT A FIREARM CANNOT FIRE IS WHEN THE ACTION IS OPEN AND IT IS COMPLETELY EMPTY OF AMMUNITION.

SECTION 1: SAFETY

YOUR SAFETY OBLIGATIONS.....	3
THE RULES OF SAFE FIREARM HANDLING	3
HAMMER POSITIONS	7
TWO POSITION MANUAL SAFETY.....	9

SECTION 2: AMMUNITION.....10

SECTION 3: BASIC USE10

LOADING.....	10
FIRING.....	13
UNLOADING.....	14
ADJUSTING SIGHTS.....	16

SECTION 4: MAINTENANCE.....17

DELAYED AMMUNITION IGNITION.....	17
MAINTENANCE TIMEFRAME.....	17
TAKEDOWN.....	18
DISASSEMBLY.....	20
REASSEMBLY.....	21
CLEANING.....	22

SECTION 5: PARTS LIST & DIAGRAM.....23

SCOPE & SCOPE MOUNTS.....	23
PARTS LIST.....	24

SECTION 6: STORAGE.....25

SECTION 7: STATEMENT OF LIMITED WARRANTY.....25

RETURNING A FIREARM.....	26
--------------------------	----

For more information, and for expanded instruction guides, please visit www.savagearms.com.

Understanding the dangers presented by the use of any firearm, and taking precautions described in this manual, will help you achieve a high level of safety. On the other hand, your failure to follow the instructions and warnings contained in this manual can result in serious injury or death to you or others, as well as severe damage to the firearm or other property.

Savage Arms, Inc. shall not be responsible for damage to the firearm, physical injury to you or others, or property damage resulting in whole or in part from any of the following: criminal or negligent discharge of the firearm; improper or careless handling; unauthorized modifications or alterations; use of improper, hand-loaded or reloaded ammunition; use of remanufactured ammunition; the failure to properly maintain your firearm, including allowing corrosion build-up, abuse, neglect, or other influences that are beyond our control.

SECTION 1: SAFETY

YOUR SAFETY OBLIGATIONS

WARNING

You must follow all instructions and safety rules in this manual to ensure the safe use of your firearm. Failure to do so, will cause serious personal injury or death to you or others, and cause damage to property.

The first priority of every firearm owner should be safety, regardless of the situation. As a firearm owner, you are accepting a very serious responsibility. Your ability to safely operate a firearm can be the difference between life and death. If you are uncertain about the operation of your firearm for any reason, please contact Savage Arms at 1-800-370-0708 or 413-568-7001 before proceeding with its operation.

There is NO excuse for careless handling of your firearm.

ALWAYS handle a firearm with respect for its potential danger.

This owner's manual is designed to assist you in learning how to properly use and care for your Savage Arms firearm. Only after you are certain that you fully understand this manual and can properly follow its instructions, are you prepared to practice loading and firing your firearm with live ammunition.

Having a firearm in your possession is a serious job; you cannot guess, and you cannot forget. You must know how to use your firearm safely. If you have any doubts about your ability to handle or use this firearm safely, you should seek supervised, professional instruction. Contact your firearms dealer, local law enforcement agency, and/or your local sportsman's club for further information on safe firearm handling.

Certified training is also available through various national firearms related organizations.

Most importantly, ALWAYS follow the rules of safe firearm handling.

THE RULES OF SAFE FIREARM HANDLING

WARNING

The following rules should be followed at all times. They must govern your actions wherever and whenever you are involved with firearms. Please take the time to review and understand these rules. If you do not understand something, please contact Savage Arms or any of the various national firearms related organizations.

1. Always Keep the Muzzle Pointed in a Safe Direction.

This is the most basic safety rule. If everyone handled a firearm so carefully that the muzzle never pointed at something they didn't intend to shoot, there would be virtually no firearm accidents. It's as simple as that, and it's up to you.

Never point your firearm at anything you do not intend to shoot. This is particularly important when loading or unloading a firearm. In the event of a negligent discharge, no injury can occur as long as the muzzle is pointing in a safe direction.

A safe direction means a direction in which a bullet cannot possibly strike anyone, considering possible ricochets and the fact that bullets can penetrate walls and ceilings. The safe direction may be "up" on some occasions or "down" on others, but never at anyone or anything not intended as a target. Even when "dry firing" with an unloaded firearm, you should never point the firearm at an unsafe target.

Make it a habit to know exactly where the muzzle of your firearm is pointing at all times and be sure that you are in control of the direction in which the muzzle is pointing, even if you fall or stumble. This is your responsibility, and only you can control it.

2. Firearms Should be Unloaded When Not Actually in Use.

Firearms should be loaded only when you are in the field or on the target range or shooting area, ready to shoot. When not in use, firearms and ammunition should be secured in a safe place, separate from each other. It is your responsibility to prevent children and unauthorized adults from gaining access to firearms or ammunition.

Whenever you handle a firearm or hand it to someone, always remove the magazine and open the action immediately, and visually check the chamber to be certain it does not contain any ammunition. Always keep the action open when not in use. Never assume a firearm is unloaded — check for yourself! This is considered a mark of an experienced firearm handler!

Never cross a fence, climb a tree, or perform any awkward action with a loaded firearm. While in the field, there will be times when common sense and the basic rules of firearm safety will require you to unload your firearm for maximum safety. Never pull or push a loaded firearm toward yourself or another person. There is never any excuse to carry a loaded firearm in a scabbard, a holster not being worn or a firearm case. When in doubt, unload your firearm!

- Safe storage of a firearm is just as important as safe handling. Never store a firearm loaded. Be sure to keep your firearm in a secure locked place where unauthorized persons and children cannot gain access without your knowledge. Take extra precautions if there are children nearby. Store your firearms in a locked safe or some other location that physically prevents unauthorized persons and children from gaining access.
- Failure to secure a firearm locked where a child or unauthorized person can access it is illegal in some states.
- Ammunition should be stored and locked in a location separate from your firearm. Never leave an unsecured firearm or ammunition in a car, closet, dresser, or under the bed. It is your responsibility to make sure that children and others unfamiliar with

firearms cannot access your firearm and ammunition. Locked storage is also a must to deter the theft of your valuable firearm.

3. Do Not Rely on Your Firearm's Safety.



Treat every firearm as though it can fire at any time. The “safety” on any firearm is a mechanical device which, like any such device, can become inoperable at the worst possible time. Besides, by mistake, the safety may be “off” when you think it is “on.” The safety serves as a supplement to proper firearm handling but cannot possibly serve as a substitute for common sense. You should never handle a firearm carelessly and assume that the firearm won’t fire just because the “safety is on.”

Never touch the trigger on a firearm until you actually intend to shoot. Keep your fingers away from the trigger while loading or unloading. Never press the trigger on any firearm with the safety in the “safe” position or anywhere in between “safe” and “fire.” It is possible that the firearm can fire at any time, or even later when you release the safety, without you ever touching the trigger again.

Never place the safety in between positions, since half-safe is unsafe. Keep the safety fully “on” until you are absolutely ready to fire.

Regardless of the position of the safety, any blow or jar strong enough to actuate the firing mechanism of a firearm can cause it to fire. This can happen even if the trigger is not touched, such as when a firearm is dropped. Never rest a loaded firearm against any object because there is always the possibility that it will be jarred or slide from its position and fall with sufficient force to discharge. The only time you can be absolutely certain that a firearm cannot fire is when the action is open, and it is completely empty. Again, never rely on your firearm’s safety. You and the safe firearm handling procedures you have learned are your firearm’s primary safeties.

4. Be Sure of Your Target and What Is Beyond It.

No one can call a shot back. Once a firearm fires, you have given up all control over where the shot will go or what it will strike. You are responsible for each projectile fired. Don't shoot unless you know exactly what your shot is going to strike. Be sure that your bullet will not injure anyone or anything beyond your target. Firing at a movement or a noise without being absolutely certain of what you are shooting at constitutes disregard for the safety of others. No target is so important that you cannot take the time before you press the trigger to be absolutely certain of your target and where your shot will stop.

Be aware that even a 22 short bullet can travel over 1 1/4 miles and a high velocity cartridge, such as a 30-06, can send its bullet more than 3 miles. Shotgun pellets can travel 500 yards, and shotgun slugs have a range of over half a mile. You should keep in mind how far a bullet will travel if it misses your intended target or ricochets in another direction.

5. Use Proper Ammunition.



You must assume the serious responsibility of using only the correct ammunition for your firearm. Read and heed all warnings, including those that appear in the firearm's owner's manual and on the ammunition boxes.

Using improper or incorrect ammunition can destroy a firearm and cause serious personal injury. It only takes one cartridge of improper caliber or gauge to damage your firearm, and only a moment to check each one as you load it. Be absolutely certain that the ammunition you are using matches the specifications that are contained within the firearm's owner's manual and the manufacturer's markings on the firearm.

Firearms are designed, manufactured and proof tested to standards based upon those of factory loaded ammunition.

Handloaded or reloaded ammunition deviating from pressures generated by factory loads or from component recommendations specified in reputable handloading manuals can be dangerous and can cause severe damage to firearms and serious injury to the shooter.

Savage Arms does not recommend the use of handloads or reloads of any kind.

Ammunition that has become very wet or has been submerged in water should be discarded in a safe manner. Do not spray oil or solvents on ammunition or place ammunition in excessively lubricated firearms. Poor ignition, unsatisfactory performance, or damage to your firearm and harm to yourself or others could result from using such ammunition.

If the sound upon firing is unusually quiet or recoil is too soft, unload and inspect for a bore obstruction. If the sound upon firing is unusually loud or recoil is extreme, unload and inspect the firearm for damage.

Form the habit of examining every cartridge you put into your firearm. Never use damaged or substandard ammunition — the money you save is not worth the risk of possible injury or a damaged firearm.

6. If Your Firearm Fails to Fire When the Trigger is Pressed, Handle with Care.

Occasionally, a cartridge may not fire when the trigger is pressed. If this occurs, keep the muzzle pointed in a safe direction. Keep your face away from the ejection port. Then, carefully open the action, unload the firearm and dispose of the cartridge in a safe way.

Any time there is a cartridge in the chamber, your firearm is loaded and ready to fire even if you've tried to shoot and it did not fire. It could fire at any time, so you must always remember Rule #1 and watch the muzzle!

7. Always Wear Eye and Ear Protection When Shooting.

All shooters and spectators should wear protective shooting glasses and some form of hearing protection while shooting. Exposure to shooting noise can damage hearing, and adequate vision protection is essential. Shooting glasses guard against twigs, falling shot, clay target chips and the rare, ruptured case or firearm malfunction. Wearing eye protection when disassembling and cleaning any firearm will also help prevent the possibility of springs, spring tensioned parts, solvents, or other agents from contacting your eyes. There is a wide variety of eye and ear protectors available. No target shooter, plinker or hunter should ever be without them.

Most rules of shooting safety are intended to protect you and others around you, but this rule is for your protection alone. Furthermore, having your ears and eyes protected will help improve your enjoyment of the shooting sports.

8. Be Sure the Barrel is Clear of Obstructions Before Shooting.

Before you load your firearm, remove the magazine, open the action and be certain that no ammunition is in the chamber.

Be sure the barrel is clear of any obstruction. Even a small bit of mud, snow, excess lubricating oil or grease in the bore can create dangerously increased pressures, causing the barrel to bulge or even burst on firing, which can cause injury or death to the shooter and bystanders. Make it a habit to clean the bore and check for an obstruction with a cleaning rod immediately before you shoot it. If the noise or recoil on firing seems weak or doesn't seem quite "right," cease firing immediately and be sure to check that no obstruction or projectile has become lodged in the barrel.

Placing a smaller gauge or caliber cartridge into a firearm (such as a 20-gauge shell in a 12-gauge shotgun) can result in the smaller cartridge falling into the barrel and acting as a bore obstruction when a cartridge of proper size is fired. This can cause a burst

barrel or worse. This is really a case where "haste makes waste." You can easily avoid this type of accident by paying close attention to each cartridge you insert into your firearm.

9. Do Not Alter or Modify Your Firearm and Have It Serviced Regularly.

Firearms are complicated mechanisms that are designed by experts to function properly in their original condition. Any alteration or change made to a firearm after manufacture can make the firearm dangerous and will void any factory warranty. Do not jeopardize your safety or the safety of others by altering the trigger, safety, or other mechanism of any firearm or allowing unqualified persons to repair or modify a firearm. You'll usually ruin an expensive firearm. Don't do it!

Your firearm is a mechanical device that will not last forever and is subject to wear. As such, it requires periodic inspection, adjustment, and service.

10. Learn the Mechanics and Handling Characteristics of the Firearm You Are Using.

Not all firearms are the same. The method of carrying and handling firearms varies in accordance with the mechanical characteristics of each firearm. Since firearms can be so different, never handle any firearm without first having thoroughly familiarized yourself with the particular type of firearm you are using, the safe firearm handling rules for loading, unloading, carrying, and handling that firearm, and the rules of safe firearm handling in general.

For example, many firearm manufacturers recommend that their firearms always be carried with the hammer down on an empty chamber. This is particularly true for older single-action revolvers but applies equally to some double-action revolvers or semi automatic firearms. You should always read and refer to the owner's manual you received with your firearm, or if you have

misplaced the manual, simply contact Savage Arms at 1-800-370-0708 or 413-568-7001 for a copy.

Having a firearm in your possession is a full-time job. You cannot guess; you cannot forget. You must know how to use, handle, and store your firearm safely. Do not use any firearm without having a complete understanding of its particular characteristics and safe use. There is no such thing as a foolproof firearm.

ALWAYS USE COMMON SENSE!

WARNING

Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead, a substance known to cause birth defects, reproductive harm, cancer, and other serious physical injury. Have adequate ventilation at all times. Wash your hands thoroughly after exposure to your firearm, ammunition or cleaning supplies.

WARNING

Never shoot while intoxicated or on drugs. To effectively follow the rules of safe firearm handling, you must shoot sober. Firearms and alcohol/drugs are a deadly combination. Never consume anything that could impair your judgment or physical coordination when using a firearm.

DANGER

Unload your firearm before installing any locking device.

NOTICE

LOCKING DEVICES. This firearm was originally sold with a key operated locking device. Never install the locking device inside the trigger guard or in a way that makes it possible for the locking

device to press the trigger. Do not leave the keys in the lock. To maximize effectiveness and reduce the chances of malfunction or damage to a firearm, refer to the locking device manufacturer's instructions for installation and removal.

DANGER

Failure to follow any of these safety rules may cause personal injury or death to the shooter or bystander and damage to property. Do not use a firearm until you fully understand and practice the rules of safe firearm handling. If you have any questions about the safe use of a Savage Arms firearm, please contact Savage Arms.

WARNING

Do not alter or change any firing components – firing pin, hammer, trigger, mainspring, and other fire control parts. These are specifically designed to function properly with each other from the factory.

HAMMER POSITIONS

WARNING

There are three positions for the hammer on the Savage Revel lever Action.

FIRE position – FIGURE 1

HALF COCKED position – FIGURE 2

FULLY COCKED – READY TO FIRE position - FIGURE 3

The HALF-COCKED position is designed as a notch in the hammer and should not allow the hammer to fall if the trigger is

pressed. This position should not be treated as an outright safety on the firearm.

To lower your hammer from the FULLY COCKED - READY TO FIRE position, keeping the firearm pointed in a safe direction and your finger off the trigger, press the hammer back slightly. While controlling the hammer, press the trigger slowly. Carefully allow the hammer to move forward approximately $\frac{1}{8}$ " and immediately remove your finger from the trigger and out of the trigger guard. Allow the hammer to rotate forward into the HALF-COCKED position. This function must be completed with the manual safety in the READY TO FIRE position. Extreme care must be taken during this step-in order to avoid a possible negligent discharge. The manual safety should now be immediately placed into the FULL SAFE position.

WARNING

Be aware that if there is a cartridge in the chamber and the hammer is released before it is at rest, the firearm may fire.

The 3 Hammer positions:

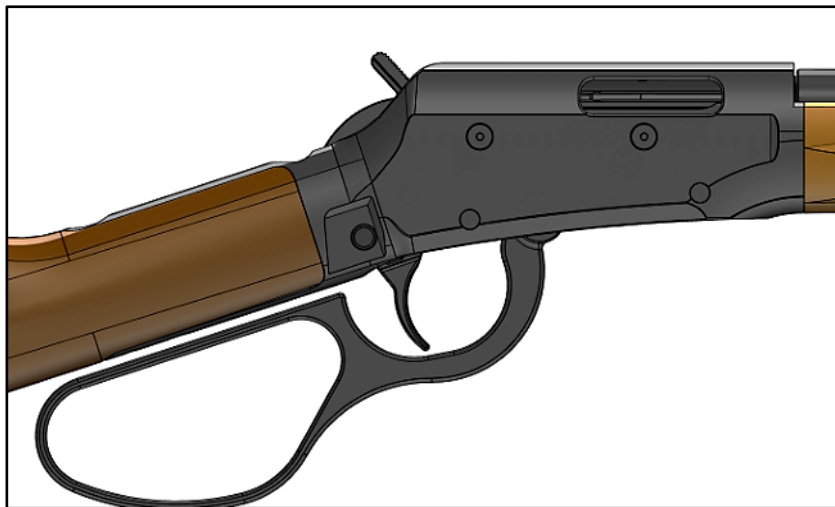


FIGURE 1 – Fired Position

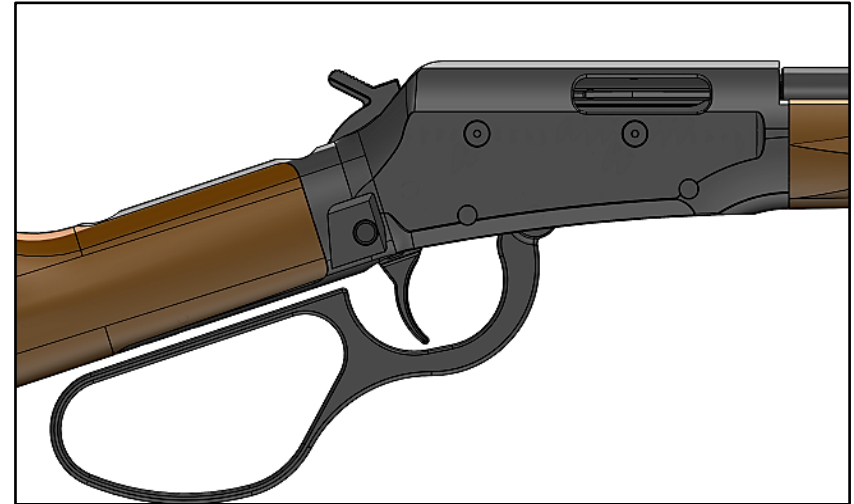


FIGURE 2 – Half Cocked

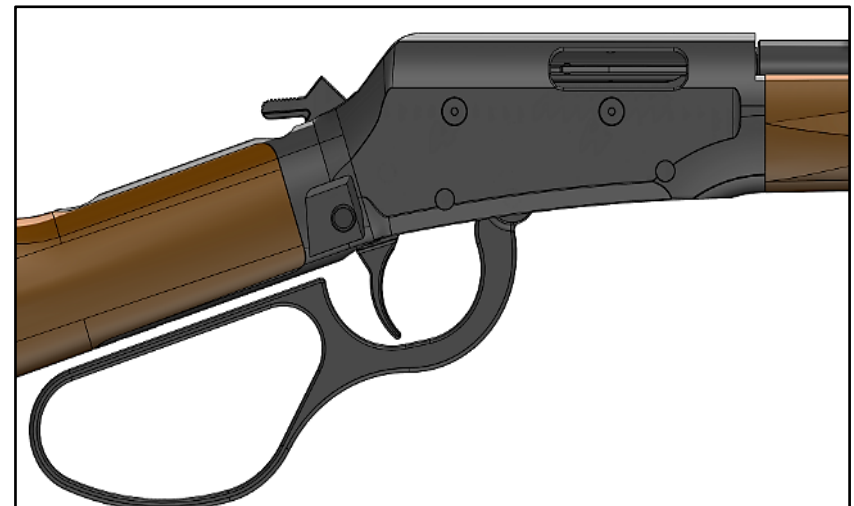


FIGURE 3 – Fully Cocked – READY TO FIRE

Opening the finger lever will reset the action back to FULLY COCKED – READY TO FIRE position.

TWO POSITION MANUAL SAFETY

⚠ DANGER

Negligent discharge can cause severe injury or death. Always keep the safety on and your finger off the trigger until you have clearly identified your target, lined up your sights on the intended target and verified that the backstop is clear. Always store and transport your firearm: (1) with the magazine and chamber UNLOADED; (2) with the child safety lock properly installed; and (3) with the safety in the FULL SAFE position - FIGURE 4.

Your Revel lever action is equipped with a two-position manual safety button. Be sure to fully understand how it operates as outlined below.

For the FULL SAFE position, the manual safety button must be pressed fully towards the shooter's right. There will be no red visible on the manual safety button in this position - FIGURE 4.

For the SAFETY OFF – READY TO FIRE position, the manual safety button must be pressed fully towards the shooter's left. There will be a red band visible in this position - FIGURE 5.

DO NOT PLACE THE SAFETY BUTTON ANYWHERE BETWEEN FULL SAFE AND READY TO FIRE.

⚠ WARNING

Anytime the safety button is in the READY TO FIRE position with ammunition loaded into the chamber, the firearm is capable of firing – intentionally or not. The only way to be completely safe is to ensure that there is no ammunition in the chamber or magazine.

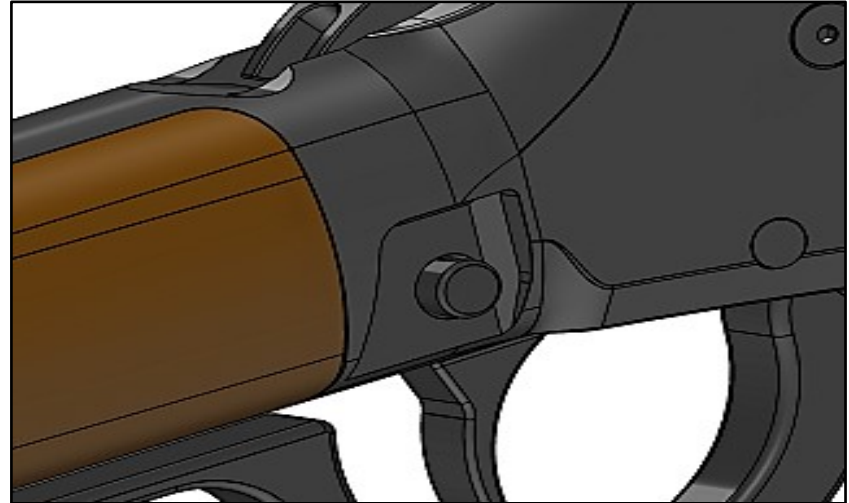


FIGURE 4 – FULL SAFE

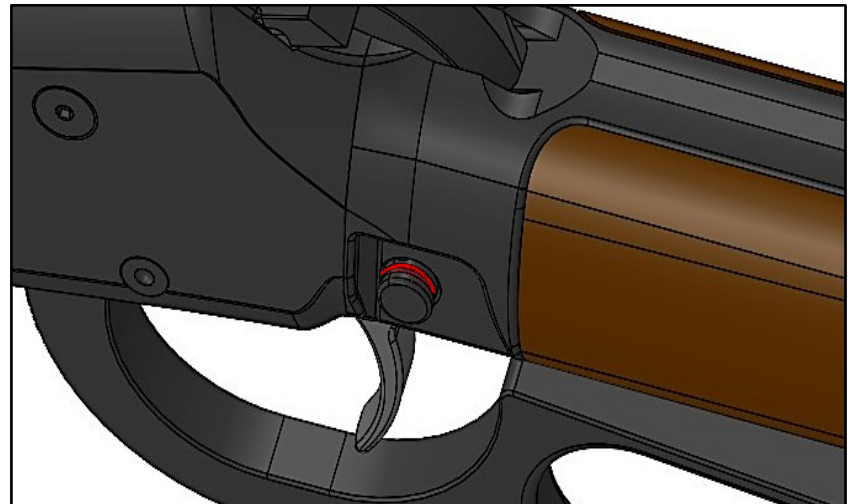


FIGURE 5 – READY TO FIRE

SECTION 2: AMMUNITION

WARNING

Use only the correct ammunition that matches what is marked on the barrel. The use of reloads, handloads, military surplus or any other commercial/non-commercial ammunition not manufactured to SAAMI (Sporting Arms and Ammunition Manufacturer's Institute, Inc.) specifications will void the warranty and can cause damage to your firearm, injury, or death. Be sure that any ammunition loaded into the firearm is in good, serviceable condition.

- Always inspect your ammunition before using it. Never use damaged, corroded/stained, old, or questionable ammunition. Never use ammunition that has visible cracking. The money you save is not worth the risk of possible injury or a damaged firearm.
- If you hear a weak or unusual sound or if the bullet does not exit the barrel when firing, STOP immediately. Put the safety on, unload the firearm, disassemble (as detailed in SECTION 4), and check and clean the barrel from the breech whenever possible for any obstructions.
- Use only ammunition specifically designated for the specified model caliber.
- Use only new ammunition manufactured to SAAMI specification. Any other ammunition can cause firearm damage or personal injury and will void the warranty.
- Routinely inspect the case head, rim, and body of fired brass for any signs of unusual bulging or rupturing. If you find anything out of the ordinary, discontinue use immediately and call: Savage Arms at [1-800-370-0708](tel:1-800-370-0708) or [413-568-7001](tel:413-568-7001) (8:00 AM to 5:00 PM Eastern Time) or a qualified gunsmith.

For best performance, thoroughly clean and lightly lubricate the inside of the receiver, barrel, and chamber before loading with ammunition. Performance may vary based on brand/type of ammunition, individual characteristics of the firearm, and/or shooting conditions. Bullet specifications and trajectories are available directly from the ammunition manufacturer.

SECTION 3: BASIC USE

LOADING

WARNING

Negligent discharge can cause serious injury or death. Never load or bring a loaded firearm into a car, house, or structure. Always keep the safety on and your finger off the trigger until you have clearly identified your target, lined up your sights on the intended target and verified that the backstop is clear. Once the tubular magazine is loaded with ammunition, close the lever, move the hammer into the HALF-COCKED position and place the manual safety into the FULL SAFE position - FIGURE 6 & FIGURE 7.

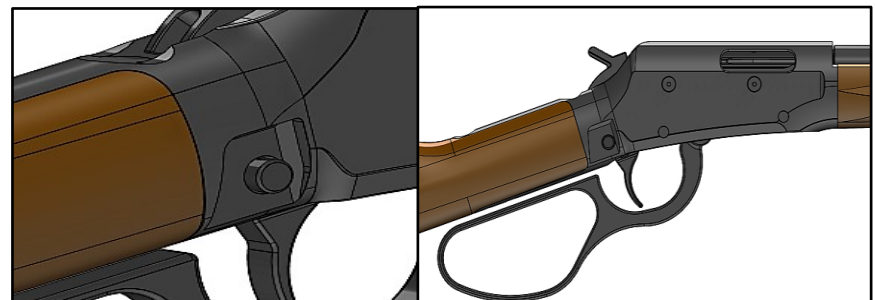


FIGURE 6

FIGURE 7

WARNING

A barrel obstruction can cause excessive pressure upon firing and result in firearm damage or personal injury to you or a bystander. Before loading and with the manual safety on FULL SAFE, - FIGURE 6 - always inspect the barrel visually and with a cleaning rod for any sign of snow, mud, sticks, brush, leaves, debris, cleaning brushes, bullets, or other obstructions. Never fire with the muzzle underwater or otherwise obstructed.

Revel lever action models are constructed with a tubular magazine.

1. Always wear eye protection while loading your firearm. Be sure to keep the muzzle pointed in a safe direction.
2. Prior to loading with the muzzle pointed in a safe direction and fingers away from the trigger, move the safety into the READY TO FIRE position.
3. Place all of your fingers into the finger loop and open the lever to extract and eject any cartridge that may be in the chamber.
4. Immediately place the manual safety into the FULL SAFE position – FIGURE 6.
5. Visually check that there is no remaining ammunition, debris or obstructions in the barrel or chamber.

WARNING

Be sure to keep your hands, fingers, and any other body parts away from the front of the muzzle during loading or unloading the magazine tube.

6. With the lever still open and your fingers away from the trigger, unlock the magazine tube, by twisting the end cap counterclockwise, and fully remove the magazine inner tube - FIGURE 8.

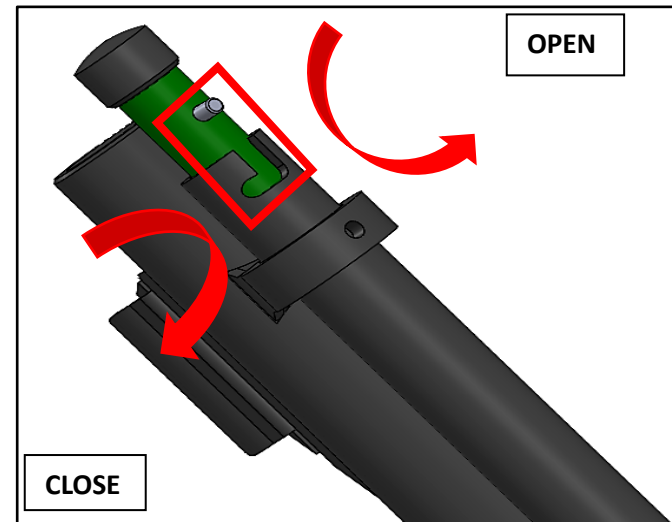


FIGURE 8

7. Be prepared to catch any live rounds in a suitable container so they do not drop onto the ground. Keeping the firearm pointed in a safe direction and your fingers away from the trigger, tilt the firearm downward and give the firearm a good “shake”. This will help to ensure that no ammunition is housed in the magazine tube.
8. Once you are certain that there is no ammunition in the magazine tube, with all your fingers inside the finger loop, close the lever.
9. With all your fingers inside of the finger loop, fully open and close the lever several times to ensure that there is no unfired ammunition in the firearm.

10. Keeping the firearm pointed in a safe direction and your fingers away from the trigger, tilt the muzzle upwards (not straight up).
11. With the lever in the open position, insert cartridges into the tubular magazine, with the cartridge rim edge down. Load cartridges until the cartridges stack up to the magazine cutout – FIGURE 9. DO NOT EXCEED THE MAGAZINE CAPACITY.

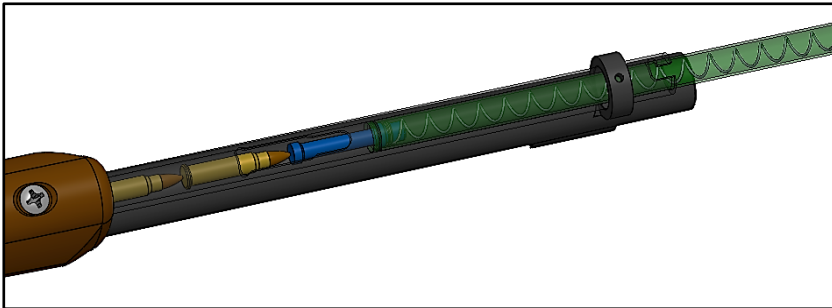


FIGURE 9

12. Once loaded, slide the inner tubular magazine back into the outer magazine tube. Some resistance is normal, this is from the follower spring. Press the inner magazine tube down until it is fully seated. Once the inner magazine tube is fully seated, twist the end cap clockwise to lock it back into place - FIGURE 8.
13. Place all of your fingers into the finger loop and close the lever.
14. Move the manual safety into the READY TO FIRE position.
15. With all of your fingers in the finger loop and away from the trigger, press back on the hammer slightly.
16. While controlling the hammer, with one finger pressing the trigger slowly, carefully allow the hammer to move forward 1/8" and immediately remove your finger from the trigger and out of the trigger guard.
17. While still controlling the hammer, allow it to rotate forward to the HALF-COCKED position – FIGURE 7.
18. Immediately move the manual safety into the FULL SAFE position – FIGURE 6.

! WARNING

At this point, the magazine tube is loaded with ammunition. Be very careful not to operate the lever as that may load a live round into the chamber.

! WARNING

Never load a firearm until you are on target and ready to shoot. Keep your finger off the trigger and out of the trigger guard until you are ready to fire. When actioning the lever, keep fingers in the finger lever, not in the trigger guard. Once the firearm is loaded and closed it is capable of firing. Always keep the muzzle pointed in a safe direction.

! WARNING

DO NOT BLOCK OR PLACE HANDS OR OTHER BODY PARTS OVER THE MUZZLE DURING LOADING OR UNLOADING.

! WARNING

BE SURE TO ONLY USE THE AMMUNITION THAT MATCHES EXACTLY WHAT IS MARKED ON YOUR FIREARM.

! WARNING

THE FIREARM MAY FIRE IF IT IS DROPPED OR STRUCK. IF DROPPED OR DAMAGED, THE FIREARM SHOULD BE INSPECTED PRIOR TO NEXT USE.

TO FIRE / OPERATE

! WARNING

Although rare, ricochets, case failures and gas escapement can occur and cause serious eye or ear injury without proper protection. Always keep the muzzle pointed in a safe direction.

! WARNING

Do not shoot with a missing, broken or altered component (e.g., ACTION SCREWS, EXTRACTOR). Doing so can affect the safe and proper function of your firearm, and result in personal injury and firearm damage.

! WARNING

Always keep the safety on and your finger off the trigger until you have clearly identified your target, lined up your sights on the intended target and verified that the backstop is clear.

! CAUTION

When firing, always keep your hand away from the magazine, ejection port and on the stock at all times. Moving parts, gas or other debris can escape and cause burns or cuts during normal operation or in the unlikely event of a case failure.

! CAUTION

Shooting a firearm with a right-sided ejection port, left-handed (or a firearm with a left-sided ejection port, right-handed) will put your face in the path of the forcefully ejected case, as well as any hot gases, sparks or particles that may result from firing.

1. Always wear proper eye and ear protection while shooting.

2. Pull the firearm STOCK firmly into your shoulder. After confirming your target and a safe backstop, move the safety to the SAFETY OFF– READY TO FIRE position - FIGURE 10.

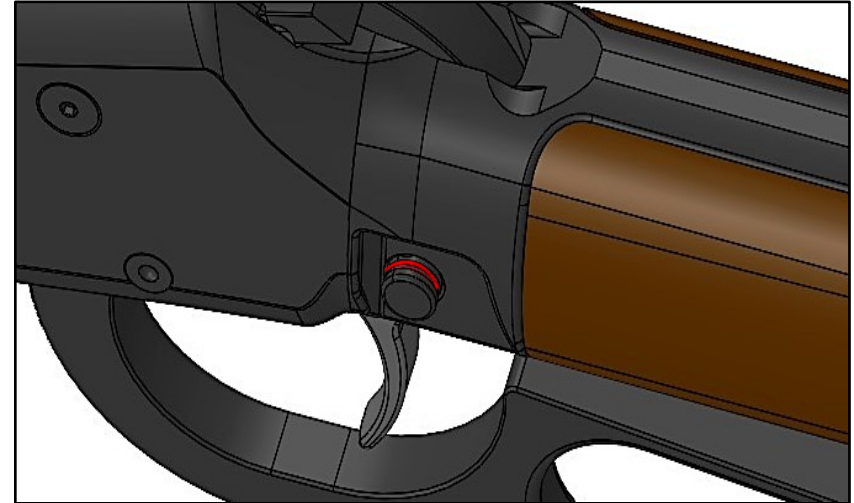


FIGURE 10

3. With all your fingers inside the finger lever, swing the lever fully open and pull it back to the closed position to load a round into the chamber. This action will load a live round from the magazine tube and into the chamber. Your fingers must always remain inside the finger lever and outside of the trigger guard until on target and ready to fire.

! CAUTION

The chamber is now loaded with live ammunition. The hammer is in the FULLY COCKED – READY TO FIRE position and the safety is in the READY TO FIRE position. The firearm will fire if the trigger is pressed.

4. When you are on target and ready to fire, place your finger in the TRIGGER GUARD. Press rearward on the TRIGGER slowly in a controlled manner.
5. To extract and eject the spent shell, place all of your fingers inside the finger lever and swing the finger lever open (fully downward) to eject the cartridge.

If you wish to continue firing, repeat steps 3 – 5. If you are finished firing, follow the unloading instructions in Section 3.

IF THE TUBULAR MAGAZINE IS LOADED, WHEN THE LEVER IS ACTIONED, A CARTRIDGE WILL BE LOADED INTO THE CHAMBER. KEEP YOUR FINGER OFF THE TRIGGER AND OUT OF THE TRIGGER GUARD UNTIL READY TO FIRE.

6. If firing is complete, follow the unloading instructions in Section 3. Ensure the chamber and magazine are clear of ammunition. Return the hammer to the HALF-COCKED position and the manual safety to the FULL SAFE position - FIGURE 11 & FIGURE 12.

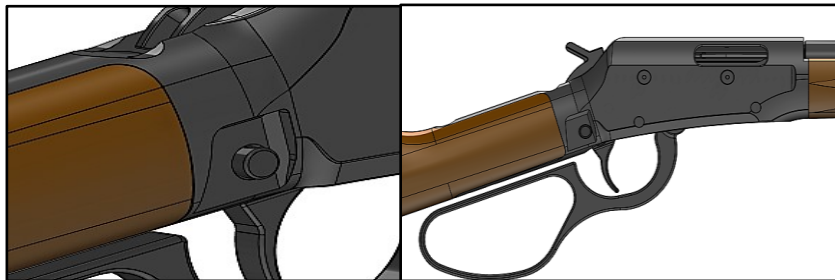


FIGURE 11

FIGURE 12

Follow instructions in SECTION 1 to move the hammer back to the HALF-COCKED position. If you experience difficulty with cycling, see SECTION 4: Maintenance.

WARNING

Never assume a MAGAZINE is empty, even if you hear a 'click' when the trigger is pressed.

WARNING

If a cartridge fails to fire after pressing the trigger, while keeping the muzzle in a safe direction, place the manual safety into the FULL SAFE position and wait 30 seconds. Follow the UNLOADING instructions to remove the cartridge.

UNLOADING

WARNING

Make sure the hammer is in the HALF-COCKED position and the manual safety is in the FULL SAFE position – FIGURE 13 & FIGURE 14. Keep the muzzle pointed in a safe direction and your finger off the trigger while unloading, at all times.

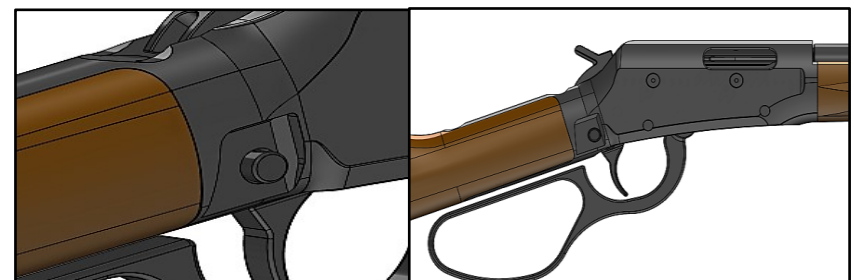


FIGURE 13

FIGURE 14

1. Always wear proper eye protection while unloading your firearm. Always keep the muzzle pointed in a safe direction. With the firearm pointed in a safe direction and all your fingers inside the finger lever, move the safety to the READY TO FIRE

position. With the utmost care to not touch the trigger, open the lever. This should extract and eject any cartridge that may be in the chamber.

2. Leaving the lever open, press the safety to the FULL SAFE position - FIGURE 13. Visibly and physically check to ensure that the chamber is clear of ammunition.

WARNING

Be sure to keep your hands, fingers, and any other body parts away from the front of the muzzle during loading or unloading the magazine tube.

3. With the lever remaining open and your fingers away from the trigger (and out of the trigger guard), unlock the inner magazine tube by twisting counterclockwise to open the end cap of the magazine tube and pull the inner tube out - FIGURE 15.

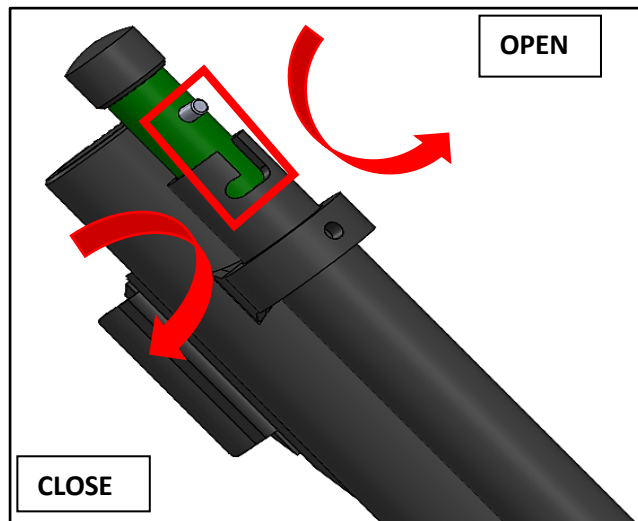


FIGURE 15

4. Be prepared to catch any live rounds in a suitable container so they do not drop onto the ground. Keeping the firearm pointed in a safe direction and your fingers away from the trigger, tilt the firearm downward and give the firearm a good “shake”. This will help to ensure that no ammunition is housed in the magazine tube. Ensure the tube is empty, and free of debris.
5. With the safety still in the SAFE position, and once you are certain that there is no ammunition in the magazine tube, keep your fingers and other objects away from the trigger, place all of your fingers inside the finger loop and close the lever.
6. With all of your fingers inside of the finger loop, fully open and close the lever several times to ensure that there is no unfired ammunition in the firearm.
7. Visibly check the top of the chamber and feed block/loading port to ensure that there is no ammunition lodged inside FIGURE 16.

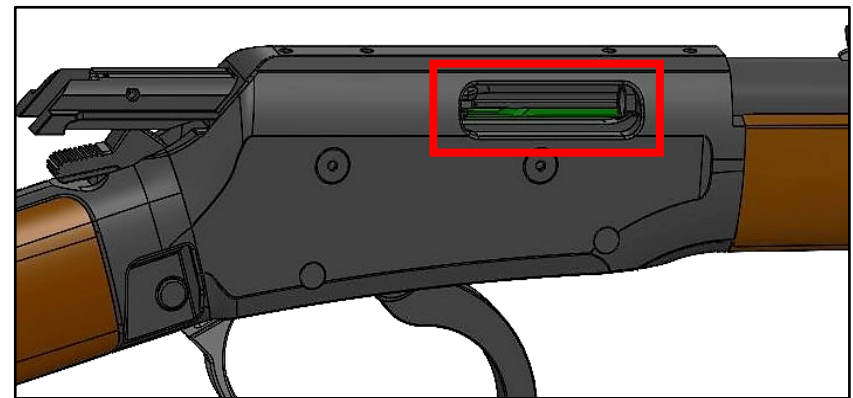


FIGURE 16

8. When you are certain that there is no ammunition in the firearm, close the lever and move the hammer into the HALF-COCKED position and move the manual safety into the FULL SAFE position as described in Section 1.

9. Ensure that the follower is visible at the end of the inner magazine tube and that no ammunition has become lodged in the inner magazine tube FIGURE 17.

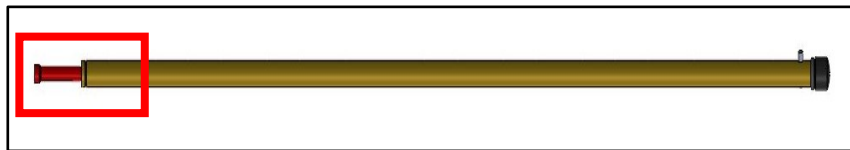


FIGURE 17

10. Re-insert the inner tube into the outer magazine tube. Once the inner magazine tube is seated fully, re-tighten the end cap by twisting clockwise - FIGURE 15.
11. Move the manual safety to the READY TO FIRE position. Keeping your fingers and other objects away from the trigger, place all of your fingers inside the finger loop. Operate the finger lever open and closed several times to ensure any ammunition has been cleared from the firearm.
12. Inspect the chamber and the feed mechanism to confirm it is empty.
13. Repeat steps 11 and 12 several times to confirm the chamber and magazine tube are clear of ammunition.
14. Once you are certain that there is no ammunition in the firearm, close the lever. Move the hammer to the HALF-COCKED position and the manual safety to the FULL SAFE position.

PROVE it is empty and SAFE.

Point in safe direction,

Remove all ammunition,

Observe the chamber,

Verify the feeding path is clear,

Examine the bore, (if needed use a cleaning rod)

WARNING

Always carry your Revel with no ammunition in the chamber, with the hammer in the HALF-COCKED position and the manual safety in the FULL SAFE position.

ADJUSTING SIGHTS

WARNING

Ensure that your firearm is clear of ammunition before adjusting your sights. Ensure that the hammer is in the HALF-COCKED position and that the manual safety is in the FULL SAFE position – FIGURE 18 & FIGURE 19. Keep the muzzle pointed in a safe direction and your finger off the trigger while adjusting the sights.

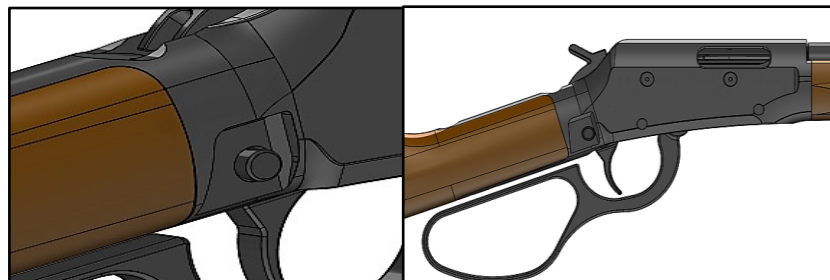


FIGURE 18

FIGURE 19

The rear sight can be adjusted for elevation by carefully lifting the sight and moving the elevator forward or backward. To adjust for windage, right or left, lightly tap the side of the sight with a non-marring punch and mallet in the desired direction at the dovetail. Ensure to make slight adjustments at a time – FIGURE 20.

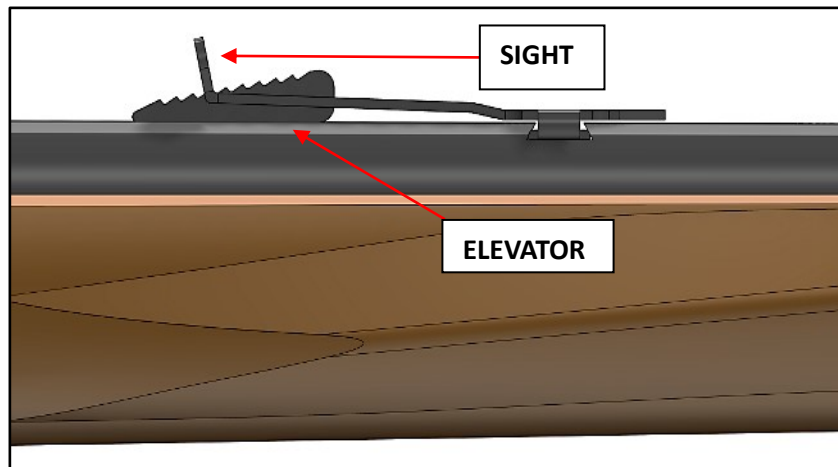


FIGURE 20

SECTION 4: MAINTENANCE

! WARNING

Ensure the firearm is clear of ammunition, the hammer is in the HALF-COCKED position and the safety is in the FULL SAFE position before disassembling or cleaning in any way – FIGURE 21 & FIGURE 22. Never attempt to disassemble, clean, or oil a loaded firearm. Look and feel! Be sure the chamber and magazine are completely empty – do not assume!

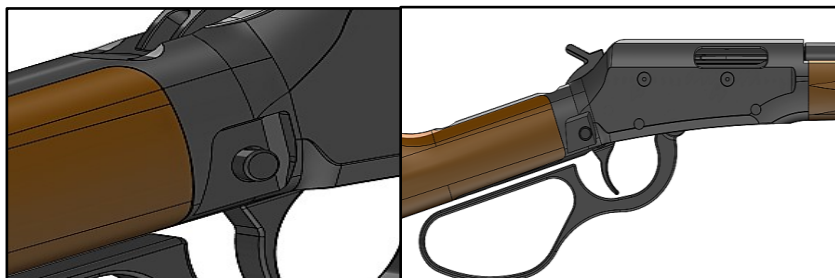


FIGURE 21

FIGURE 22

! WARNING

Do not disassemble beyond what is recommended below. Doing so can damage or disable critical safety features or interfere with the safe operation of your firearm and cause personal injury and firearm damage.

! WARNING

Bolt assemblies and other parts are specifically matched to your firearm. Interchanging parts from other firearms can cause serious injury or firearm damage. To avoid mixing components, disassemble only one firearm at a time.

DELAYED AMMUNITION IGNITION

! WARNING

If your firearm gives any indication that it is not performing properly, fails to discharge a cartridge, there is a muffled sound, or the operation of the firearm has changed, stop firing immediately. If a cartridge fails to fire, wait thirty (30) seconds while keeping the muzzle pointed in a safe direction.

MAINTENANCE TIMEFRAME

! WARNING

Rimfire cartridges can leave unburnt powder, soot, bullet lube, and other contaminants (to name a few) in the receiver, chamber, and barrel, causing unreliable function. In addition, like any mechanical device your firearm will not last forever and is subject to wear. When something does not sound, feel, or look right, seek the advice of a professional gunsmith immediately. Never take a

chance. As with any precision tuned mechanical device, periodic inspection/maintenance is required – and your responsibility. It is difficult to establish a time period or number of rounds as the basis for when a firearm should be examined, cleaned, and thoroughly inspected.

Different shooting conditions, weather patterns, and types of ammunition, to list a few, all play a significant role in answering the questions ‘when’ and ‘how often.’ As a general rule, ‘more often’ is much safer than ‘not enough.’ We recommend performing these basic procedures WITH AN UNLOADED FIREARM before every shooting session and cleaning after every use.

- Function the action making sure that it cycles the BOLT without binding.
- Check the outer surface of the barrel, running your fingers gently down the length, feeling for any bulges or signs of damage.
- Inspect the receiver and bolt face for signs of damage, excessive wear, excessive firing residue, or missing components.
- Check the scope rings and bases for tightness.
- Be sure that all screws and detent pins are tight prior to each shooting session.
- Ensure the safety operates properly as designed.

WHO SHOULD DO THE CHECKING: As the owner – or user – it is your primary responsibility to ensure the firearm is safe prior to using it. Although we know its condition when it leaves the factory, we have no control or insight as to what has or has not been done once it leaves our hands.

After reading and understanding this INSTRUCTION MANUAL – and prior to loading with live ammunition - you should be very familiar and capable of handling the items noted above. In depth mechanical issues or questions as well as periodic examinations should be referred to a qualified gunsmith or Savage Arms Service Department. Mechanical devices will by the nature of their design, wear and as such may require very specific adjustments. Placed in the wrong hands and improperly done, you may be responsible for an injury or even death of the shooter or bystander.

TAKEDOWN

CAUTION

Parts are under tension. Keep your fingers and eyes away from springs and moving parts and always wear eye protection during disassembly and cleaning. Keep fingers clear and aware of the lever and other parts during disassembly/reassembly to avoid pinching or other injury.

WARNING

Be sure the SAFETY stays in the FULL SAFE position to prevent the hammer from snapping forward during the disassembly/assembly process.

**DO NOT MOVE THE MANUAL SAFETY TO OFF SAFE/READY TO FIRE WHEN THE TWO HALVES ARE SEPERATED.
DO NOT ATTEMPT TO PRESS THE TRIGGER WHILE THE TWO HALVES ARE SEPERATED.**

Always ensure the firearm is not loaded when disassembling in any way.

Your Revel lever action model is designed to takedown for easier transport and carry – FIGURE 23 & FIGURE 24.

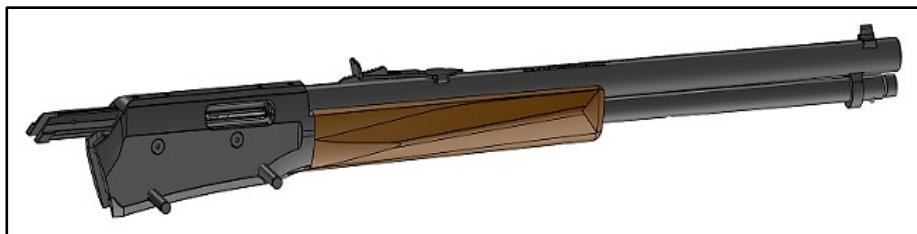


FIGURE 23 – Upper half assembly

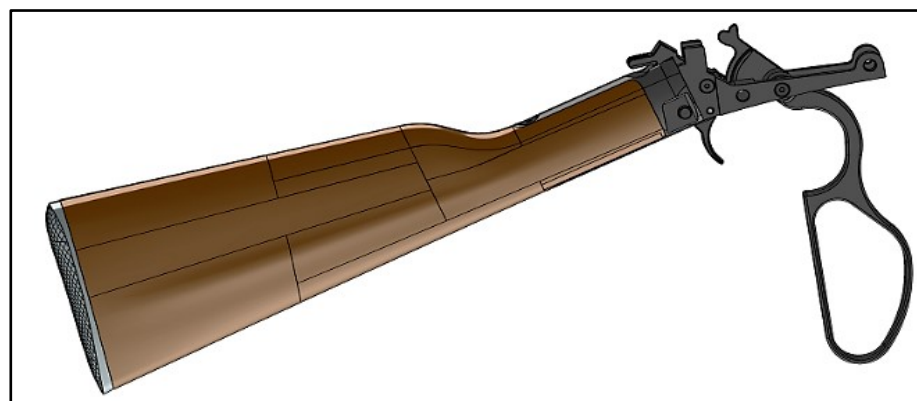


FIGURE 24 – Lower half assembly

1. Always wear eye protection while completing any disassembly or reassembly of your firearm. Ensure that the firearm is clear of ammunition before completing any disassembly or reassembly of your firearm as covered in Section 3.
2. While keeping the firearm pointed in a safe direction, move the manual safety into the READY TO FIRE position. With all of your fingers inside the finger loop and away from the trigger, fully open the finger lever. Ensure that the chamber, magazine, and entire firearm is clear of ammunition.

3. Place the manual safety into the FULL SAFE position. Be sure to keep the lever open and the manual safety in the FULL SAFE position during disassembly and reassembly.
4. With the lever fully open, locate and press in on the two takedown pins on the cover to the right until they come out as far as they will go. The takedown pins are captive and cannot be fully removed – FIGURE 25.

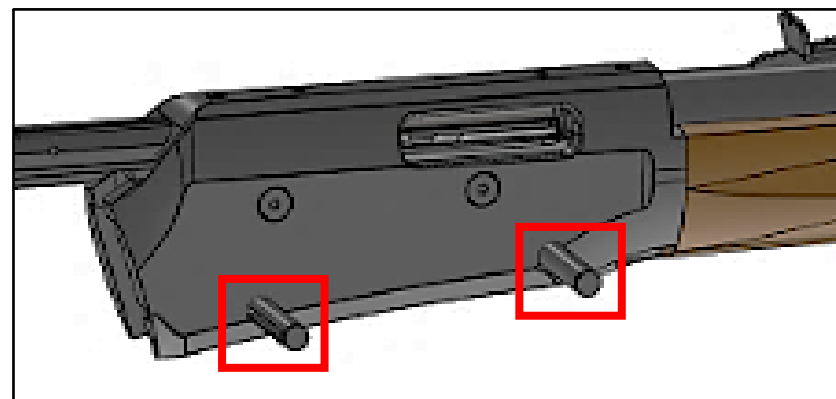


FIGURE 25

5. Pull the lower and upper halves in the opposite directions. The firearm is now separated into upper and lower halves - FIGURE 23 & FIGURE 24.

For transport or storing, stop disassembling at this point.

6. To reattach the two halves, first ensure that the manual safety is still in the FULL SAFE position and that the hammer is in the FULLY COCKED position. The finger lever must be in the fully open position.
7. Ensure that the bolt is protruding out of the rear of the upper half assembly up to the notch in the bolt. FIGURE 26.

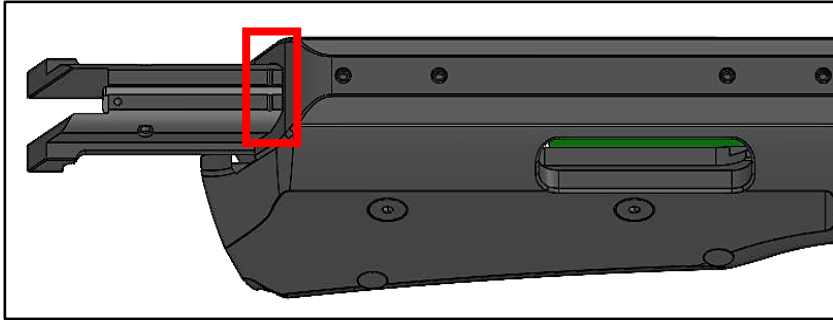


FIGURE 26

8. With the lever in the open position, take the lower half assembly and slide it inside the upper half assembly, paying close attention to the bolt and lever assembly alignment - FIGURE 27.

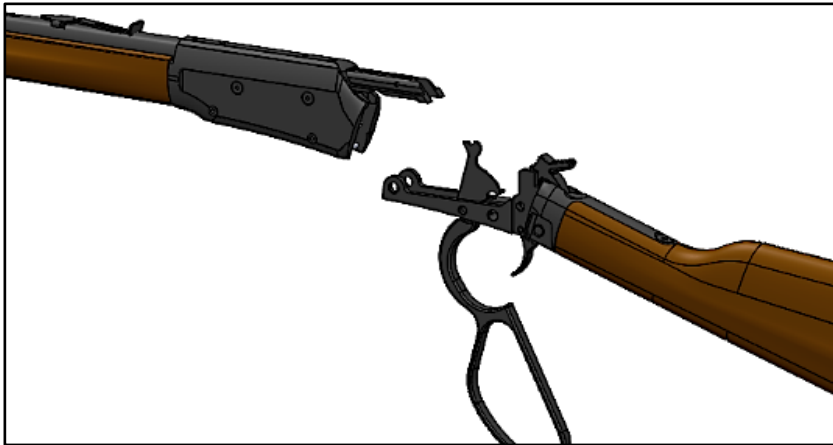


FIGURE 27

9. Once the takedown holes align, press in the takedown pins back into the cover assembly. They need to be flush on both sides to be fully seated.
10. Ensure that there is no ammunition in the firearm. To ensure proper functionality, complete the following:

- Keeping your fingers and other objects away from the trigger, place all of your fingers inside the finger loop. Operate the finger lever open and closed several times to ensure free movement of all parts.
- Fully close the finger lever. Place the manual safety into the READY TO FIRE position. Carefully move the hammer into the HALF-COCKED position and move the manual safety into the FULL SAFE position.
- If something does not operate correctly or binds, go back to step one and start over.

DISASSEMBLY

! WARNING

Do not disassemble your firearm beyond what is described in this manual.

! WARNING

Disassembling anything (such as but not limited to; bolt assembly, trigger assembly, etc.) other than what you have been instructed to do may cause damage to the firearm and/or injury to the shooter or bystander.

1. Always wear eye protection while completing any disassembly or reassembly of your firearm. Ensure that the firearm is clear of ammunition before completing any disassembly or reassembly of your firearm as covered in Section 3.
2. Follow the steps in the Takedown section to separate your firearm into its two halves.

3. To remove the cover for cleaning or maintenance, unscrew the four hex screws on the cover using a 5/64" hex wrench.
4. The cover can now be removed with the bolt assembly. Carefully slide the cover upward and off of the barrel assembly. Be careful to retain the bolt within the cover as it will slide forward freely.
5. Carefully remove the bolt from the cover by sliding it out towards the front of the cover.

**DO NOT TAKE APART ANY OF THE BOLT ASSEMBLY.
DO NOT DISASSEMBLE ANY FURTHER.**

WARNING

Check the bore carefully while disassembled, by looking through the breech end (not the muzzle) to be sure there are no obstructions (i.e., pieces of cleaning patch, a cleaning brush, cleaning rod). A barrel obstruction can cause excessive pressure upon firing and result in firearm damage or personal injury to you or a bystander.

REASSEMBLY

1. Always wear eye protection while completing any disassembly or reassembly of your firearm.
2. With the bolt face oriented in the same direction as the cover, slide the bolt back into the front of the cover. Slide the bolt rearward into the cover up to the notch on the bolt. FIGURE 28.

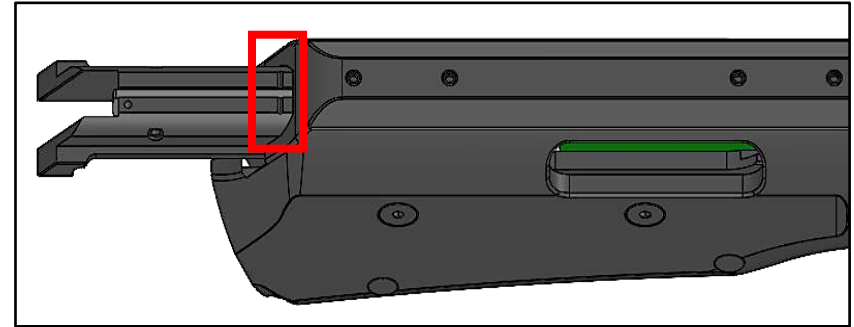


FIGURE 28

3. Carefully lower the cover assembly onto the upper half assembly. Be certain to hold the bolt in its original position. There will be some spring tension as the cover is lowered fully.

Note: It may help to press the forward takedown pin into place to hold the cover on during the next steps.

4. Align the cover over the screw holes and carefully install the four cover screws. These need to be simply hand tight – approximately 2-4 in-lbs. Do not over tighten. If the takedown pin has been pressed into the cover assembly, be certain to push it back out before further reassembly.
5. Ensure that the bolt is still protruding out of the rear of the cover to the hammer cut out.
6. Follow the Takedown reassembly steps as outlined in the Takedown section.

Damage to or alteration of the TRIGGER ASSEMBLY can affect the safe operation of your firearm, and result in injury and firearm damage. Do not attempt to disassemble the TRIGGER ASSEMBLY. Inspect the TRIGGER ASSEMBLY for damage. If any part appears damaged or unsecured, DO NOT USE. Contact Savage Arms immediately.

WARNING

Damage to or alteration of the BOLT ASSEMBLY can affect the safe operation of your firearm, and result in injury and firearm damage. Do not attempt to disassemble the BOLT ASSEMBLY

CLEANING

WARNING

Always wear eye protection while cleaning your firearm. Failure to properly maintain your firearm may lead to damage and/or serious injury to the shooter or bystander. These steps are for a complete thorough cleaning, to be done as needed to keep your firearm in working order.

WARNING

Before cleaning, ensure that your firearm is unloaded and PROVE it's safe. Place hammer in the HALF-COCKED position with the manual safety button on FULL SAFE - FIGURE 29 & FIGURE 30.

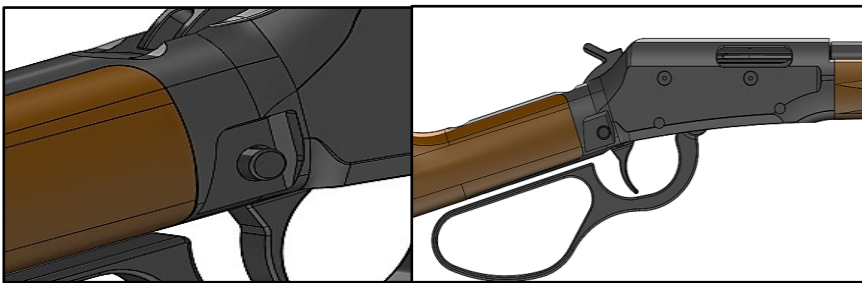


FIGURE 29

FIGURE 30

1. Prepare an area for cleaning the firearm with a suitable surface, adequate ventilation, correct caliber coated cleaning rod, brush, patches, powder solvent, and lubricant. Be sure to

read and understand all of the cautions and warnings on all solvents and chemicals prior to use. Follow the manufacturer's instructions for best cleaning results.

Note: Area should be free of ammunition.

2. Wear eye protection while cleaning your firearm. Ensure that the firearm is clear of ammunition as described earlier in this manual.
3. Disassemble as described in the applicable section in this manual. Separate the two halves, remove the cover and bolt assembly.
4. Lay the barreled half horizontally.
5. Using a small amount of powder solvent on the brush, push the coated cleaning rod through the barrel several times.
6. Unscrew the brush from the cleaning rod and replace it with a patch tip.
7. Push a new patch through.
8. Repeat the prior step (# 7) several times.
9. Push a new patch saturated with firearm lubricant through the bore.
10. Push a new dry patch through the bore to remove the excess lubricant.
11. Shine a light and look down the barrel to ensure it is clear of any obstructions or damage.

WARNING

If the barrel or chamber show signs of nicks, scratches, rust, pitting or other damage, **DO NOT USE**. Damage can result in high pressure and cause personal injury.

12. Carefully wipe all BOLT components, removing any contaminants and apply a VERY LIGHT coat of firearm lubricant. A very thin film is sufficient protection – do not over lubricate!
13. Clean and lightly lubricate all interior metal surfaces.
14. Remove the inner magazine tube and clean the inside of the outer tubular magazine.
15. Reassemble per the reassembly section earlier in this manual.
16. When done, always verify that the two-position manual SAFETY is operational as explained in SECTION 1. Ensure that the bolt and lever operate smoothly.
17. If there is a scope attached to the cover, check the alignment after reassembling.

Cycle the action and engage the SAFETY several times to ensure that it is functioning properly prior to loading. If the action does not cycle properly or the bolt binds, review the steps above. If there continues to be a problem, call Savage Arms Service Department for assistance (1-800-370-0708 or 413-568-7001 between 8:00 AM and 5:00 PM Eastern Time). Never take a chance with something that you are unsure of ... always ask a professional.

SECTION 5: PARTS LIST & DIAGRAM

Parts can be ordered directly from Savage Arms (1-800-370-0708 or 413-568-7001 between the hours of 8:00 AM and 5:00 PM Eastern Time). There is a minimum order and please allow 2 weeks for delivery. Only the parts indicated may be purchased by an individual. All other parts/subassemblies are either 'factory fit' or available to qualified gunsmiths only.

NOTICE

Please be advised that some parts may require fitting. Savage Arms bears no responsibility for the function or performance of any firearm that has been repaired or modified by someone other than the Savage Arms Service Department. As such, Savage Arms accepts no responsibility/liability for any direct and/or consequential damage and/or injury resulting from the use of a firearm repaired or modified by someone other than the Savage Arms Service Department.

SCOPES & SCOPE MOUNTS

The receiver cover for the Revel lever action is equipped with 4 scope base holes, which fit most basic scope base mounts. The following are some companies that manufacture RINGS that may be used with this style base or their own design and should be contacted for specific part numbers and item descriptions.

EVOLUTION GUN WORKS (EGW)
www.egwguns.com

WEAVER MOUNTS
www.weaveroptics.com


WARNE SCOPE MOUNTS
www.warnescopemounts.com

LEUPOLD
www.leupold.com

PARTS LIST

1. Receiver Cover
2. Bolt Assembly
3. Lower Receiver Assembly
4. Hammer
5. Trigger
6. Safety
7. Feed-block Assembly
8. Lever
9. Front Sight – Classic
10. Hooded Front Sight – Heritage
11. Rear Sight
12. Rear Sight Elevator
13. Sight Screw (Heritage)
14. Cover Assembly Screws

15. Finished Barrel
16. Forend Stock Screw
17. Buttstock Screw
18. Buttstock
19. Forend Stock
20. Follower
21. Outer Tubular Magazine
22. Magazine End Cap
23. Inner Tubular Magazine
24. Forend Magazine Bracket
25. Tubular Magazine Bracket
26. Bracket Set Screws
27. Takedown Pins
28. Upper Receiver Assembly

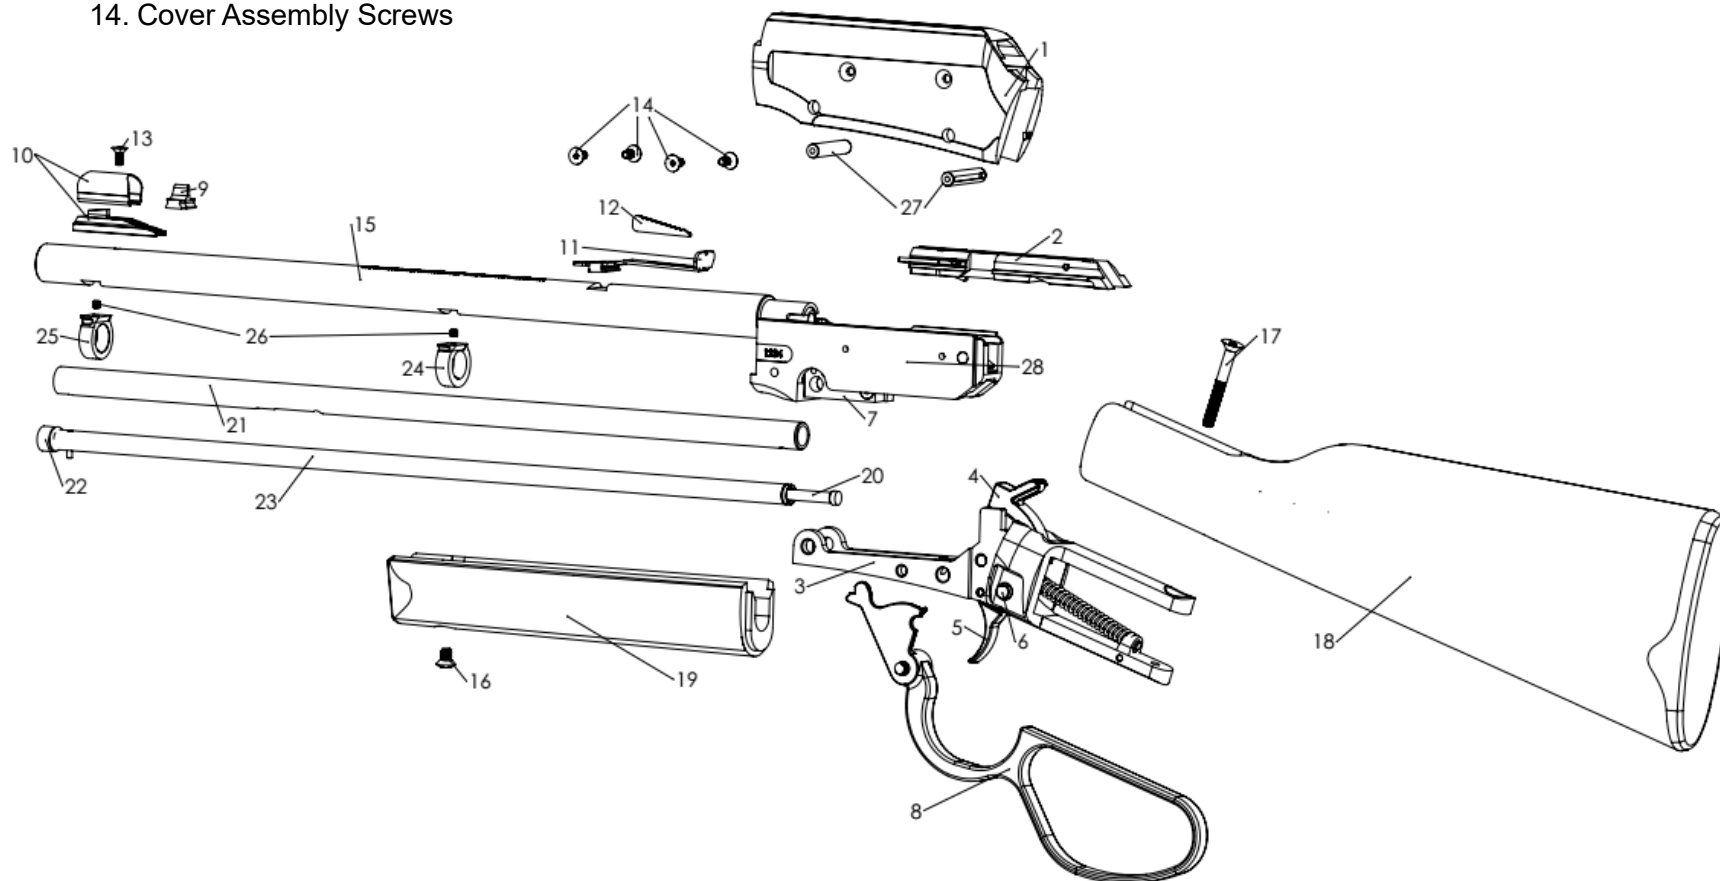

SECTION 6: STORAGE

WARNING

Follow the unloading instructions from SECTION 3 to ensure the magazine and chamber are empty. Failing to safely store your firearm and ammunition properly can lead to serious injury or death. Never lock away a loaded firearm. To further warrant the chamber is empty, use the Empty Chamber Indicator received with your firearm.

Your firearm and ammunition need to be stored in a locked location and should be out of reach and sight of children or any untrained persons.

1. To safely store your firearm, follow steps above in the TAKEDOWN section to separate the two halves of the rifle.
2. Insert a cable lock into the lower receiver through the slot indicated. FIGURE 31.

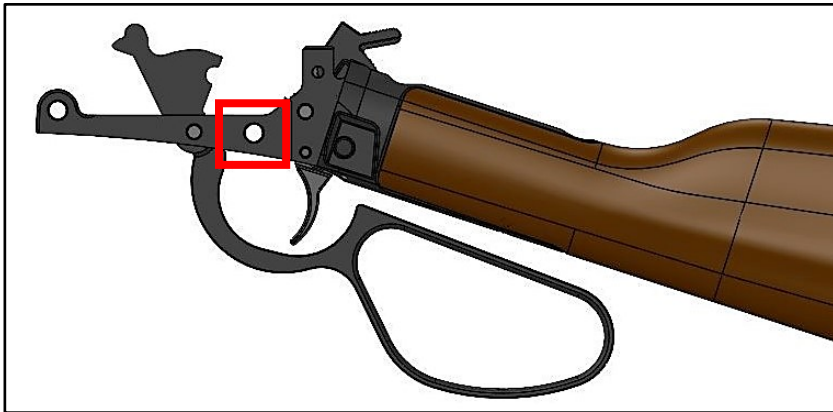


FIGURE 31

3. Lock the cable lock and remove the key. Never keep the key in the lock. Always store the key in a safe location, out of reach of children or untrained persons.

SECTION 7: STATEMENT OF LIMITED WARRANTY

Who is covered?

The original owner (with proof of purchase).

How long is the warranty period?

One (1) year from the date of purchase.

What is covered?

Any defect in materials or workmanship (performed by Savage Arms) encountered during normal use.

What is NOT covered?

Personal injury, property damage, and/or damage to the firearm caused by:

- Improper maintenance or negligence to provide proper care and maintenance.
- Alterations/modifications performed without the written authorization of the Savage Arms Service Department.
- Normal wear, tear and/or corrosion.
- Accidental discharge, careless handling and/or misuse.
- Barrel obstructions.
- Use of improper ammunition and over pressure ammunition

Exclusions and Limitations

This warranty and the remedies set forth herein are exclusive and take the place of all other expressed or implied WARRANTIES (including any implied warranty of merchantability or fitness for any particular purpose which are disclaimed).

SAVAGE ARMS DISCLAIMS ANY IMPLIED WARRANTIES TO THE FULLEST EXTENT ALLOWABLE BY LAW.

No other representations or claims of any nature shall be binding on or obligate Savage Arms. Savage Arms excludes any incidental and consequential damages under this warranty. Some states do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights. You may have other rights, which will vary from state to state.

RETURNING A FIREARM

All firearms within the United States should be sent to Savage Arms. Firearms owned by individuals in Canada cannot be returned directly to Savage Arms due to import/export laws. Please call our Customer Service number listed below for information on warranty repairs. For repairs outside of North America, please contact your local firearms distributor.

For WARRANTY claims, proof of purchase must accompany the firearm.

It is a violation of Federal Law to ship a firearm with live ammunition either in the MAGAZINE, chamber, or placed in the box. For the safety of all involved, please be sure there is no ammunition in either the chamber, MAGAZINE, or box.

Savage Arms, Inc. is not responsible for the loss or damage to any accessories shipped with the firearm. If there is a question whether the firearm should be returned or if parts could be purchased, please call 413-568-7001 or 1-800-370-0708 between 8:00 AM and 5:00 PM Eastern Time and ask for the Service/Warranty Department.

All firearms are to be sent to Savage Arms at the owner's expense. Warranty repairs will be returned to the owner at Savage Arms' expense.

1. Pack the firearm in its original box if possible. If a similar suitable box is used, care should be taken to protect the

barrel/muzzle from breaking through. Always pack with the assumption that the firearm will undergo rough handling during transit to Savage Arms.

2. Enclose a brief note including:

- Name, Address, and Telephone number of the sender
- Serial number of the firearm
- Description of the problem you are having
- Bullet weight, bullet type, and manufacturer of the ammunition you are using
- Any other information which you feel may be helpful.

Return to:

Savage Arms

100 Springdale Road

Westfield, MA 01085

Attn: Service Department

You're proud to shoot a Savage— so show it!

Choose from a wide selection of Savage t-shirts, hats and other great apparel and gear at store.savagearms.com.

Don't miss out—check back often for the latest designs.



store.savagearms.com

**You're proud to
shoot a Savage—
so show it!**

Choose from a wide selection of Savage t-shirts, hats and other great apparel and gear at store.savagearms.com

Don't miss out—check back often for the latest designs.

Receive **10% OFF**
your first order!

Code will be emailed to you after you complete your online warranty registration.



For more than a century, Savage Arms has carefully crafted the world's most accurate, consistent and reliable firearms. We're proud to stand behind our products with a 1-year warranty, and we're willing to do whatever it takes to ensure your Savage performs as it should.

To take full advantage of this warranty, please register your firearms at www.savagearms.com/warranty.

For new product purchases, please complete the online warranty registration within 10 days from the date of purchase.

Statement of Limited Warranty

Who is covered?

The original owner (with proof of purchase).

How long is the warranty period?

One (1) year from the date of purchase.

What is covered?

Any defect in materials or workmanship (performed by Savage Arms) encountered during normal use.

What is NOT covered?

Personal injury, property damage, and/or damage to the firearm caused by:

- Improper maintenance or negligence to provide proper care and maintenance.
- Alterations/modifications performed without the written authorization of the Savage Arms Service Department.
- Normal wear, tear and/or corrosion.
- Accidental discharge, careless handling and/or misuse.
- Barrel obstructions.
- Use of improper ammunition and over pressure ammunition

Exclusions and Limitations

This warranty and the remedies set forth herein are exclusive and take the place of all other expressed or implied WARRANTIES (including any implied warranty of merchantability or fitness for any particular purpose which are disclaimed). No other representations or claims of any nature shall be binding on or obligate Savage Arms. Savage Arms excludes any incidental and consequential damages under this warranty. Some states do not allow exclusions or limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

This warranty gives you specific legal rights. You may have other rights, which will vary from state to state.

SAVAGE ARMS DISCLAIMS ANY IMPLIED WARRANTIES TO THE FULLEST EXTENT ALLOWABLE BY LAW.



WARNING

Firearms must be handled responsibly and securely stored to prevent access by children and other unauthorized users. California has strict laws pertaining to firearms, and you may be fined or imprisoned if you fail to comply with them. Visit the website of the California Attorney General at <https://oag.ca.gov/firearms> for information on firearm laws applicable to you and how you can comply.

Prevent child access by always keeping guns locked away and unloaded when not in use. If you keep a loaded firearm where a child obtains and improperly uses it, you may be fined or sent to prison.

If you or someone you know is contemplating suicide, please call the national suicide prevention lifeline at 1-800-273-TALK (8255).



WARNING

This product can expose you to chemicals including lead, which is known to the State of California to cause cancer and reproductive harm. For more information go to www.P65Warnings.ca.gov



ADVERTENCIA

Las armas de fuego deben ser manejadas de manera responsable y almacenadas de manera segura para evitar el acceso de niños y otros usuarios no autorizados. California tiene leyes estrictas relativas a las armas de fuego, y puede ser multado o encarcelado si no cumple con ellas. Visite el sitio web del Procurador General de California en <https://oag.ca.gov/firearms> para obtener información sobre las leyes de armas de fuego aplicables a usted y cómo puede cumplir.

Evite el acceso de los niños manteniendo siempre las armas cerradas y descargadas cuando no estén en uso. Si mantiene un arma de fuego cargada donde un niño la obtiene y la usa incorrectamente, puede ser multado o enviado a prisión.

Si usted o alguien que conoce está contemplando el suicidio, llame a la línea de vida nacional de prevención del suicidio al 1-800-273-TALK (8255).



ADVERTENCIA

Este producto puede exponerle a sustancias químicas que incluyen el plomo, que el estado de California reconoce como causante de cáncer y daños al sistema reproductivo. Para más información, visite www.P65Warnings.ca.gov



AVERTISSEMENT

Les armes à feu doivent être manipulées de manière responsable et stockées en toute sécurité pour empêcher les enfants et les autres utilisateurs non autorisés d'y accéder. La Californie a des lois strictes concernant les armes à feu et vous pouvez être condamné à une amende ou à une peine d'emprisonnement si vous ne vous y conformez pas. Visitez le site Web du procureur général de Californie à <https://oag.ca.gov/firearms> pour obtenir des informations sur les lois sur les armes à feu qui vous concernent et comment vous pouvez vous y conformer.

Empêchez l'accès des enfants en gardant toujours les pistolets sous clé et déchargés lorsqu'ils ne sont pas utilisés. Si vous gardez une arme à feu chargée là où un enfant l'obtient et l'utilise de manière inappropriée, vous pourriez être condamné à une amende ou à une peine de prison.

Si vous ou quelqu'un que vous connaissez envisagez le suicide, veuillez appeler la ligne de vie nationale pour la prévention du suicide au 1-800-273-TALK (8255).



AVERTISSEMENT

Ce produit peut exposer l'utilisateur à des produits chimiques, comme le plomb, que l'État de Californie reconnaît comme étant cancérigène et nocif pour la reproduction. Pour plus d'information, consultez le www.P65Warnings.ca.gov

SAVAGE ARMS®

100 Springdale Road, Westfield, MA 01085

www.savagearms.com (800) 370-0708 (413) 568-7001

908035 (09/24) Rev 1