



# Smith & Wesson®

## Safety & Instruction Manual For M&P® FPC® 22LR



# M&P® FPC® 22LR



There are separate manuals for M&P® FPC® models chambered in centerfire calibers. These manuals are available free of charge or via download at the address shown below.



**Read the instructions and  
warnings in this manual  
CAREFULLY BEFORE  
using this firearm.**

**Smith & Wesson**  
1852 Proffitt Springs Rd., Maryville, TN 37801  
1-800-331-0852 • Fax: 1-413-747-3317  
[www.smith-wesson.com](http://www.smith-wesson.com)

Copyright 2025 Smith & Wesson Inc. All rights reserved.



**WARNING:**



**READ THESE INSTRUCTIONS  
AND WARNINGS CAREFULLY.  
BE SURE YOU UNDERSTAND THESE  
INSTRUCTIONS AND WARNINGS  
BEFORE USING THIS FIREARM.  
FAILURE TO READ THESE INSTRUCTIONS  
AND TO FOLLOW THESE WARNINGS MAY  
RESULT IN INJURY OR DEATH  
TO YOU AND OTHERS AND  
DAMAGE TO PROPERTY.**

**THIS SAFETY & INSTRUCTION  
MANUAL SHOULD ALWAYS  
ACCOMPANY THIS FIREARM AND  
BE TRANSFERRED WITH IT UPON  
CHANGE OF OWNERSHIP OR  
WHEN PRESENTED TO ANOTHER PERSON.  
A COPY OF THE SAFETY & INSTRUCTION  
MANUAL IS AVAILABLE FREE  
VIA DOWNLOAD AT  
[WWW.SMITH-WESSON.COM](http://WWW.SMITH-WESSON.COM)  
OR UPON REQUEST FROM:**

**SMITH & WESSON®  
CUSTOMER SUPPORT CENTER  
1852 PROFFITT SPRINGS RD.  
MARYVILLE, TN 37801  
TEL.: 1-800-331-0852, EXT. 4125  
E-MAIL: [QA@SMITH-WESSON.COM](mailto:QA@SMITH-WESSON.COM)**

## TABLE OF CONTENTS

|                                                                  |       |
|------------------------------------------------------------------|-------|
| YOUR SAFETY RESPONSIBILITIES .....                               | 3-6   |
| SAFE STORAGE AND TRANSPORTATION .....                            | 7-8   |
| AMMUNITION .....                                                 | 9-11  |
| MODEL & FEATURES IDENTIFICATION .....                            | 12-13 |
| INSPECTING THE M&P® FPC® .....                                   | 14-17 |
| PREPARATION FOR FIRING .....                                     | 18-19 |
| LOADING THE M&P® FPC® .....                                      | 19-22 |
| FIRING THE M&P® FPC® .....                                       | 22-23 |
| HANGFIRES AND MISFIRES .....                                     | 24-26 |
| CLEARING A MISFEED/JAM .....                                     | 26-27 |
| UNLOADING THE M&P® FPC® .....                                    | 28-29 |
| DISASSEMBLY/FIELD STRIPPING .....                                | 29-34 |
| ASSEMBLY .....                                                   | 35-40 |
| M&P® FPC® 22LR MAGAZINES .....                                   | 41-44 |
| INTERCHANGEABLE PALMSWELL GRIP INSERTS .....                     | 44-45 |
| REVERSIBLE MAGAZINE RELEASE .....                                | 46-47 |
| M&P® FPC® IN-STOCK MAGAZINE STORAGE .....                        | 48    |
| FOLDING THE M&P® FPC® .....                                      | 49    |
| INSTALLATION OF OPTICS .....                                     | 50    |
| CLEANING AND MAINTENANCE .....                                   | 51-53 |
| LIMITED WARRANTY - For Owners Within The United States .....     | 53-54 |
| CONTACT AND SHIPPING INFORMATION - For Owners In The U.S.A. .... | 55-56 |
| BATTERY WARNINGS .....                                           | 57-58 |
| CUSTOM SERVICE, PATENT INFORMATION .....                         | 59    |

## YOUR SAFETY RESPONSIBILITIES

### SAFETY IS YOUR NUMBER ONE RESPONSIBILITY!

- At home, in the field, at the range, or anywhere, the first concern of every firearm owner should be safety. Apply the following safety rules in every situation, with any kind of firearm. If you feel uncertain about any operational aspects of your firearm, please contact Smith & Wesson® at 1-800-331-0852, ext. 4125 before proceeding with its operation.
- If you are unfamiliar with firearms you should seek formal training before using your firearm.



**WARNING: YOU MUST FOLLOW ALL OF THESE SAFETY RULES TO ENSURE THE SAFE USE OF YOUR FIREARM. FAILURE TO FOLLOW THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL COULD CAUSE PERSONAL INJURY OR DEATH TO YOU OR OTHERS AND DAMAGE TO PROPERTY.**

- As a firearm owner, you accept a demanding responsibility. How seriously you take this responsibility can be the difference between life and death. There is no excuse for careless or abusive handling of your firearm. At all times, handle your firearm with intense respect for its power and potential danger.



---

## YOUR SAFETY RESPONSIBILITIES - CONTINUED

---

- **ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.** Never point a firearm at anyone or anything you do not intend to shoot whether or not it is loaded. This is particularly important when loading, unloading, or field stripping the firearm. ALWAYS control the direction of the firearm.
- **ALWAYS TREAT EVERY FIREARM AS IF IT IS LOADED AND WILL FIRE.** Do not take anyone's word that the firearm is unloaded – always check for yourself. Never pass your firearm to another person until the cylinder or action is open and you visually check that it is unloaded. Keep your firearm unloaded and safely stored when not in use.
- **NEVER PLACE YOUR FINGER INSIDE THE TRIGGER GUARD OR ON THE TRIGGER UNLESS YOU INTEND TO FIRE.** Ensure that other objects do not touch the trigger.
- **ALWAYS BE SURE OF YOUR TARGET AND WHAT IS BEYOND IT.** Always be sure of where the bullet will strike and shoot only where there is a safe back stop free of obstructions, water or other surfaces which can cause a ricochet. Be sure your bullet will stop behind your target. Bullets can glance off many surfaces like rocks or the surface of water and travel in unpredictable directions with considerable velocity. Do not fire randomly into the sky.
- **NEVER CROSS OBSTACLES SUCH AS FENCES OR STREAMS WITH A LOADED FIREARM.** Always make certain your firearm is unloaded before crossing a fence, climbing a tree, jumping a ditch or negotiating other obstacles.
- **SAFE FIREARM HANDLING IS YOUR PERSONAL RESPONSIBILITY AT ALL TIMES.** Firearms are dangerous and can cause injury or death if they are misused or used inappropriately. Safety must be the prime consideration of any one who owns or handles firearms. Accidents are the result of violating the rules of safe firearm handling and common sense. Firearm safety training is available. Contact your firearms dealer, law enforcement agency, local sportsman's club, etc. for availability.
- **YOU ARE RESPONSIBLE FOR THE FIREARM AT ALL TIMES.** In owning a firearm, you must undertake full-time responsibility for your firearm's safety and security. You must protect yourself and all others against injury or death from misuse of the firearm 24 hours a day.
- **FIREARM SECURITY IS YOUR RESPONSIBILITY.** You must secure firearms safely from children and/or unauthorized users. Your firearm should always be kept unloaded and locked when not in use. A lock has been provided for this purpose. Never assume that the use of this lock is sufficient to safely secure your firearm. You must always evaluate your personal situation and employ the security systems that meet your needs and prevent children and unauthorized users from gaining access to your firearm.



---

## YOUR SAFETY RESPONSIBILITIES - CONTINUED

---

- **APPROPRIATE USE OF YOUR FIREARM MEANS USING YOUR FIREARM FOR LEGAL PURPOSES.** For example - target shooting, hunting and lawful resistance of deadly criminal force. It is your responsibility to ensure that you are in compliance with all applicable laws and ordinances regarding the use of your firearm.
- **NEVER RELY ON MECHANICAL FEATURES ALONE.** Only your safe firearm-handling habits will ensure the safe use of your firearm. This is your responsibility.
- **ALWAYS SAFELY STORE AND SECURE YOUR FIREARM.** Safe and secure storage of your firearm is one of your most important responsibilities. It is a full-time responsibility. You must always secure your firearm and ammunition separately so that they are not accessible to children and/or other unauthorized persons.
- **NEVER KEEP AMMUNITION IN THE SAME LOCATION AS THE FIREARM.** Store each in a separate and secure place.
- **ALWAYS WEAR EYE PROTECTION THAT IS SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU HANDLE YOUR FIREARM FOR CLEANING AND MAINTENANCE.**
- **ALWAYS WEAR EYE AND HEARING PROTECTION THAT ARE SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU DISCHARGE YOUR FIREARM.** Make sure others in the vicinity of where you will be shooting do so as well.
- **NEVER USE ALCOHOL OR DRUGS BEFORE OR WHILE SHOOTING.** Do not use your firearm if you are on any medication which impairs, even slightly, your mental or physical ability.
- **ALWAYS HAVE ADEQUATE VENTILATION.** Discharging firearms in poorly ventilated areas, cleaning firearms, or handling ammunition may result in exposure to lead and other substances known to cause birth defects, reproductive harm, and other physical injury. Review the warnings and labels for all ammunition and cleaning products carefully. Wash hands thoroughly after exposure.
- **BEFORE HANDLING ANY FIREARM, UNDERSTAND ITS OPERATION.** Not all firearms are the same. Familiarize yourself with the mechanical features of any firearm you intend to use. If you feel uncertain about any operational aspects of your firearm, please contact Smith & Wesson® at 1-800-331-0852, ext. 4125 before proceeding with its operation.
- **NEVER ALLOW A FIREARM TO BE USED BY ANY INDIVIDUAL WHO DOES NOT UNDERSTAND ITS SAFE OPERATION OR HAS NOT READ THIS SAFETY AND INSTRUCTION MANUAL.**

## YOUR SAFETY RESPONSIBILITIES - CONTINUED

- **ALWAYS USE THE CORRECT AMMUNITION FOR YOUR PARTICULAR FIREARM AS INDICATED BY THE MARKING ON THE FIREARM.** Never use non-standard, reloaded, or “handloaded” ammunition which has not been subjected to internal ballistic pressure testing.
- **BEWARE OF BARREL BORE OBSTRUCTIONS.** Be sure the barrel bore is clear of obstructions before shooting. Mud, water, snow, or other objects may inadvertently lodge in the barrel bore. Even a small obstruction can cause a dangerous increase in pressure, causing injury to yourself and others and damage to your firearm.
- **BE SURE ALL ACCESSORIES ARE COMPATIBLE WITH THE FIREARM AND THAT THE ACCESSORIES DO NOT INTERFERE WITH SAFE OPERATION.** It is your responsibility to understand and follow all of the instructions in this manual, as well as those which may be supplied with your ammunition and any accessory.
- **NEVER DISASSEMBLE YOUR FIREARM BEYOND THE FIELD STRIPPING PROCEDURE DETAILED IN THIS MANUAL, OR PERFORM ANY MAINTENANCE, ADJUSTMENT, OR SERVICE NOT SPECIFIED.** Improper disassembly and reassembly of your firearm may lead to injury or death of the shooter and/or bystanders and damage to property.
- **NEVER MODIFY OR SWAP OUT ANY OF THE COMPONENTS OF YOUR SMITH & WESSON® FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL OR IN AN OFFICIAL SMITH & WESSON ACCESSORY PARTS MANUAL OR INSTRUCTION SHEET. CHANGES NOT COVERED IN THIS MANUAL OR IN A SMITH & WESSON INSTRUCTION SHEET WILL REQUIRE A QUALIFIED GUNSMITH (OR FACTORY-TRAINED PERSONNEL) USING FACTORY-AUTHORIZED PARTS.** Improper manipulation of any component of the firearm may result in faulty functioning, possibly leading to injury or death of the shooter and/or bystanders and damage to property.



**WARNING: SAFE USE OF A FIREARM IS YOUR PERSONAL RESPONSIBILITY AND THE FAILURE TO FOLLOW ANY AND ALL OF THESE BASIC SAFETY RULES MAY RESULT IN SEVERE PERSONAL INJURY OR DEATH TO YOU OR OTHERS AND DAMAGE TO PROPERTY. YOU ARE THE MOST IMPORTANT SAFETY DEVICE WHEN IT COMES TO THE USE OF YOUR FIREARM AND SMITH & WESSON® WILL NOT BE RESPONSIBLE FOR ANY PERSONAL INJURY, DEATH OR PROPERTY DAMAGE THAT RESULTS FROM: (1) THE CRIMINAL OR NEGLIGENT USE OF THIS FIREARM; (2) A DISREGARD OF THESE SAFETY INSTRUCTIONS AND WARNINGS; (3) IMPROPER OR CARELESS HANDLING OF THIS FIREARM; (4) THE USE OF NON-STANDARD, DEFECTIVE OR IMPROPER AMMUNITION; OR (5) IMPROPER OR NEGLIGENT MODIFICATIONS OR REPAIRS TO THE FIREARM.**

# SAFE STORAGE AND TRANSPORTATION



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: FIREARMS ARE DANGEROUS WHEN USED AND STORED IMPROPERLY. THEY POSE A RISK OF SERIOUS OR FATAL INJURIES. FIREARMS CAN BE ESPECIALLY DANGEROUS TO CHILDREN WHEN THEY ARE STORED IN AN IRRESPONSIBLE AND UNSAFE MANNER. FOR YOUR SAFETY AND THE SAFETY OF OTHERS, IT IS IMPERATIVE THAT YOU KEEP YOUR FIREARM LOCKED AND UNLOADED IN A SECURE PLACE. THE AMMUNITION SHOULD BE STORED IN A SEPARATE, SECURE LOCATION WHEN IT IS NOT IN USE. SAFE AND SECURE STORAGE OF YOUR FIREARM IS ONE OF THE MOST IMPORTANT RULES OF FIREARM SAFETY. YOUR FAILURE TO FOLLOW THESE RULES MAY RESULT IN INJURY OR DEATH TO YOU OR OTHERS.**

- **ALWAYS SECURE YOUR FIREARM IN A MANNER THAT WILL PREVENT UNAUTHORIZED ACCESS.** Whenever your firearm is not in use, keep it unloaded and locked. Your safety and the safety of others requires that you always secure and store your firearm in a manner that will prevent unauthorized access. Never leave a firearm unattended unless it is locked, unloaded and secured.
- **ALWAYS USE THE LOCK PROVIDED BY SMITH & WESSON® TO SECURE YOUR FIREARM.** Please read and follow the instructions packaged separately for the use of this lock. A lock, when properly used, can be an effective tool in preventing unauthorized access to your firearm. There are other alternative locks and safe storage containers available in the marketplace which may also be appropriate for your particular needs. Consult your local firearm shop, hardware store, or local police department for guidance on the variety of other safe storage devices or practices which may be appropriate for your particular needs. By purchasing this firearm you have accepted the responsibility of safely securing the firearm at all times and preventing its unauthorized use. Never assume that the use of this lock alone is sufficient to safely secure your firearm. It is your personal responsibility to select and use whatever measures or practices that will enable you to be absolutely certain that your firearm is secure at all times.



**WARNING: NEVER LOCK A LOADED FIREARM AND NEVER LOAD A LOCKED FIREARM!**

- **ALWAYS STORE YOUR FIREARM AND AMMUNITION SEPARATELY SO THAT THEY ARE NOT ACCESSIBLE TO CHILDREN OR OTHER UNAUTHORIZED PERSONS.** Safe and secure storage of your firearm and ammunition are your responsibility. It is a full-time responsibility.



---

## SAFE STORAGE AND TRANSPORTATION - CONTINUED

---


- **NEVER ASSUME THAT A “HIDING” PLACE IS A SECURE STORAGE METHOD.** Others may be aware of your storage location or come upon it by chance. It is your personal responsibility to use common sense when storing your firearm and ammunition and to always make sure they are not accessible to children or other unauthorized persons.
- **NEVER TRANSPORT A LOADED FIREARM.** When transporting your firearm, be sure it is unloaded and locked. Safe and secure transportation of your firearm is your responsibility.
- **ALWAYS FOLLOW THE LAW!** Many jurisdictions have laws that make it a crime to keep a firearm unlocked and in an area accessible to children or others. Keeping a firearm locked and unloaded when not in use is not only common sense safety practice... IT IS THE LAW. You must be familiar with all local, state, and federal laws regarding the safe storage and transportation of your firearm. Failure to know and follow the law may result in unauthorized access or use of your firearm by another. Obey all laws relating to the storage and transportation of firearms. Your local police department or firearm shop can furnish you with available information on storing and/or transporting a firearm safely and legally.
- **YOUR FIREARM IS YOUR RESPONSIBILITY.** You must prevent your firearm from being stolen or from being used by untrained or unqualified individuals. Keep it locked, unloaded and secured when not in use.
- Never leave the key to the gun lock with the stored firearm.

# AMMUNITION



**WARNING: NEVER USE AMMUNITION NOT SPECIFICALLY DESIGNATED FOR USE IN YOUR FIREARM. FAILURE TO USE THE CORRECT TYPE OR CALIBER OF AMMUNITION MAY CAUSE THE FIREARM TO JAM, FAIL TO FIRE, OR MAY GENERATE EXCESSIVE PRESSURE WHICH CAN DAMAGE OR EVEN RUPTURE YOUR FIREARM, CAUSING PERSONAL INJURY OR DEATH TO THE SHOOTER AND/OR BYSTANDERS.**

- Locate the cartridge designation marked on the firearm. This information indicates the correct ammunition that must be used in this firearm (FIGURE 1).
- You are responsible for selecting ammunition that meets industry standards and is appropriate in type and caliber for this firearm.

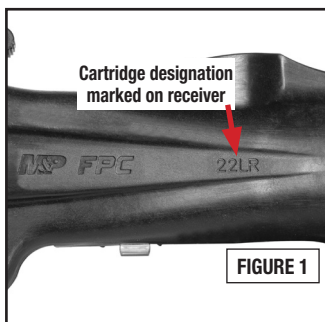

- Never mix ammunition.



**WARNING: IN SOME CASES, A ROUND OF AMMUNITION NOT SPECIFIED ON YOUR FIREARM AND NOT LISTED AS ALTERNATE AMMUNITION IN THIS MANUAL MAY FIT INTO THE CHAMBER. FIRING THIS AMMUNITION MAY CAUSE A RUPTURE, RESULTING IN PERSONAL INJURY OR DEATH TO THE SHOOTER AND/OR BYSTANDERS AND DAMAGE TO PROPERTY.**

**FOR MORE INFORMATION REGARDING GENERALLY ACCEPTED FIREARMS AND AMMUNITION INTERCHANGEABILITY, AS PUBLISHED BY SPORTING ARMS AND AMMUNITION MANUFACTURERS' INSTITUTE (SAAMI), FIND IT AT [HTTPS://SAAMI.ORG](https://saami.org)**



**WARNING: ALWAYS INSPECT YOUR AMMUNITION BEFORE USING IT. NEVER USE DIRTY, CORRODED OR DAMAGED AMMUNITION. A BURST CARTRIDGE OR BORE OBSTRUCTION MAY RESULT CAUSING DAMAGE TO THE FIREARM AND PERSONAL INJURY OR DEATH TO THE SHOOTER AND/OR BYSTANDERS.**

- Use only commercially manufactured ammunition with internal ballistic pressures which are in strict accordance with the specifications of the Sporting Arms and Ammunition Manufacturers' Institute (SAAMI). If you are uncertain, contact your ammunition supplier for verification.

## AMMUNITION - CONTINUED



**WARNING: NEVER USE NON-STANDARD, RELOADED OR “HANDLOADED” AMMUNITION WHICH HAS NOT BEEN SUBJECTED TO INTERNAL BALLISTIC PRESSURE TESTING. RELOADED OR HANDLOADED AMMUNITION, MAY HAVE MANY MANUFACTURING AND QUALITY VARIABLES (SUCH AS THE TYPE AND AMOUNT OF GUN POWDER). CARTRIDGE CASES THAT HAVE BEEN RELOADED AND FIRED MULTIPLE TIMES MAY SUFFER PHYSICAL DAMAGE WHICH COULD SIGNIFICANTLY IMPACT OR REDUCE THE INTEGRITY OF THE CARTRIDGE, POSSIBLY RESULTING IN BULLET SETBACK OR UNSEATING. CASE FAILURE AND INJURY TO THE SHOOTER OR BYSTANDERS AND DAMAGE TO THE FIREARM MAY RESULT WHEN SUCH A CARTRIDGE IS FIRED. ANY AMMUNITION THAT IS IMPROPERLY MANUFACTURED OR RELOADED, EVEN IN THE SLIGHTEST DEGREE, MAY FAIL TO FIRE OR MAY GENERATE EXCESSIVE INTERNAL PRESSURES WHICH CAN DAMAGE OR EVEN RUPTURE THE FIREARM, CAUSING PERSONAL INJURY OR DEATH TO THE SHOOTER OR THOSE IN THE IMMEDIATE VICINITY.**

- Critical to performance and maintenance of a rifle is regular cleaning and the use of high-quality ammunition. This is even more important with 22 rimfire caliber rifles. There is a broad array of 22LR ammunition made by a number of manufacturers in different brands and types. Smith & Wesson has found wide variations in primer sensitivity and other characteristics between some brands and types of 22LR ammunition.
- Smith & Wesson suggests that you fire several boxes of a quality brand of ammunition through your Smith & Wesson firearm before you put it into regular use to determine reliability of ignition and performance of your ammunition. If “failure to fire” or other issues should occur, try different brands and types until a reliable load is found.
- Please call Smith & Wesson Customer Service at 1-800-331-0852 ext. 4125 if you have any questions regarding ammunition for your M&P FPC firearm.
- A firearm and ammunition are a system and must work together. There are different types of ammunition for different types of firearms. Your firearm has been designed for ammunition of a specific caliber. It is important to select the proper ammunition for your firearm.

## AMMUNITION - CONTINUED



**WARNING: INJURY OR DEATH AND PROPERTY DAMAGE CAN RESULT FROM THE USE OF INCORRECT AMMUNITION OR BORE OBSTRUCTIONS. NEVER USE RELOADED AMMUNITION THAT HAS NOT BEEN SUBJECTED TO INTERNAL BALLISTIC PRESSURE TESTING.**




**WARNING: DISCHARGING FIREARMS IN POORLY VENTILATED AREAS, CLEANING FIREARMS, OR HANDLING AMMUNITION MAY RESULT IN EXPOSURE TO LEAD AND OTHER SUBSTANCES KNOWN TO CAUSE BIRTH DEFECTS, REPRODUCTIVE HARM, AND OTHER PHYSICAL INJURY. HAVE ADEQUATE VENTILATION AT ALL TIMES. WASH HANDS THOROUGHLY AFTER EXPOSURE.**



**WARNING: NEVER APPLY LUBRICANTS OR CLEANER DIRECTLY ONTO AMMUNITION. APPLYING LUBRICANT OR CLEANER TO AMMUNITION CAN CONTAMINATE THE AMMUNITION AND RESULT IN A SQUIB LOAD. A SQUIB LOAD CAN RESULT IN A BORE OBSTRUCTION WHEN THE BULLET BECOMES LODGED IN THE BORE. INJURY OR DEATH TO THE SHOOTER OR BYSTANDERS AND DAMAGE TO PROPERTY COULD RESULT WHEN A SUBSEQUENT CARTRIDGE IS FIRED.**

# MODEL & FEATURES IDENTIFICATION

FIGURE 2

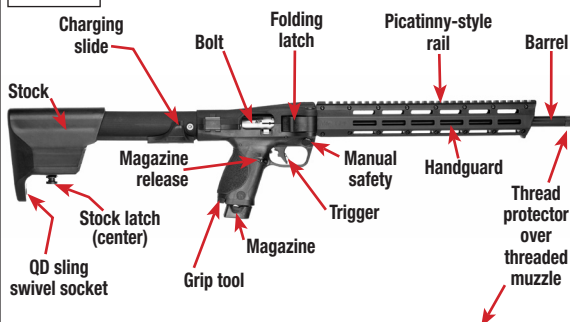

Some of the M&P FPC 22LR carbines have 1/2-28 threads at the muzzle - under a thread protector



FIGURE 3

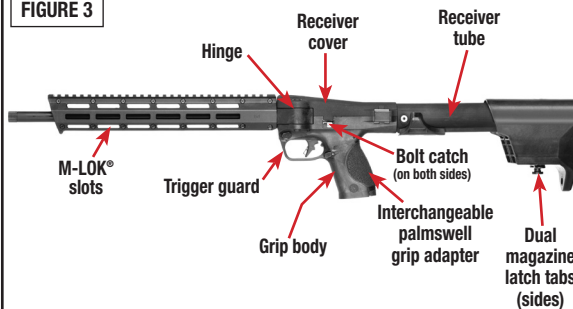


FIGURE 4

Top view - folded






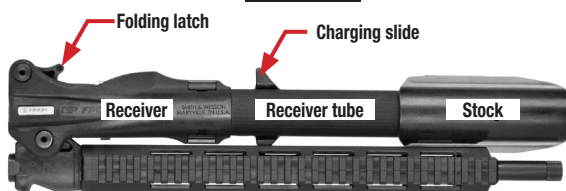


FIGURE 5

Bottom view - folded

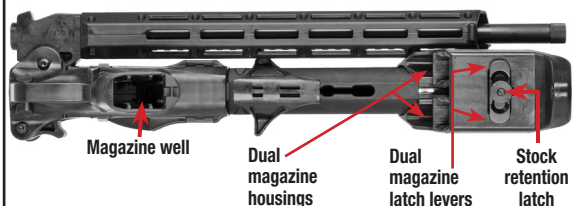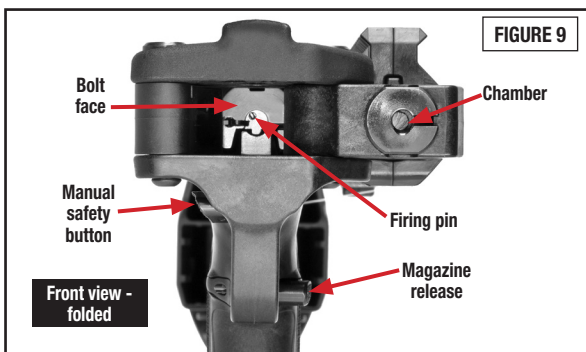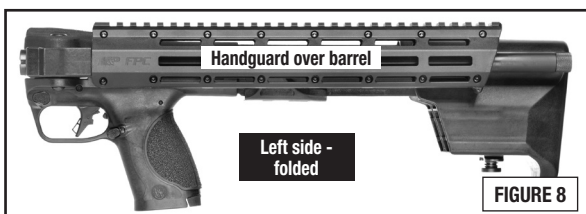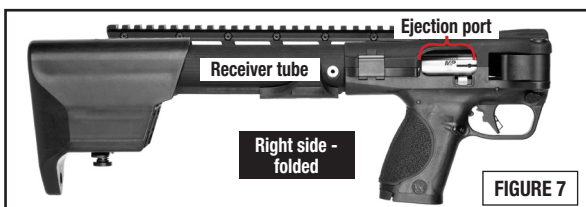

## MODEL & FEATURES IDENTIFICATION - CONTINUED

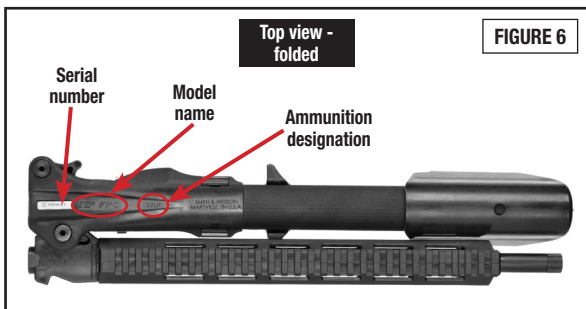

## INSPECTING THE M&P® FPC® 22LR



**WARNING: ALWAYS ENSURE THAT THE FIREARM IS UNLOADED BEFORE INSPECTING, FOLDING, UNFOLDING, DISASSEMBLING, ASSEMBLING, CLEANING, ADDING OR REMOVING ACCESSORIES.**



**ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: NEVER RELY ON MECHANICAL FEATURES ALONE. ONLY YOUR SAFE FIREARM HANDLING WILL ENSURE THE SAFE USE OF YOUR FIREARM. THIS IS YOUR RESPONSIBILITY.**




**WARNING: REMOVING THE MAGAZINE FROM THE M&P FPC 22LR DOES NOT UNLOAD THE CHAMBER. THE M&P FPC 22LR CAN FIRE WITH THE MAGAZINE REMOVED, IF A CARTRIDGE HAS BEEN CHAMBERED AND THE MANUAL THUMB SAFETY IS PLACED IN THE “FIRE” POSITION, AND THE TRIGGER IS THEN PULLED.**







**WARNING: BE CAREFUL WHEN FOLDING OR UNFOLDING THE M&P FPC 22LR TO AVOID PINCH POINTS.**

- When you inspect your firearm, you must check for yourself that it is unloaded. To do this, grasp the M&P FPC 22LR with your finger off the trigger and outside the trigger guard, point the muzzle in a safe direction.
- As shipped from the factory, the M&P FPC 22LR is folded. The M&P FPC 22LR is held in the folded position by the notch in the charging slide engaging a slot in the handguard (FIGURE 11).

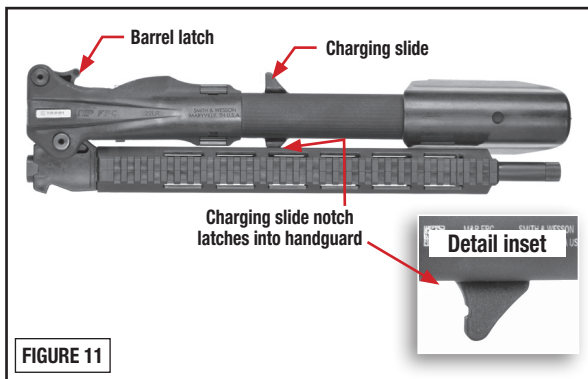

## INSPECTING THE M&P® FPC® 22LR - CONTINUED


- Verify that the chamber is empty and that the bore is clear of obstructions (FIGURE 12). If any obstruction is observed, remove it before proceeding.
- Press the magazine release and remove the magazine from the M&P FPC 22LR (FIGURE 13).
- To open the M&P FPC 22LR from its folded state, the user must draw the charging slide slightly to the rear to unlock it from the handguard and then swing the barrel away from the receiver tube (FIGURE 14).
- Swing the barrel - until the barrel latch “snaps” into position (FIGURE 15).

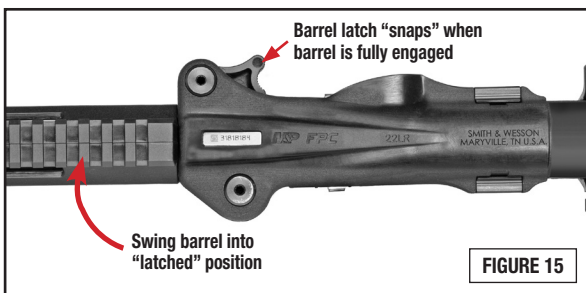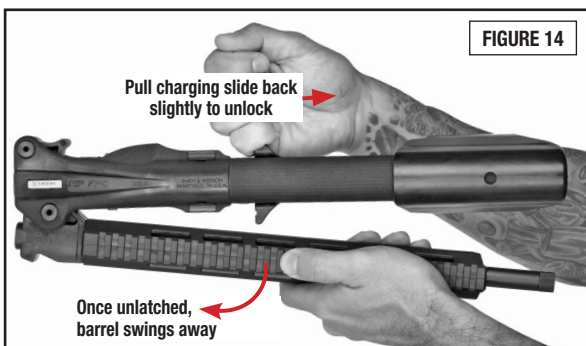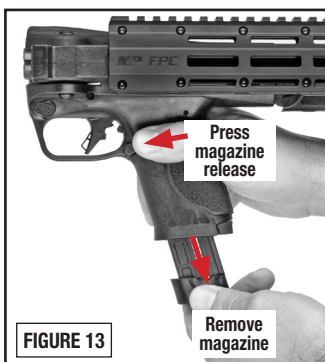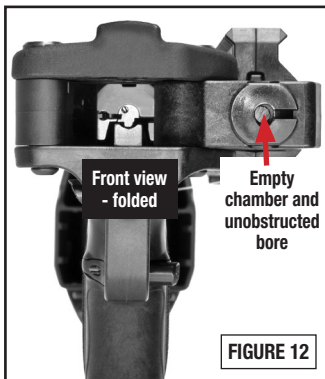


## INSPECTING THE M&P® FPC® 22LR - CONTINUED

- Press the manual safety button fully to the “SAFE” position.
- (FIGURES 16 through 19) show the manual safety in the “SAFE” and “FIRE” positions - from the front and from the bottom.

**CAUTION:** When the red band on the manual safety is visible the rifle will fire if the trigger is pulled

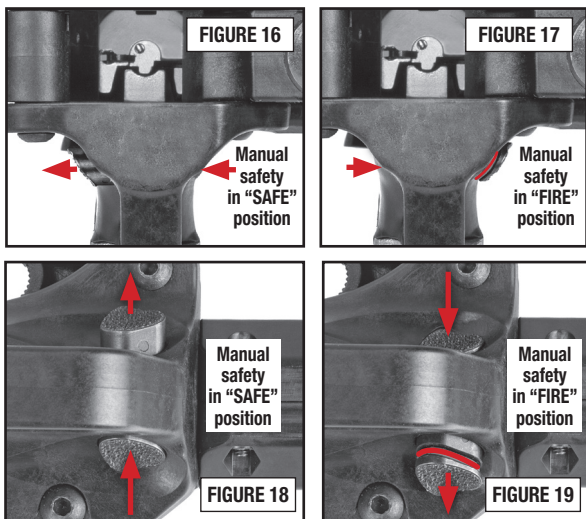


- (FIGURE 20) - Steps to lock bolt open:
  - 1) Pull the charging slide all the way back.
  - 2) Press the bolt catch up.
  - 3) Let the bolt move forward against the bolt catch to hold the bolt open. Remove your finger from the bolt catch.
  - 4) Return the charging slide forward until it “clicks” into position.

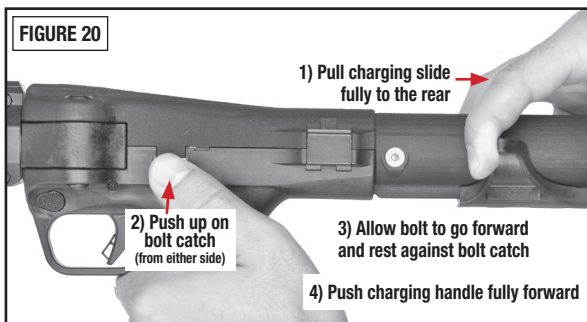


## INSPECTING THE M&P® FPC® 22LR - CONTINUED

- Look into the receiver and check the chamber and magazine well to ensure that no cartridges are present (FIGURE 21).

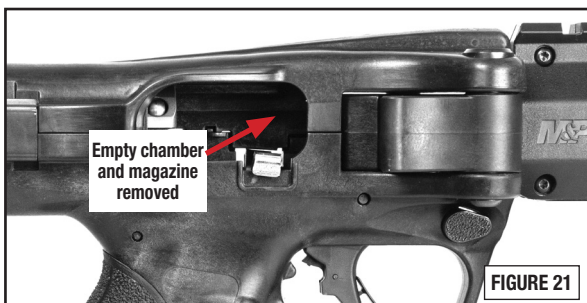

- You must follow this procedure every time a firearm leaves your hand, is cleaned, handed to you or another person, transported or stored.
- If the magazine contains any cartridges, unload the magazine by holding it with the bullet end of the cartridge pointing away from you and others and pressing each cartridge forward and out of the magazine (FIGURE 22).

**NOTE:** It helps to hold the load assist button down slightly to relieve the spring tension against each cartridge as it is pushed out.

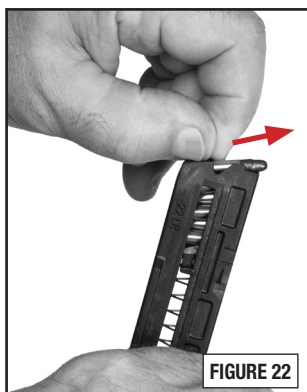

- Before using your firearm for the first time, it should be cleaned. See the Cleaning Section of this manual for details.

## PREPARATION FOR FIRING



**WARNING: FAILURE TO FOLLOW THESE FIREARM SAFETY REQUIREMENTS MAY RESULT IN PERSONAL INJURY OR DEATH TO YOU OR OTHERS AND DAMAGE TO PROPERTY.**

- **ALWAYS TREAT ALL FIREARMS AS IF THEY ARE LOADED.**
- **ALWAYS BE SURE THAT THE CHAMBER IS EMPTY, THE MAG-AZINE HAS BEEN REMOVED OR UNLOADED, AND THAT THE FIREARM IS POINTING IN A SAFE DIRECTION.**
- **ALWAYS BE SURE THAT THE BORE IS CLEAR AND THAT NO OBSTRUCTION IS PRESENT IN THE BORE PRIOR TO LOADING AND FIRING.**
- **ALWAYS KEEP FINGERS AND OTHER BODY PARTS AWAY FROM THE MUZZLE AND AWAY FROM THE EJECTION PORT.**
- **ALWAYS WEAR ADEQUATE AND PROPER HEARING PROTECTION SPECIFIED FOR FIREARM USE.** To prevent permanent damage to your hearing, you must always use hearing protection. Make sure others who are nearby are wearing hearing protection as well.
- **ALWAYS WEAR SAFETY GLASSES SPECIFIED FOR USE WITH FIREARMS.** Whether indoors or out, safety glasses should protect your eyes from the firing flash and particles associated with the discharge of ammunition. Failure to do so creates a risk of personal injury from particle or debris spitting or a ricochet.
- **ALWAYS BE ALERT AND ALWAYS FOLLOW THE SAFETY INSTRUCTIONS OF THE RANGE OFFICER.** Never shoot if you are tired, cold, or otherwise impaired in any way.
- **ALWAYS BE AWARE OF OTHER PEOPLE.** Be aware of others to ensure that persons do not accidentally walk into the line of fire.
- **THE SHOOTER (AND ALL OTHERS IN THE SHOOTING AREA) MUST ALWAYS BE IN A POSITION THAT IS OUT OF THE LINE OF FIRE AND NOT WITHIN AN AREA WHERE THEY MAY BE STRUCK BY A RICOCHET, OR PARTICLES SPITTING FROM A FIREARM, OR BY EJECTED CASES FROM THE FIREARM.**
- **NEVER SHOOT AT SURFACES THAT MAY CAUSE A RICOCHET.** Always select a place to shoot that has a safe backstop, is free from obstructions, and has no surfaces which may cause a ricochet.

## PREPARATION FOR FIRING - CONTINUED

- **NEVER FIRE RANDOMLY INTO THE SKY.** Always select a place to shoot that has a safe backstop.
- **NEVER USE ALCOHOL OR DRUGS BEFORE OR WHILE SHOOTING OR HANDLING ANY FIREARM.**

## LOADING THE M&P® FPC® 22LR



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: NEVER RELY ON MECHANICAL FEATURES ALONE. ONLY YOUR SAFE FIREARM HANDLING WILL ENSURE THE SAFE USE OF YOUR FIREARM. THIS IS YOUR RESPONSIBILITY.**



**WARNING: ALWAYS LOAD A CARTRIDGE INTO THE CHAMBER BY FEEDING IT FROM THE MAGAZINE. NEVER ATTEMPT TO LOAD A CARTRIDGE INTO THE CHAMBER OF A FOLDED M&P FPC 22LR.**

- Do not load the M&P FPC 22LR until you have read and fully understand this manual.
- Do not load the M&P FPC 22LR until you are ready to use it. Keep your finger off the trigger and outside the trigger guard until you are ready to fire.
- Never load your M&P FPC 22LR until you are sure of your target, what is beyond it, and are fully prepared to fire.
- Set the manual safety button to the "SAFE" position (FIGURE 23).
- Press the magazine release and remove the magazine from the firearm (FIGURE 24).

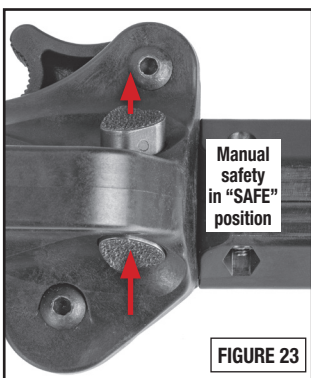


FIGURE 23


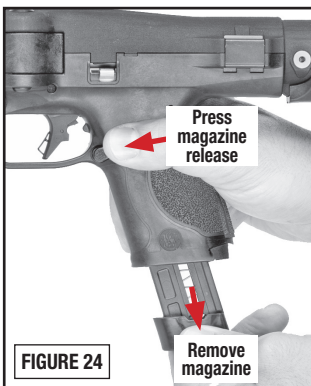


FIGURE 24


## LOADING THE M&P® FPC® 22 LR - CONTINUED

- Pull the charging slide all the way back and then press the bolt catch up. Let the bolt move forward against the bolt catch to hold the bolt in the open position (FIGURE 25). Remove your fingers from the bolt catch. Return the charging slide fully forward until it “clicks” into its forward position.

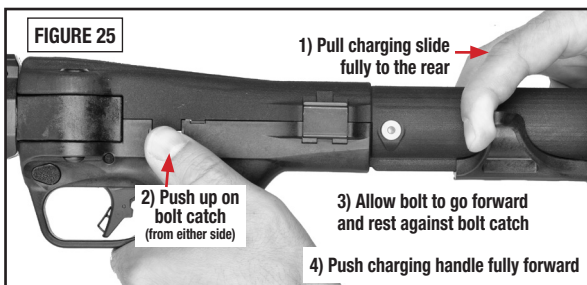

- Smith & Wesson has provided you with magazine(s) designed to operate with your specific model and caliber of firearm. While the magazine may be able to be inserted into another model firearm, it will function properly only in the specific model(s) for which it was designed.

- Orient the magazine as shown (FIGURE 26). Place a cartridge between the lips of the magazine with the bullet forward. While holding the load assist button down, press the cartridge down and back until it is held in place by the magazine lips. Slide the next cartridge in on top of the previous cartridge and repeat until the desired number is loaded.


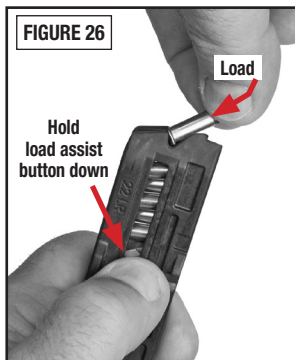


- With the bullet end of the cartridge pointing forward (FIGURE 27), insert the loaded magazine into the magazine well until it is locked securely in place. Check that it is locked into place by putting some downward pressure on magazine floor plate.



## LOADING THE M&P® FPC® 22 LR - CONTINUED

- Keep the muzzle pointing in a safe direction. Grasp the charging slide and draw it rearward to disengage the bolt catch (FIGURE 28). Once the bolt catch disengages, release the charging slide and allow the bolt to move forward freely (FIGURE 29). This will feed a cartridge from the magazine into the chamber. The firearm is now loaded and will fire if the manual safety button is set to “FIRE” and the trigger is pulled.

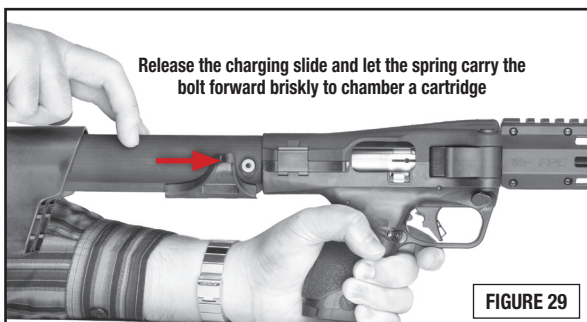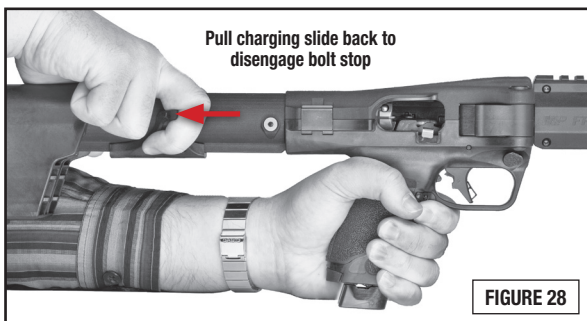

**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION WHEN YOU RELEASE THE BOLT.**



**WARNING: IF THE CARTRIDGE FAILS TO STRIP FROM THE MAGAZINE OR FULLY SEAT INTO THE CHAMBER, IMMEDIATELY STOP THE LOADING PROCESS. PLACE THE SAFETY IN THE “SAFE” POSITION, REMOVE THE MAGAZINE, LOCK THE ACTION OPEN, AND VERIFY THAT THE CHAMBER IS EMPTY. REFER TO THE “INSPECTING YOUR FIREARM” SECTION OF THIS MANUAL (PAGE 14).**



**WARNING: ALWAYS LOAD A CARTRIDGE INTO THE CHAMBER BY FEEDING IT FROM THE MAGAZINE. NEVER ATTEMPT TO LOAD THE FIREARM BY INSERTING A CARTRIDGE INTO THE CHAMBER DIRECTLY. FAILURE TO FOLLOW THIS WARNING CAN RESULT IN INJURY OR DEATH TO THE SHOOTER OR OTHERS.**

## LOADING THE M&P® FPC® 22 LR - CONTINUED



**WARNING: THE M&P FPC 22LR WILL FIRE WITH THE MAG-AZINE REMOVED FROM THE FIREARM. KEEP YOUR FINGER OFF THE TRIGGER AND OUTSIDE THE TRIGGER GUARD UNTIL YOU HAVE MADE THE COMMITMENT TO FIRE.**

## FIRING THE M&P® FPC® 22LR



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**




**WARNING: WEAR EYE AND HEARING PROTECTION SPECIFIED FOR FIREARM USE EVERY TIME YOU DISCHARGE YOUR FIREARM. MAKE SURE OTHERS IN THE VICINITY OF WHERE YOU WILL BE SHOOTING DO SO AS WELL.**



**WARNING: MAINTAIN ADEQUATE CLEARANCE BETWEEN THE OPERATOR'S FACE AND CHARGING SLIDE HANDLE DURING FIRING. THE CHARGING SLIDE HANDLE MAY CONTACT A USER'S FACE AND CAUSE INJURY DURING RECOIL IF ADEQUATE CLEARANCE AND A FIRM GRIP ARE NOT MAINTAINED.**




- Grasp the firearm with one hand on handguard and the other hand on the grip with your trigger finger resting along the outside of trigger guard. Raise the firearm and pull the butt stock firmly into your shoulder (FIGURE 30).

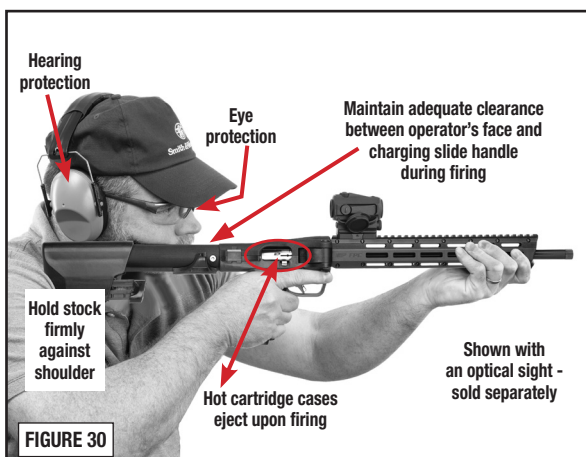

## FIRING THE M&P® FPC® 22LR - CONTINUED

- Push the manual safety button to the “FIRE” position (FIGURE 31).
- Keeping steady aim, place index finger on trigger and pull gently until the M&P FPC 22LR fires. Your firearm chambers the next cartridge immediately after firing.
- You may continue to fire by pulling and fully releasing the trigger (between shots) until the magazine and the chamber are empty.
- If you wish to stop firing before the magazine and chamber are empty, release the trigger, remove your finger from inside the trigger guard and push the manual safety button to the “SAFE” position (FIGURE 32).
- If you have fired the last cartridge from the magazine the bolt will be held to the rear so the firearm can then be reloaded by replacing the empty magazine with a full one.

The chamber can also be inspected when the bolt is open to ensure that it is empty (FIGURE 33).

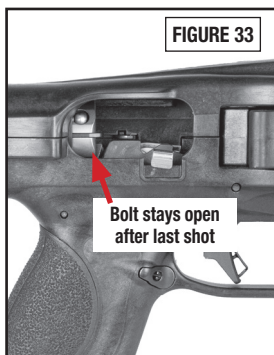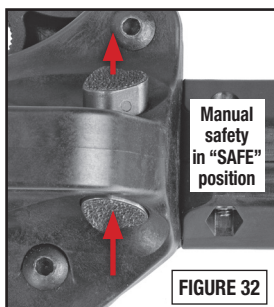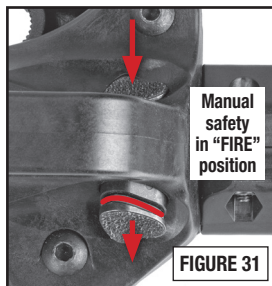

## HANGFIRES AND MISFIRES



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: WEAR EYE AND HEARING PROTECTION SPECIFIED FOR USE WITH FIREARMS WHEN FIRING AND WHEN CLEARING MISFIRES OR MISFEEDS.**





**WARNING: KEEP YOUR FACE A SAFE DISTANCE FROM THE EJECTION PORT WHEN CLEARING A CARTRIDGE. IF A CARTRIDGE IGNITES WHILE BEING CLEARED FROM THE FIREARM, INJURY OR DEATH MAY RESULT.**



**WARNING: IF YOUR FIREARM GIVES ANY INDICATION THAT IT IS NOT PERFORMING PROPERLY OR THE OPERATION OF YOUR FIREARM HAS CHANGED “THE WAY IT FEELS OR SOUNDS”, STOP FIRING. MAKE SURE THE FIREARM IS POINTED IN A SAFE DIRECTION, UNLOAD THE FIREARM AND HAVE IT INSPECTED AND TEST FIRED BY A GUNSMITH QUALIFIED TO PERFORM SERVICES ON SMITH & WESSON FIREARMS.**



**NOTE:** In the case of either a hangfire or misfire, keep the muzzle pointed in a safe direction and your finger off the trigger.

- Wait 60 seconds, then put the manual safety button into the “SAFE” position (FIGURE 34).
- Press the magazine release button and remove the magazine from the firearm (FIGURE 35).
- Proceed to clear the unfired cartridge from the chamber.
- A **HANGFIRE** is described as a noticeable delay between the impact of the firing pin on the primer (rim) of the cartridge and the actual discharge of the firearm. This is generally caused by defective or damaged ammunition.

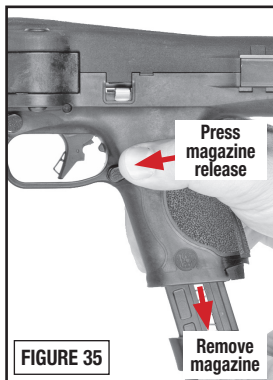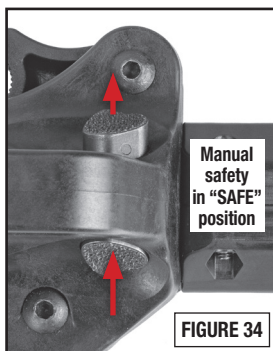

## HANGFIRES AND MISFIRES - CONTINUED

- If a cartridge has delayed ignition and goes off after a delay, with the firearm pointed in a safe direction, the magazine should be removed and the firearm should be unloaded. The remainder of similar ammunition should be inspected to determine if it has been contaminated or damaged and dealt with accordingly.
- A **MISFIRE** is the failure of the chambered cartridge to fire at all after the trigger has been pulled. This is generally caused by defective or damaged ammunition, or a dirty or fouled firearm.
- A light primer strike (on the rim of the cartridge) caused by a dirty or fouled firearm can lead to misfires. If a light indent on the primer (on the rim of the cartridge) of a misfire is noted, unload the firearm and clean it as instructed in the Cleaning and Maintenance Section of this manual. If the cartridge does not go off, the “dud” cartridge needs to be removed from the firearm.
- Push the manual safety button into the “SAFE” position (FIGURE 36).
- Pull the charging slide all the way back (FIGURE 37), then press the bolt catch up (from either side). Let the bolt move forward against the bolt catch to lock the bolt open. Return the charging slide fully forward.

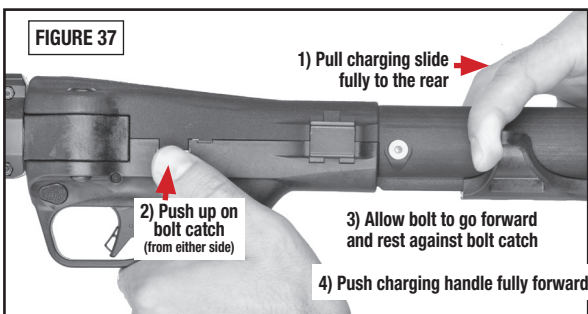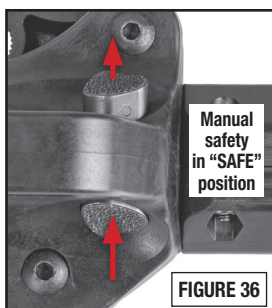

- Visually check the chamber and magazine well to ensure that no cartridges are present (FIGURE 38).
- The firearm should be inspected and cleaned before returning it to use.



## HANGFIRES AND MISFIRES - CONTINUED

- The ammunition should be inspected. Damaged or defective ammunition should not be used.
- Dispose of damaged and defective cartridge(s) in a method specifically approved for live cartridge disposal.

## CLEARING A MISFEED/JAM





**WARNING: KEEP YOUR FACE A SAFE DISTANCE FROM THE EJECTION PORT WHEN CLEARING A MISFED/JAMMED CARTRIDGE. A CARTRIDGE MAY IGNITE IF THE PRIMER (RIM) OF THE CARTRIDGE IS STRUCK WITH SUFFICIENT FORCE. IF A CARTRIDGE IGNITES WHILE BEING CLEARED FROM THE FIRE-ARM, INJURY OR DEATH MAY RESULT.**

**NOTE:** Any auto-loading firearm may, on occasion, fail to feed a cartridge properly from the magazine and into the chamber. If this should occur proceed with the following:


### TO CLEAR A MISFEED/JAM:

- Make certain that the muzzle is pointed in a safe direction.
- Push the manual safety button into the “SAFE” position (FIGURE 39).
- Press the magazine release and remove the magazine from the M&P FPC 22LR (FIGURE 40).

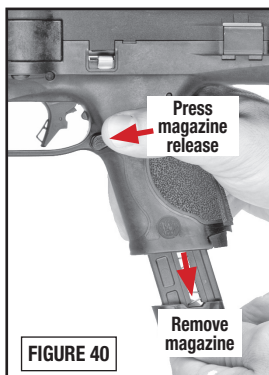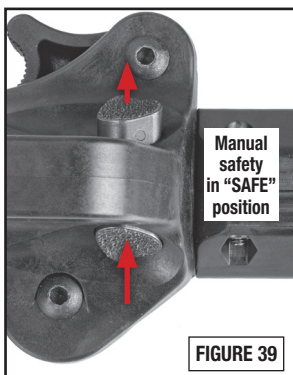

## CLEARING A MISFEED/JAM - CONTINUED

- Pull the charging slide back and engage the bolt stop to lock the bolt open (FIGURE 41).

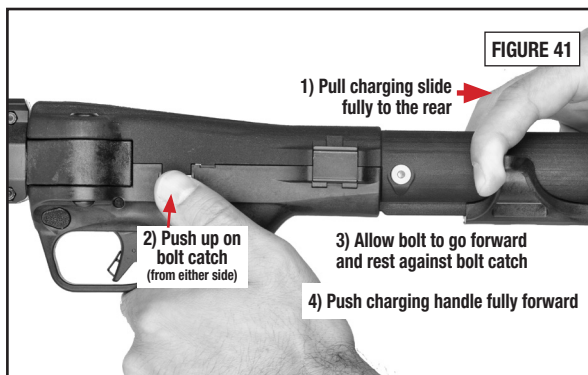

**NOTE:** Drawing the bolt fully to the rear should allow clearance for the jammed cartridge to fall free and clear of the firearm.

- It may be necessary to manually remove a jammed cartridge. When attempting to clear a jam manually, use only wood “tools”, such as a pointed dowel or a pencil, and use extreme care to avoid striking the primer (rim) of the cartridge.
- Visually check to make sure all cartridges have been removed from the firearm chamber and magazine well (FIGURE 42).
- Once the misfed cartridge is cleared, proceed to load the firearm as instructed in the Loading Section of this manual.
- Dispose of damaged and defective cartridge(s) in a method specifically approved for live cartridge disposal.





## UNLOADING THE M&P® FPC® 22LR




**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**

- Push the manual safety button into the “SAFE” position (FIGURE 43).
- Press magazine release and remove magazine from the M&P FPC 22LR (FIGURE 44).

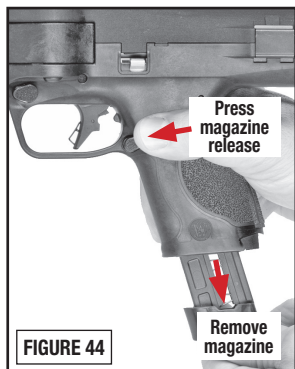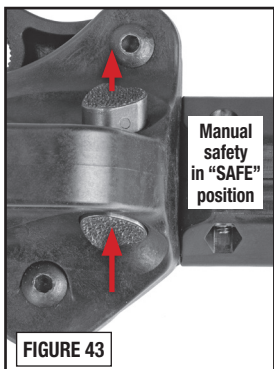

- Pull the charging slide all the way back and then press the bolt catch up. Let the bolt move forward against the bolt catch to hold the bolt in the open position (FIGURE 45). Remove your fingers from the bolt catch. Return the charging slide fully forward until it “clicks” into its forward position.

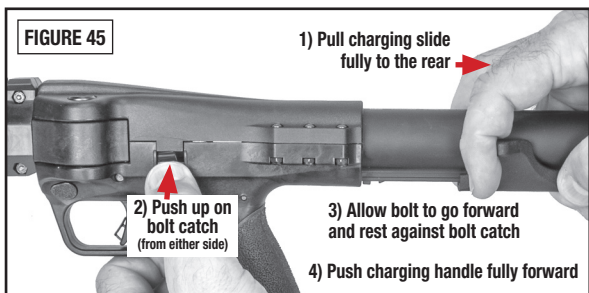


- Return the charging slide fully forward to the “closed” position.
- Look into the chamber through ejection port to ensure that the chamber and magazine well are empty (FIGURE 46).



## UNLOADING THE M&P® FPC® 22LR - CONTINUED

- Remove remaining live cartridges from the magazine by sliding them forward and out of the magazine (FIGURE 47).

**NOTE:** It helps to hold the load assist button down slightly to relieve the spring tension against each cartridge as it is pushed out.

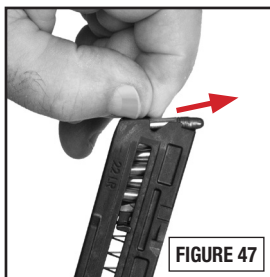

- Collect live ammunition for safe storage and spent cartridge cases for disposal.

## DISASSEMBLY/FIELD STRIPPING



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: ALWAYS ENSURE THAT THE FIREARM IS UNLOADED BEFORE INSPECTING, DISASSEMBLING, OR ASSEMBLING.**



**WARNING: WEAR SAFETY GLASSES THAT ARE SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU DISASSEMBLE OR ASSEMBLE YOUR FIREARM.**




**WARNING: NEVER DISASSEMBLE YOUR FIREARM BEYOND THE DISASSEMBLY/FIELD STRIPPING PROCEDURE DETAILED IN THIS MANUAL, OR PERFORM ANY MAINTENANCE, ADJUSTMENT, OR SERVICE NOT SPECIFIED. IMPROPER DISASSEMBLY AND REASSEMBLY OF YOUR FIREARM MAY LEAD TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS, AND DAMAGE TO PROPERTY.**



**WARNING: NEVER MODIFY OR SWAP OUT ANY OF THE COMPONENTS OF YOUR SMITH & WESSON® FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL OR IN AN OFFICIAL SMITH & WESSON ACCESSORY PARTS MANUAL OR INSTRUCTION SHEET. CHANGES NOT COVERED IN THIS MANUAL OR IN A SMITH & WESSON INSTRUCTION SHEET WILL REQUIRE A QUALIFIED GUNSMITH (OR FACTORY-TRAINED PERSONNEL) USING FACTORY-AUTHORIZED PARTS. IMPROPER MANIPULATION OF ANY COMPONENT OF THE FIREARM MAY RESULT IN FAULTY FUNCTIONING, POSSIBLY LEADING TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS, AND DAMAGE TO PROPERTY.**



## DISASSEMBLY/FIELD STRIPPING - CONTINUED

- Push the manual safety button to the “SAFE” position (FIGURE 48).
- Point the muzzle in a safe direction. Make sure your finger is off the trigger and out of the trigger guard. Depress the magazine release and remove the magazine (FIGURE 49).

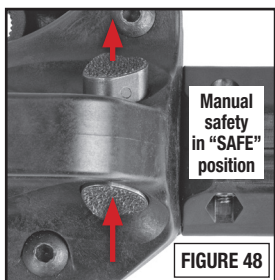




With the muzzle pointing in a safe direction, and your finger off the trigger and outside the trigger guard, grasp the charging slide, and while holding the firearm in an upright position, briskly draw the charging slide fully rearward in order to extract any cartridge from the barrel chamber and clear it from the firearm (FIGURE 50).

- Allow the bolt to close fully forward so the bolt is in the “closed” position by releasing the the charging slide from it's reaward position and allowing the spring force to close the bolt (fully forward) (FIGURE 51).

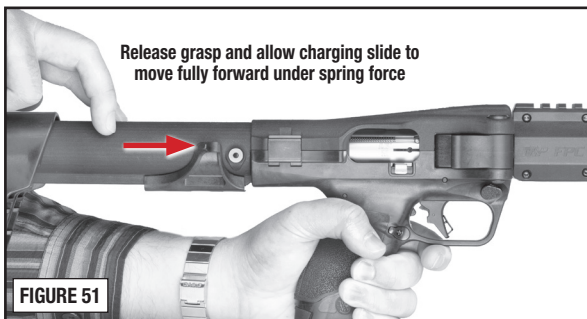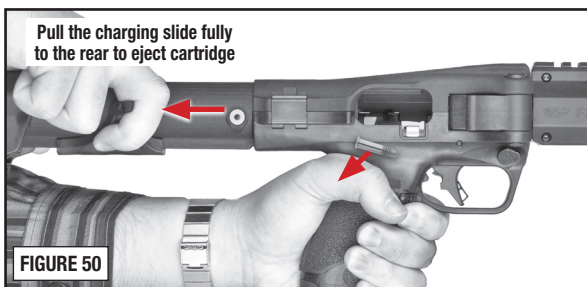

## DISASSEMBLY/FIELD STRIPPING - CONTINUED

- Remove any magazine(s) from the in-stock storage cavities (FIGURE 52).
- Place the butt stock against a stable surface (such as your thigh) and press down firmly (FIGURE 53). While holding downward pressure on the stock, pull the stock retainer latch (the round center button) out and allow the receiver tube to move upward (against spring pressure) when the stock latch disengages from the receiver tube.
- You can now continue to pull the stock (and related parts) off the receiver tube (FIGURE 54).

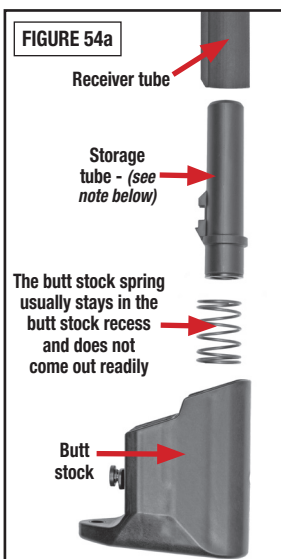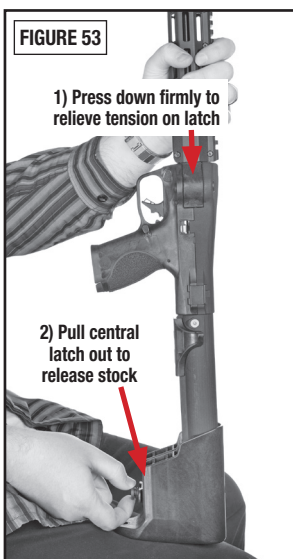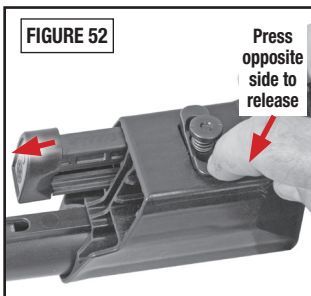

**NOTE:** The buffer spring inside the stock recess doesn't usually fall out on its own. It can be reinstalled in either direction into the stock if it does come out.



**NOTE:** The storage tube inside the M&P FPC 22LR receiver tube has a removable cap (FIGURE 54b).



## DISASSEMBLY/FIELD STRIPPING - CONTINUED





**NOTE:** The cross pin can be pushed out in either direction. If you don't have a drift of the right configuration, the grip tool works well to push the cross pin out of the receiver tube.

- Turn the grip tool 90° and withdraw it from the grip (FIGURE 55) if you want to use it in place of a drift to disassemble and reassemble your M&P FPC 22LR.
- Locate the cross pin (FIGURE 56).
- Press the cross pin out of the receiver tube (FIGURE 57) and set it aside (from either side).
- Draw the charging slide fully rearward (FIGURES 58 and 59).

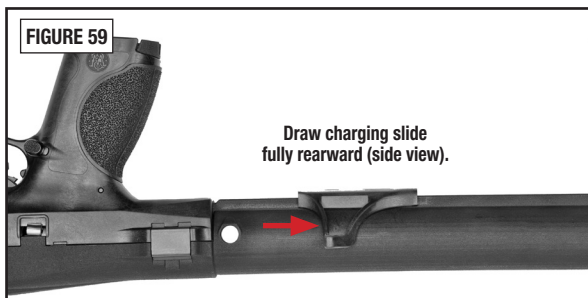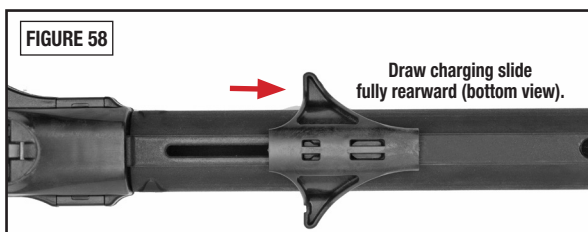





## DISASSEMBLY/FIELD STRIPPING - CONTINUED

- Lift the charging slide off the receiver tube (FIGURE 60).
- Using a drift or the grip tool, reach into the receiver tube and push the bolt assembly back, toward the open end until you can grasp it to complete the bolt removal process (reference FIGURES 61 through 64).

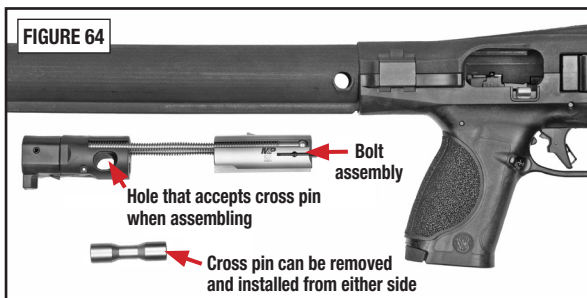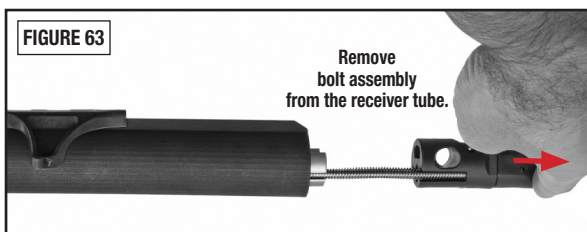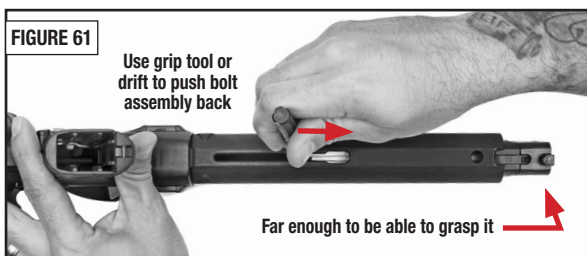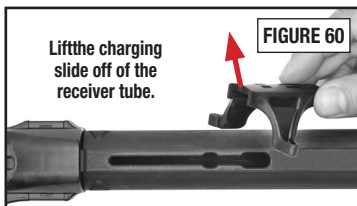

## DISASSEMBLY/FIELD STRIPPING - CONTINUED

- If you want to clean the recesses of the bolt assembly, compress each recoil spring and tip the guide rod out of its cutout (FIGURES 65 through 68).

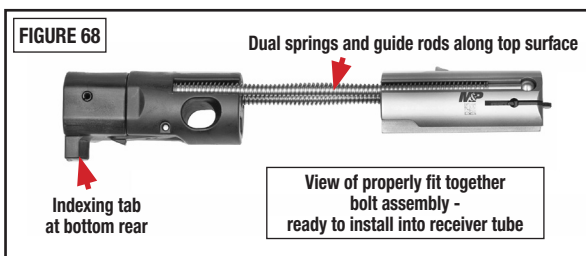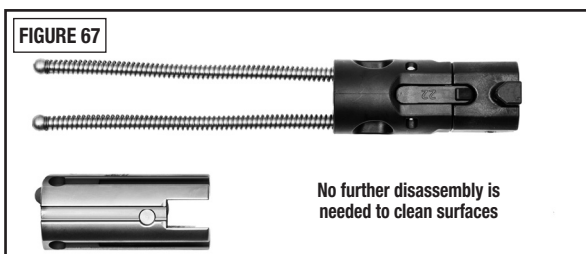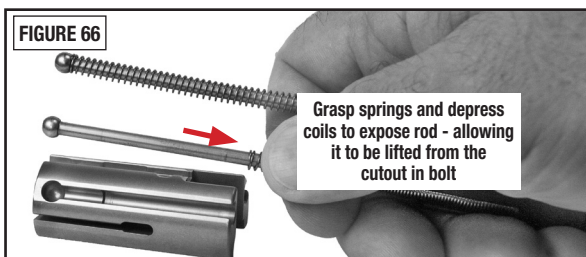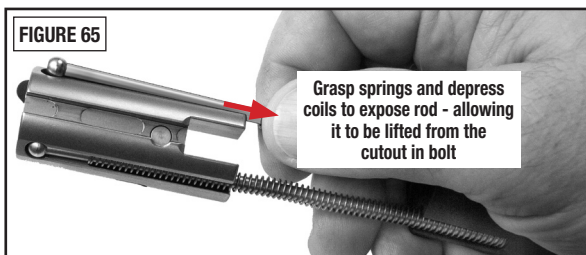

- After cleaning, reassemble the bolt assembly by compressing each recoil spring and tipping the guide rod back into its cutout.
- The M&P FPC 22 LR is now field-stripped for cleaning.

**CAUTION:** Never dry-fire the M&P FPC 22 LR when it is disassembled. Damage to the internal parts may result.

## ASSEMBLY



**WARNING: ALWAYS FOLLOW THE ASSEMBLY INSTRUCTIONS EXACTLY. NEVER DO ANYTHING BEYOND WHAT YOU ARE SPECIFICALLY INSTRUCTED TO DO IN THIS MANUAL.**



**WARNING: WEAR SAFETY GLASSES THAT ARE SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU DISASSEMBLE OR ASSEMBLE YOUR FIREARM.**



**WARNING: NEVER MODIFY OR SWAP OUT ANY OF THE COMPONENTS OF YOUR SMITH & WESSON® FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL OR IN AN OFFICIAL SMITH & WESSON ACCESSORY PARTS MANUAL OR INSTRUCTION SHEET. CHANGES NOT COVERED IN THIS MANUAL OR IN A SMITH & WESSON INSTRUCTION SHEET WILL REQUIRE A QUALIFIED GUNSMITH (OR FACTORY-TRAINED PERSONNEL) USING FACTORY-AUTHORIZED PARTS. IMPROPER MANIPULATION OF ANY COMPONENT OF THE FIREARM MAY RESULT IN FAULTY FUNCTIONING, POSSIBLY LEADING TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS, AND DAMAGE TO PROPERTY.**

- Lightly lubricate all metal parts by wiping them with a cloth dampened with a quality firearm oil. Remove excess oil. Leave a light film of oil on all metal parts of your M&P FPC 22LR - inside and out.
- Assemble your M&P FPC 22LR in the reverse order that you took it apart.
- Slide the bolt assembly with the bolt oriented as shown (FIGURE 69) into the receiver tube (FIGURE 70).

Front and top of bolt assembly

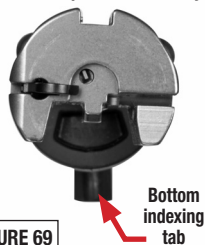


FIGURE 69

Rear view of receiver tube

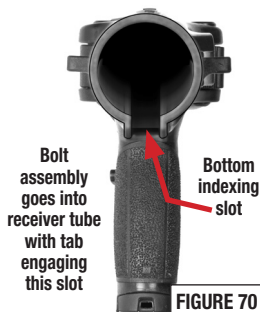



FIGURE 70

## ASSEMBLY - CONTINUED

**NOTE:** Prior to installing the bolt assembly into the receiver tube, the hammer inside the M&P FPC 22LR receiver must be in the “cocked” position. If the hammer is forward in the “fired” position (FIGURE 71), it must be pushed back into the “cocked” position.


FIGURE 71

Cutaway view of the M&P FPC 22LR showing the positions of the hammer

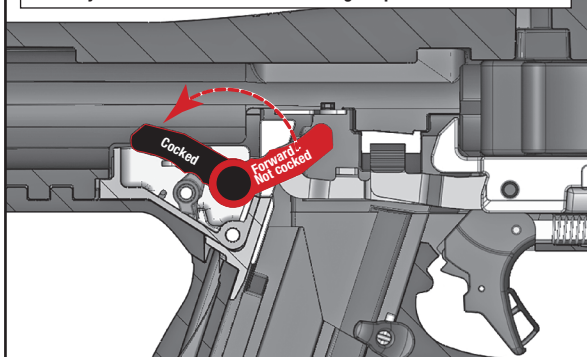

**To Cock the Hammer:** Start with the M&P FPC 22LR in the folded position. Reach through the front of the receiver with a long, rigid tool (like a brass rod or a screwdriver) to recock the hammer (FIGURE 72).


FIGURE 72

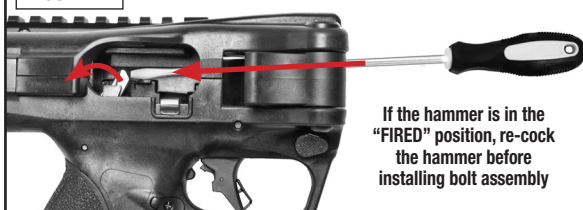

If the hammer is in the “FIRED” position, re-cock the hammer before installing bolt assembly

## ASSEMBLY - CONTINUED

- Insert the bolt assembly into the receiver tube. Tilt the receiver slightly as shown, so the bolt assembly slides forward, stopping in the position shown (FIGURES 73 and 74)

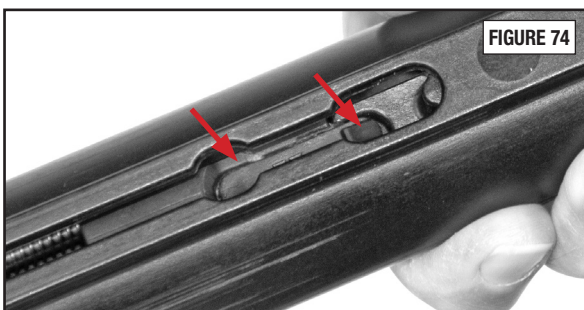

- Insert the charging slide into the wide slots (FIGURE 75).




- Insert the storage tube into the receiver tube (FIGURE 76).




## ASSEMBLY - CONTINUED


- While covering the charging slide to keep it in its track, tap the back of the storage tube, so the bolt assembly moves forward slightly (FIGURE 77).

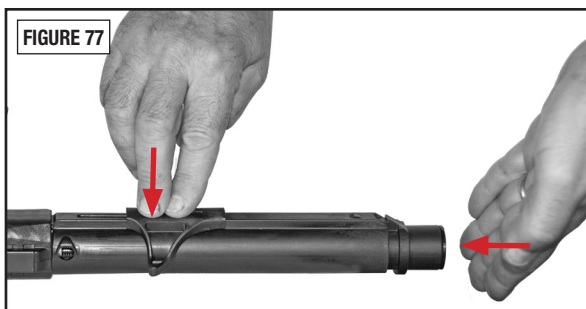

- Move the charging slide forward with a quick motion. The recoil springs (on the bolt assembly) will compress slightly, followed by the bolt surging forward (FIGURE 78).

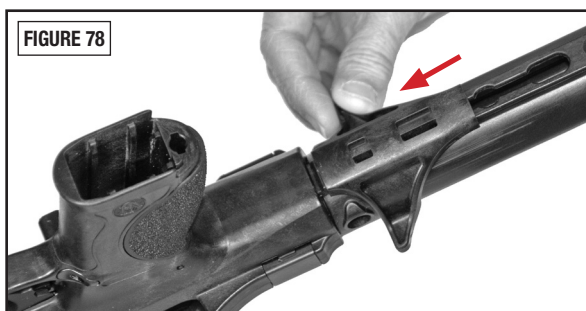


**NOTE:** The wide, center area of the bolt assembly hole will accept passage of the cross pin when it is aligned correctly (FIGURE 79).

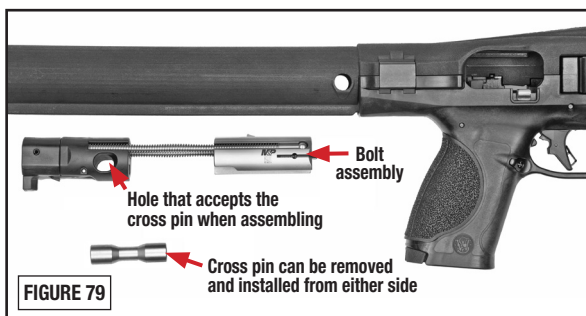


## ASSEMBLY - CONTINUED

- Install the recoil lug/cross pin through the recoil buffer in the bolt assembly. If the buffer is not in the position shown, the grip tool can be used to align it in the hole (FIGURES 80 and 81).

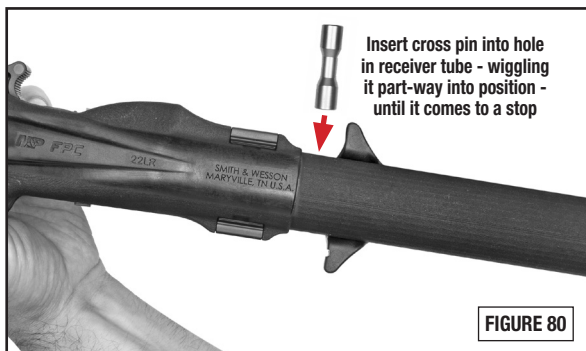


- Insert the grip tool into the hole in the cross pin. While applying pressure on the cross pin from the opposite side, wiggle the cross pin with the grip tool to align it with the receiver tube hole (FIGURE 82).

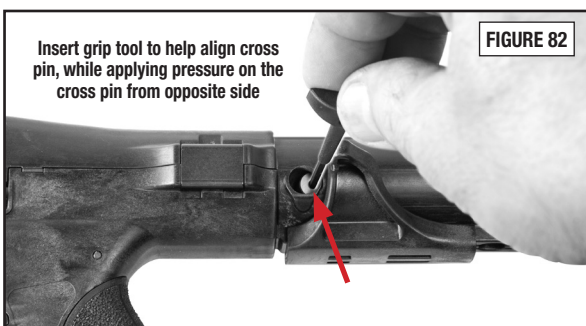


## ASSEMBLY - CONTINUED

- Center the cross pin (side to side) in the receiver tube (FIGURE 83)

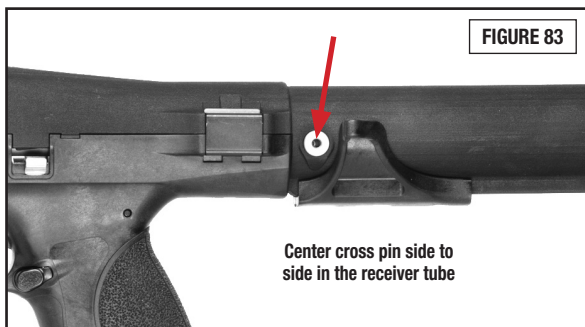

- Insert the storage tube into the receiver tube. Slide the spring onto the back of the storage tube. Slide the butt stock over the spring (FIGURE 84).

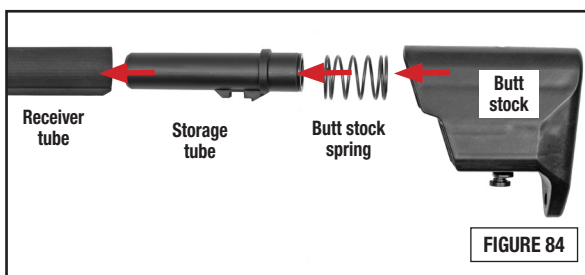

- Grasp the firearm and press the stock firmly against spring pressure until the stock latch “clicks” into place on the receiver tube (FIGURE 85).

**NOTE:** When installing the butt stock, it can be helpful to pull out on the stock latch (a little bit when the parts start to engage) to allow the parts to interface more smoothly.



## M&P® FPC® 22LR MAGAZINE




**WARNING: WEAR SAFETY GLASSES THAT ARE SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU DISASSEMBLE OR ASSEMBLE YOUR MAGAZINE.**





**WARNING: THE MAGAZINE SPRING IS UNDER PRESSURE. CONTROL THE SPRING AND FOLLOWER SO THAT THEY DO NOT FLY OUT AND CAUSE INJURY.**

### MAGAZINE DISASSEMBLY FOR CLEANING

- Use a small tool (like a punch or drift) to depress floor plate catch through the hole in the floor plate (FIGURE 86).




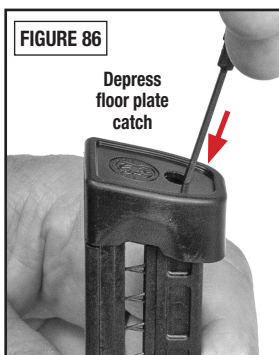


- While holding floor plate catch down against spring pressure (FIGURE 87), slowly slide the floor plate forward off of the tube, being careful to control the spring movement (FIGURE 88).

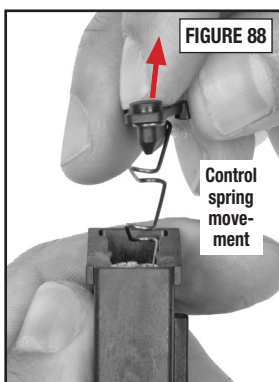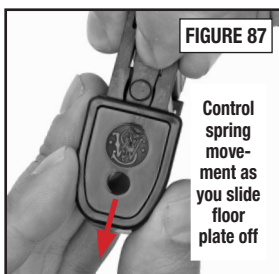


## M&P® FPC® 22LR MAGAZINE - CONTINUED

- Remove the floor plate catch, the spring and the follower out through bottom of the magazine tube. The follower also includes the load assist button that slides into a slot in the follower (FIGURES 89 through 92).

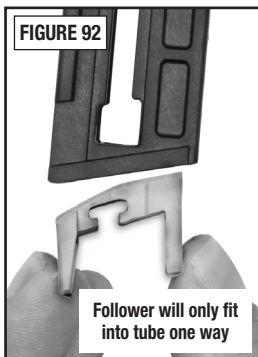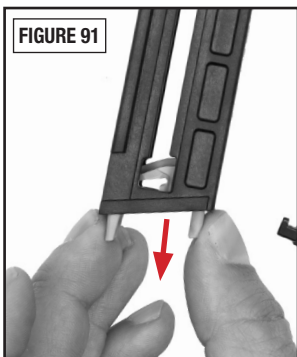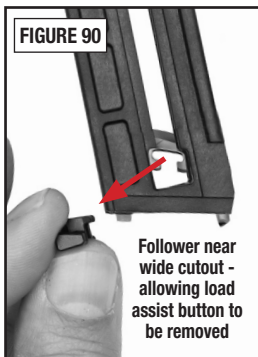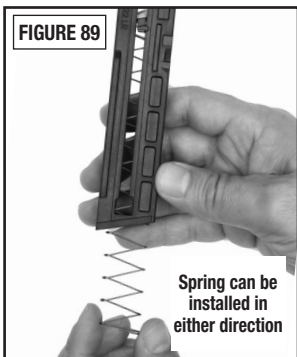



## M&P FPC 22LR MAGAZINE - CONTINUED

- (FIGURE 93) shows the parts of the magazine when disassembled.

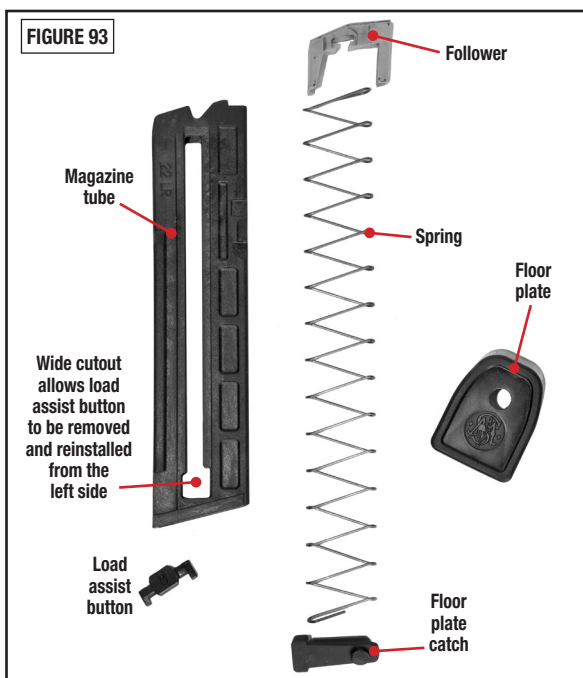

### MAGAZINE ASSEMBLY


**NOTE:** (FIGURES 94 and 95) The load assist button only comes out and goes into the follower from the left side (as viewed from the rear of the magazine).

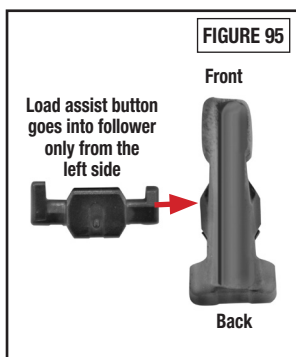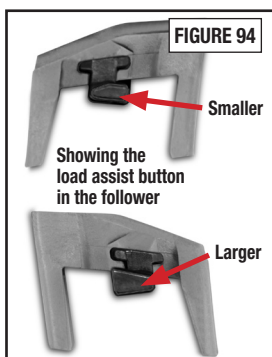

- Install the follower with the load assist button reinserted, the spring and the floor plate catch back into the tube in the same orientation as they were in when they were removed during disassembly.

## M&P FPC 22LR MAGAZINE - CONTINUED

- Holding floor plate catch in the tube against spring pressure, slide the floor plate onto the tube's base so that the projection of the floor plate catch engages the floor plate (FIGURE 96).

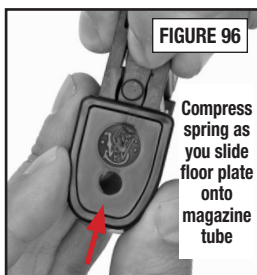

## INTERCHANGEABLE PALMSWELL GRIP INSERTS





**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: MAKE SURE THE M&P FPC 22LR IS UNLOADED BEFORE CHANGING THE INTERCHANGEABLE PALMSWELL GRIP INSERTS.**

- If the interchangeable palmswell grip insert currently on your M&P FPC 22LR does not fit your hand comfortably, you can install one of the four (4) different sizes that come with each M&P FPC 22LR (Small, Medium, Medium-Large, and Large).

- Press the magazine release and remove the magazine from the firearm to gain access to the grip tool (FIGURE 97).
- Remove the grip tool from the bottom of the grip by first rotating it ¼ turn (FIGURE 98) and then pulling it out of the frame (FIGURE 99). It only turns in one direction as shown.

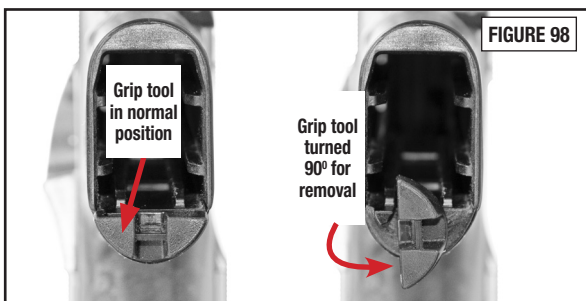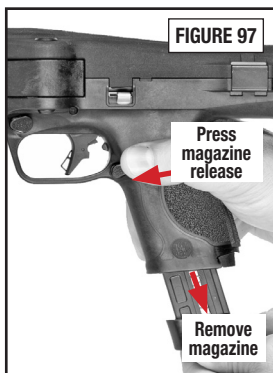


## INTERCHANGEABLE PALMSWELL GRIP INSERTS - CONT'D

- (FIGURE 100) shows the grip tool removed from the grip.



- Take the current interchangeable palmswell grip insert off the M&P FPC 22LR (FIGURE 101).
- Replace the interchangeable palmswell insert with the one you prefer, insert the tab at the top into the slot in the grip frame (FIGURE 102) before tipping the insert against the grip frame.
- Once the interchangeable palmswell insert is in position, replace the grip tool into the grip.
- Replace the empty magazine back into the M&P FPC 22LR.

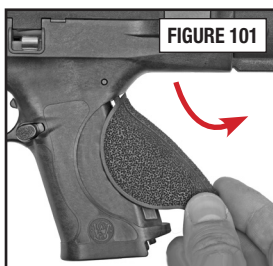

**CAUTION:** Some solvents may cause damage to the interchangeable palmswell insert material. See the “Cleaning and Maintenance” Section of this manual for more information.

**NOTE:** The M&P FPC 22LR comes with four interchangeable palmswell grip inserts: Small (S), Medium (M), Medium-Large (ML), and Large (L) sizes. The size of each is marked on the interchangeable palmswell grip inserts (FIGURE 103).



## REVERSIBLE MAGAZINE RELEASE

**NOTE:** The magazine release can be installed to operate from the right or left side. To reverse the magazine release, follow these instructions:



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**




**WARNING: ENSURE THAT YOUR FIREARM IS UNLOADED BEFORE BEGINNING TO DISASSEMBLE IT.**



**WARNING: WEAR SAFETY GLASSES EVERY TIME YOU DISASSEMBLE OR ASSEMBLE YOUR FIREARM AND ATTEMPT CLEANING, MAINTENANCE OR ADJUSTMENT.**

- (FIGURE 104) shows the magazine release plunger's location while in the M&P FPC 22LR.

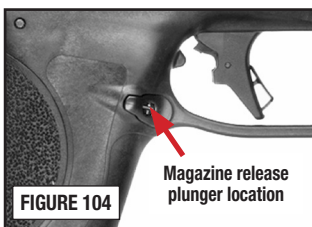


- (FIGURE 105) shows the magazine release removed from the M&P FPC 22LR for clarity.



- Press the magazine release and remove the magazine from the M&P FPC 22LR.

- When installing the magazine release, the textured side (FIGURE 106) should be on the side of the M&P FPC 22LR that you want to push on to release the magazine from the M&P FPC 22LR.

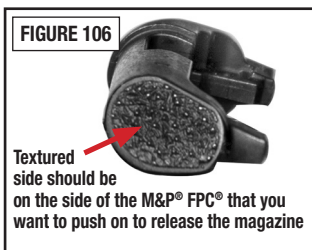


- Use a small screwdriver to depress the locking screw (a small amount of force is all that is required) and turn it (FIGURE 107).



**NOTE:** When switching sides of operation of the magazine release, the textured side must be inserted into the frame opening first.

## REVERSIBLE MAGAZINE RELEASE - CONTINUED


**NOTE:** The magazine release plunger only needs to be pushed in slightly (using a small screwdriver) in order to turn it - for either unlocking it - or locking it back into the frame. Follow the guidelines in (FIGURE 108) to remove and install the magazine release. One-quarter turn is all that is required, in either direction, to unlock and lock.

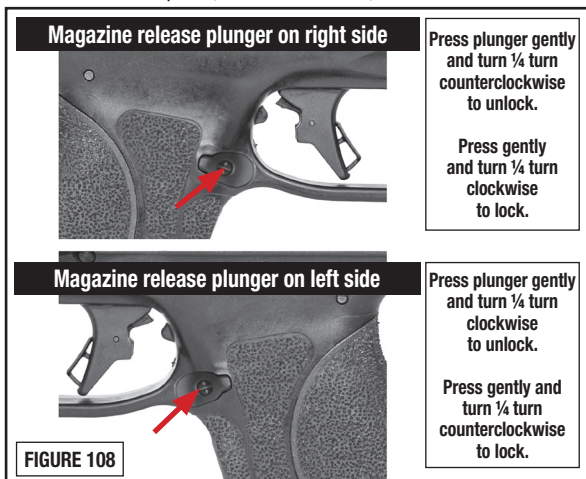

- Once the magazine release is installed, insert an unloaded magazine into the M&P FPC 22LR and check the magazine release for proper function.

**NOTE:** If the magazine release plunger is pressed too hard or turned too far, it may become disassembled. Reassemble the parts (FIGURE 109) before inserting the magazine release back into the M&P FPC 22LR. A pair of needle nose pliers may help in the assembly process.

**WARNING: THE MAGAZINE RELEASE PLUNGER SPRING IS UNDER PRESSURE IN THE ASSEMBLED MAGAZINE RELEASE. WHEN DISASSEMBLING OR ASSEMBLING, CONTROL THE SPRING SO IT DOESN'T FLY OUT AND CAUSE INJURY.**


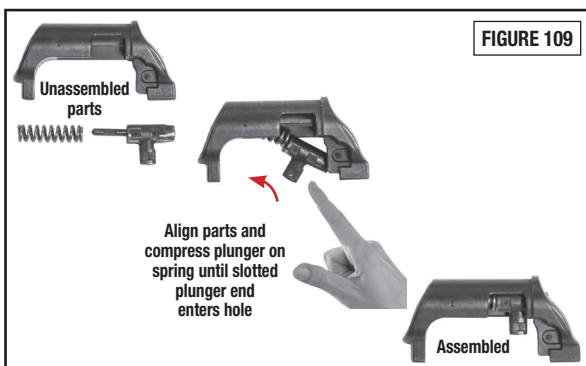


## M&P® FPC® 22LR IN-STOCK MAGAZINE STORAGE



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**

- The stock of the M&P FPC 22LR has the capacity to hold two magazines (FIGURE 110).
- To latch a magazine into the stock, simply insert the magazine into the cavity until it “clicks” into position.
- The stock has a lever with two tabs (FIGURE 111).
- The user can depress a tab to release the magazine from the opposite side (FIGURE 112).
- The “plunger” in the center of the magazine tabs is used to remove the stock from the M&P FPC 22LR (FIGURE 113). See the Disassembly Section of this manual for details (page 29).

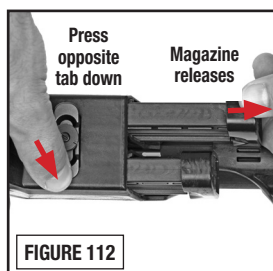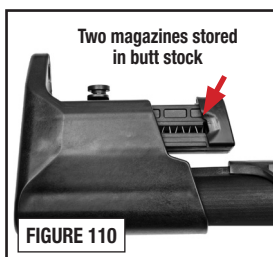

## FOLDING THE M&P® FPC® 22LR



**WARNING: ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION AND ENSURE THAT YOUR M&P FPC 22LR IS UNLOADED (MAGAZINE AND CHAMBER) BEFORE BEGINNING TO FOLD IT.**



**WARNING: BE CAREFUL WHEN FOLDING OR UNFOLDING THE M&P FPC 22LR TO AVOID PINCH POINTS.**

- To fold the M&P FPC 22LR for cleaning, transport or storage, first unload the firearm and close the bolt.

- The latch that locks the M&P FPC 22LR open is located on the right side (as viewed from the rear) (FIGURE 114).




- Press the latch forward in a rocking motion (FIGURE 114), while drawing the barrel to the left in a controlled manner. Release pressure on the latch once the barrel is tipped to the left.

- Continue to fold the barrel to the left in a sweeping motion (FIGURE 115).



### TO LOCK THE M&P FPC 22LR IN THE FOLDED POSITION:

- Pull the charging slide back slightly (FIGURE 116).
- Close the parts against each other while holding the charging slide back slightly (FIGURE 116).
- Release the charging slide to engage the slot in the handguard in the folded position.
- To open the M&P FPC 22LR from its folded state, the user must draw the charging slide slightly to the rear to unlock it from the handguard and then swing the barrel away from the receiver tube.

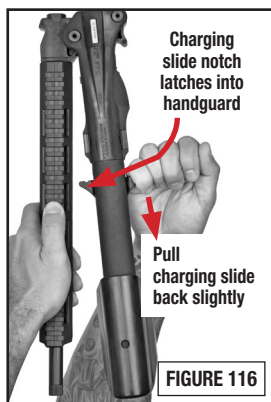

## INSTALLATION OF OPTICS



**WARNING: ALWAYS ENSURE THAT THE FIREARM IS UNLOADED BEFORE INSTALLING A SCOPE, OPTICAL SIGHT, OR ANY OTHER ACCESSORIES. FAILURE TO DO THIS CAN RESULT IN INJURY OR DEATH TO THE SHOOTER OR OTHERS, AND DAMAGE TO PROPERTY.**


- We recommend that you have a competent gunsmith install your scope and mount.
- Scopes and optical sights have varying lengths of recommended eye relief. You need to choose a combination that allows for adequate clearance between the scope and your eyebrow. Follow the instructions supplied with the scope and rings for proper installation.



**WARNING: A SCOPE OR OPTICAL SIGHT WHICH IS NOT SECURELY MOUNTED MAY BECOME DETACHED UPON RECOIL OF THE FIREARM. IF IT BECOMES DETACHED IT MAY FLY BACK AND STRIKE THE SHOOTER OR A BYSTANDER AND CAUSE INJURY. OBSERVE THE CONDITION OF ALL THE SCOPE MOUNT SCREWS AFTER FIRING. IF THE MOUNTING SCREWS SHOW SIGNS OF LOOSENING, DO NOT FIRE THE GUN AGAIN UNTIL THE SCREWS ARE TIGHTENED IN ACCORDANCE WITH THE MANUAL PROVIDED WITH THE OPTIC, OPTIC MOUNT, AND/OR SCREWS.**



**WARNING: FIRING A FIREARM WITH YOUR EYE TOO CLOSE TO THE EYE PIECE OF A SCOPE OR OPTICAL SIGHT, OR FAILING TO HOLD THE FIREARM SECURELY AGAINST RECOIL, MAY RESULT IN PERSONAL INJURY INCLUDING, BUT NOT LIMITED TO, BLINDNESS. MAINTAIN ADEQUATE CLEARANCE BETWEEN ANY SIGHTING DEVICE THAT IS INSTALLED AND OPERATOR'S EYE (FIGURE 117).**

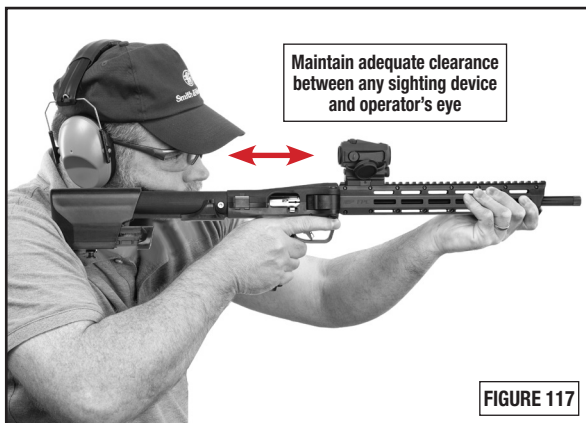

## CLEANING AND MAINTENANCE



**WARNING: ENSURE THAT THE FIREARM IS UNLOADED BEFORE BEGINNING TO CLEAN IT. ALWAYS KEEP THE MUZZLE OF THE FIREARM POINTED IN A SAFE DIRECTION.**



**WARNING: WEAR SAFETY GLASSES THAT ARE SPECIFIED FOR USE WITH FIREARMS EVERY TIME YOU ASSEMBLE OR DISASSEMBLE YOUR FIREARM AND ATTEMPT CLEANING OR MAINTENANCE.**



**WARNING: NEVER DISASSEMBLE YOUR FIREARM BEYOND THE FIELD STRIPPING/DISASSEMBLY PROCEDURE DETAILED IN THIS MANUAL, OR PERFORM ANY MAINTENANCE, ADJUSTMENT, OR SERVICE NOT SPECIFIED. IMPROPER DISASSEMBLY AND REASSEMBLY OF YOUR FIREARM MAY LEAD TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS AND DAMAGE TO PROPERTY.**



**WARNING: NEVER MODIFY OR SWAP OUT ANY OF THE COMPONENTS OF YOUR SMITH & WESSON® FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL OR IN AN OFFICIAL SMITH & WESSON ACCESSORY PARTS MANUAL OR INSTRUCTION SHEET. CHANGES NOT COVERED IN THIS MANUAL OR IN A SMITH & WESSON INSTRUCTION SHEET WILL REQUIRE A QUALIFIED GUNSMITH (OR FACTORY-TRAINED PERSONNEL) USING FACTORY-AUTHORIZED PARTS. IMPROPER MANIPULATION OF ANY COMPONENT OF THE FIREARM MAY RESULT IN FAULTY FUNCTIONING, POSSIBLY LEADING TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS AND DAMAGE TO PROPERTY.**



**WARNING: ALWAYS HAVE ADEQUATE VENTILATION. CLEANING FIREARMS IN POORLY VENTILATED AREAS, DISCHARGING FIREARMS, OR HANDLING AMMUNITION MAY RESULT IN EXPOSURE TO LEAD AND OTHER SUBSTANCES KNOWN TO CAUSE BIRTH DEFECTS, REPRODUCTIVE HARM, AND OTHER SERIOUS PHYSICAL INJURY. WASH HANDS THOROUGHLY AFTER EXPOSURE.**

- Before using your firearm for the first time, it should be cleaned.
- Your firearm was treated at the factory with either a preservative or oil to protect it against corrosion during shipping and storage.
- Preservative and oil should be wiped from the bore, chamber and exposed areas using a clean swab or patch before using the firearm.



---

## CLEANING AND MAINTENANCE - CONTINUED

---

- Purchase cleaning supplies from your firearms dealer that are specifically designated for your type and caliber of firearm. Many suppliers offer these in kit form for your convenience.

**CAUTION:** Always follow the instructions provided with your firearm cleaner and firearm lubricant.

**CAUTION:** Some cleaners can cause damage to your firearm. You should avoid prolonged solvent immersion and prolonged ultrasonic cleaning of your firearm. Choice of solvent should be restricted to those products specifically developed for firearms maintenance. Damage to a firearm's finish may occur if these cautions are ignored. Ammoniated solvents or other strong alkaline solvents should not be used on any Smith & Wesson® firearm. Cleaning is essential to ensure the proper functioning of your firearm.

**NOTE:** A basic firearm cleaning kit should include: a brass bore brush and a cleaning jag of appropriate size for the bore being cleaned, high-quality gun cleaning solvent and gun oil/lubricant, cotton cleaning patches, and a cleaning rod that is long enough to push the brush and jag completely through the barrel.

- Remove excessive firing residue from the bore and chamber using a properly fitted brass brush dipped in gun cleaning solvent. Finish the bore cleaning process by running a dry cotton cloth patch through the bore to remove residue and solvent.
- Clean the exterior of the firearm using a non-abrasive cleaning cloth.
- After cleaning, lightly coat the metal parts, internal and external, with a high quality gun oil.
- Whenever your firearm has been exposed to sand, dust, extreme humidity, water, or other adverse conditions, it must be cleaned and lubricated.
- If your firearm will be used in a cold climate, be sure to use an oil of an appropriate weight so that it will not congeal in cold temperatures, causing the interaction of important parts to be slowed or halted.



---

## CLEANING AND MAINTENANCE - CONTINUED

---

### MAINTENANCE BEFORE STORAGE

- When storing, do not encase your firearm in anything that will attract or hold moisture, for example, leather or heavy cloth. Also, do not store guns with a plug inserted in the barrel for this can be a contributing factor to moisture accumulation. If your firearm is to be stored for an extended period, the bore, chamber, and internal working mechanism should be oiled with a high quality lubricating oil or preservative intended for firearms. The external working mechanisms and barrel should be coated with an anti-rust oil. Before using your firearm again, be sure to clean it. Every time you clean your firearm, check it for signs of wear. If excessive wear is noted, do not use the firearm. Return it to Smith & Wesson® for service or have it checked by a qualified gunsmith.

---

## LIMITED WARRANTY

### For Owners Within The United States

---



This warranty is granted by Smith & Wesson Inc. This warranty is effective from the date of purchase and applies to the original owner of the firearm. With respect to such firearms, this warranty supersedes any and all other warranties.

Smith & Wesson firearms are warranted to be free from defects in material and workmanship. Any such defects of which Smith & Wesson receives written notice within one year from the date of purchase by the original owner, will be remedied by Smith & Wesson without charge within a reasonable time after such notification and delivery of the firearm as provided below.

Warranty claims (in writing) and the firearm concerned should be delivered to Smith & Wesson's Customer Service Department, 1852 Proffitt Springs Rd., Maryville, TN 37801. In addition, a copy of the bill of sale in the owner's name, or a copy of ATF Form 4473 indicating date of purchase must be included. It is important that the owner comply with all applicable federal, state and local laws and regulations in the shipment of firearms to Smith & Wesson.

**NOTE:** See the "Contact and Shipping Information" section (page 55) for further details regarding returns.

## LIMITED WARRANTY - CONTINUED

Warranty claims should state the model and serial number of the firearm concerned and the description of the difficulty experienced. It is recommended that shipments be insured by the owner, since Smith & Wesson will accept no responsibility for loss or damage in transit. Transportation and insurance charges for return to owner will be paid by Smith & Wesson if the claim is covered by the warranty.

UNDER NO CIRCUMSTANCES SHALL SMITH & WESSON BE RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES WITH RESPECT TO ECONOMIC LOSS, INJURY, DEATH OR PROPERTY DAMAGE, WHETHER AS A RESULT OF BREACH OF THIS WARRANTY, NEGLIGENCE OR OTHERWISE.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Smith & Wesson will not be responsible for:

- Defects or malfunctions resulting from careless handling, unauthorized adjustments or modifications made or attempted by anyone other than a qualified gunsmith following Smith & Wesson authorized procedures, or failure to follow the disassembly instructions in the Smith & Wesson Safety and Instruction Manual.
- Use of defective or improper ammunition, corrosion, neglect, abuse, ordinary wear and tear, or unreasonable use.
- Criminal misuse, negligence or use under the influence of drugs or alcohol.

Smith & Wesson's Lifetime Service Policy begins after the warranty period has expired. Smith & Wesson will repair, without charge, for the lifetime of the original owner, any Smith & Wesson firearm, that is found to have a defect in material or workmanship. Eligibility for this Lifetime Service Policy requires returning the Product Registration Card within 30 days of purchase. The Lifetime Service Policy covers functional defects; it does not include the firearm's finish, grips, magazines, or sights. The Lifetime Service Policy is in addition to and not an extension of the Smith & Wesson Warranty. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

**NOTE:** All liability is excluded in the event that the instructions in the Smith & Wesson Safety and Instruction Manual are not observed.

## CONTACT AND SHIPPING INFORMATION For Owners In The United States

**NOTE:** A Return Merchandise Authorization (**RMA**) is the first step in the process of returning a product in order to receive a repair, replacement, or refund. Please contact Smith & Wesson's Customer Service Dept. (via e-mail: [qa@smith-wesson.com](mailto:qa@smith-wesson.com) or by phone at 800-331-0852 ext. 4125) to obtain authorization to return your firearm so we can process it quickly and efficiently. The RMA number that is supplied by Smith & Wesson must be displayed on the outside of the returned product's packaging; returns without an RMA number will be routed differently which will result in delayed processing.

The Return Merchandise Authorization (**RMA**) process allows Smith & Wesson an opportunity to try to diagnose and correct a customer's concerns with the product (such as ammunition problems) before it is returned. Accordingly, please contact us before returning your Smith & Wesson firearm.

### CONTACT CUSTOMER SERVICE

Tel: 800-331-0852 ext. 4125

E-mail: [qa@smith-wesson.com](mailto:qa@smith-wesson.com)

### RETURNS - FOR SERVICE ALL SMITH & WESSON FIREARMS

Smith & Wesson  
1852 Proffitt Springs Rd.  
Maryville, TN 37801

Should your Smith & Wesson firearm require service, it should be returned to the Smith & Wesson factory.

- Call or e-mail the Customer Service Dept. for authorization and shipping instructions.

**IMPORTANT NOTE:** The shipping label must bear the name and address of the Individual or FFL dealer shipping the firearm. Do not use a label with someone else's name and address. Never give your label to another person. If you would like to work with your local FFL to ship your firearm on your behalf, they must contact the Customer Service Department before shipping the firearm.

- Ensure that the firearm is unloaded.
- Do not attempt to ship a firearm via US Postal Service; only federally licensed dealers may ship a firearm by US Postal Service.
- DO NOT SHIP ANY AMMUNITION.

## CONTACT AND SHIPPING - CONTINUED

- Enclose a letter which includes your full name and address (no P.O. Boxes, please), daytime telephone number, e-mail address, the serial number of the firearm, and details of the problem experienced (stating the brand and type of ammunition used when the problem occurred) or work desired.
- Record the serial number before shipping, in case you wish to check on the repair status of your firearm.
- Please remove all custom parts and accessories, such as special sights and optics from your firearm before returning.
- Place the firearm in its original case or in a similarly secure container and pack it securely.
- The package must NOT bear any markings which indicate the identity of the contents.
- It is most important that you comply with federal, state, and local laws and regulations. The following guidelines are meant to help, but you must seek assistance from the appropriate authorities if necessary.
- If your firearm must be replaced, it may be necessary to ship the replacement to a dealer rather than directly to you. You will be requested to furnish a signed FFL (Federal Firearms License) from your dealer in such an instance.
- Warranty repair work will begin upon receipt and examination of the firearm. In the case of repairs or work not covered by the warranty, a quotation covering the cost of the work plus round trip transportation charges will be sent to you. Repairs or modification will be scheduled upon receipt of payment.



**WARNING: NEVER MODIFY OR SWAP OUT ANY OF THE COMPONENTS OF YOUR SMITH & WESSON FIREARM UNLESS SPECIFICALLY INSTRUCTED TO DO SO IN THIS MANUAL OR IN AN OFFICIAL SMITH & WESSON ACCESSORY PARTS MANUAL OR INSTRUCTION SHEET. CHANGES NOT COVERED IN THIS MANUAL OR IN A SMITH & WESSON INSTRUCTION SHEET WILL REQUIRE A QUALIFIED GUNSMITH (OR FACTORY-TRAINED PERSONNEL) USING FACTORY-AUTHORIZED PARTS. IMPROPER MANIPULATION OF ANY COMPONENT OF THE FIREARM MAY RESULT IN FAULTY FUNCTIONING, POSSIBLY LEADING TO INJURY OR DEATH OF THE SHOOTER AND/OR BYSTANDERS, AND DAMAGE TO PROPERTY. SOME PARTS MUST BE INSTALLED BY A GUNSMITH QUALIFIED TO PERFORM SERVICE ON SMITH & WESSON FIREARMS, EVEN IF THE ALTERATION SEEMS SIMPLE.**

## BATTERY WARNINGS



**WARNING: IF A BATTERY OPERATED ACCESSORY OR ATTACHMENT (I.E. LASER, OPTICAL SIGHT OR FLASHLIGHT, ETC.) IS SUPPLIED OR USED WITH THIS FIREARM, YOU MUST ADHERE TO THE FOLLOWING WARNINGS AND INSTRUCTIONS.**



**WARNING: KEEP BATTERIES AWAY FROM CHILDREN. THERE IS A CHEMICAL BURN HAZARD ASSOCIATED WITH BATTERIES.**



**WARNING: IF A NEW OR USED LITHIUM BUTTON/COIN CELL BATTERY IS SWALLOWED OR ENTERS THE BODY, IT CAN CAUSE SEVERE INTERNAL BURNS AND CAN LEAD TO DEATH IN AS LITTLE AS 2 HOURS. ALWAYS COMPLETELY SECURE THE BATTERY COMPARTMENT. IF THE BATTERY COMPARTMENT DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT, REMOVE THE BATTERIES, AND KEEP IT AWAY FROM CHILDREN. IF YOU THINK BATTERIES MIGHT HAVE BEEN SWALLOWED OR PLACED INSIDE ANY PART OF THE BODY, SEEK IMMEDIATE MEDICAL ATTENTION.**

### WARNING

- **INGESTION HAZARD:** This product may contain a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- When used correctly, batteries provide a safe and dependable source of portable power. However, misuse or abuse may result in leakage, fire, or explosion.
- Batteries can explode or leak and cause burns if installed backwards, disassembled, charged, or exposed to water, fire or high temperature.
- Ensure the batteries are installed correctly according to polarity (+ and -). Always take care to install your batteries correctly observing the “+” and “-” marks on the battery and the device.
- Always replace the whole set of batteries at one time, taking care not to mix old and new batteries, or batteries of different types.
- Store unused batteries in their original packaging and away from metal objects that may short-circuit them.
- Remove discharged batteries from equipment promptly to avoid possible damage from leakage.
- Never dispose of batteries in fire. Failure to observe this precaution may result in an explosion.

## BATTERY WARNINGS - CONTINUED

- The batteries are supplied in a charged state and are not designed for recharging. Recharging may cause leakage, fire, or explosion.
- Remove and immediately recycle or properly dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.
- Even used batteries may cause injury or death.
- Call a local poison control center for treatment information.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above manufacturer's specified temperature rating or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.

| <b>Listed Below Are Some Battery Designations That May Be Encountered in Typical Gun Sights, Lasers and Flashlights</b><br>(see any WARNINGS and instructions that accompanied your particular accessory for details) | <b>Voltage of Battery</b> |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| AA                                                                                                                                                                                                                    | 1.5 volt                  |
| AAA                                                                                                                                                                                                                   | 1.5 volt                  |
| CR123A                                                                                                                                                                                                                | 3 volt                    |
| CR2 3                                                                                                                                                                                                                 | 3 volt                    |
| CR2016                                                                                                                                                                                                                | 3 volt                    |
| CR2032                                                                                                                                                                                                                | 3 volt                    |
| CR1632                                                                                                                                                                                                                | 3 volt                    |
| CR-1/3n                                                                                                                                                                                                               | 3 volt                    |
| LR44                                                                                                                                                                                                                  | 1.5 volt                  |
| LMS 1431/1441                                                                                                                                                                                                         | 1.55 volt                 |



---

## CUSTOM SERVICE

---

We understand that Smith & Wesson® gun owners may want to enhance their guns with custom gunsmithing, refinishing, or accessories. Our gunsmiths offer specialized services and exclusive products to enhance your shooting experience.

Accessories for your Smith & Wesson® firearm are available from your local Smith & Wesson® Authorized Dealer, or directly from Smith & Wesson®.

Contact the Customer Service Department at 1-800-331-0852, extension 4125 for information about these services.

When ordering directly from the factory, please provide the following information:

- Model Number
- Dash Number
- Serial Number
- Approximate date of purchase
- Complete Return Address
- VISA/Discover/MasterCard Number & Expiration Date
- For Foreign Orders Only - A Fax Number or E-mail Address

---

## PATENT INFORMATION


---

- This product may be covered by one or more patents. Visit <https://www.smith-wesson.com/company/virtual-patent-marking> for virtual patent information.



**Smith & Wesson®**

**EMPOWERING AMERICANS®**

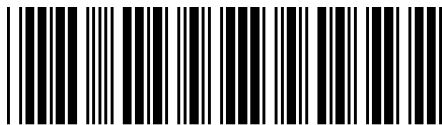

**3017147**

**Smith & Wesson**  
**1852 Proffitt Springs Rd., Maryville, TN 37801**  
**1-800-331-0852 • Fax: 1-413-747-3317**  
**[www.smith-wesson.com](http://www.smith-wesson.com)**

**p/n 3017147**

**REV: M&P\_FPC22LR-061025**